

High-Performance Inverter
Instruction Manual

TOSVERT VF-A5

Toshiba Tosvert VF-A5 user manual

200V	0.4 ~ 90kW
400V	0.75~280kW

Toshiba Schneider Inverter Corporation

NOTICE

1. Make sure that this Instruction Manual is delivered to the end user of the inverter unit.
2. Read this manual before installing or operating the inverter unit, and store it in a safe place for reference.

Safety Precautions

This inverter is for driving a 3-phase motor, and must not be used for other applications.

[I] Always observe the following items to prevent electrical shock.


1. Do not touch charged parts such as the terminal block while the CHARGE lamp is lit. A charge will still be present in the electrolytic capacitors, and therefore, touching these areas may result in an electrical shock. Always turn inverter's input power off before wiring the motor terminals. Wait at least five minutes after the "CHARGE" lamp has gone out, and then confirm that the capacitors have fully discharged by using a tester, etc., that can measure high-voltage DC.

2. Do not touch or insert a rod or any other item into the inverter while power is applied (there are high voltage areas on the PCB), as this may lead to electrical shock or inverter damage.

(When operating with the cover removed, charged areas will be exposed, so always install the unit inside a panel so that it cannot be easily touched.)

Never attempt to modify the inverter unit.

3. Ground the unit's G/E terminal and the motor. (Electric shock may occur due to leakage currents.)

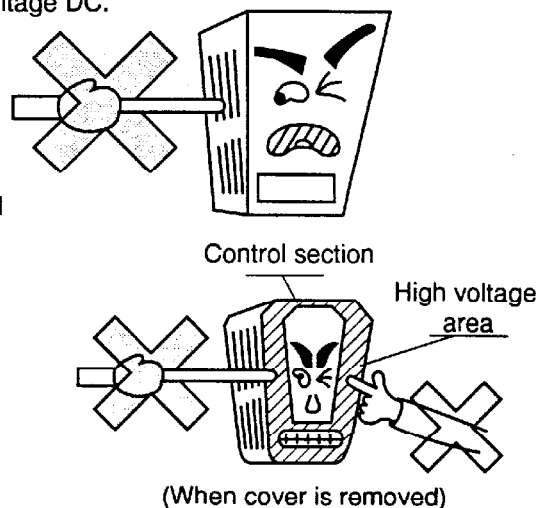

[II] Retry function

1. This inverter has a "retry function" that automatically resets the unit when a fault trip occurs. Observe the following points when this function is selected.

Even if the inverter has fault tripped, take care to not get caught in the motor or equipment. When the "retry function" is selected, the inverter will automatically start after the designated time. (Refer to page 83.)

Take special care when an overload trip occurs, as the "retry function" may activate after a delay of up to 5min.

[III] Observe the following points to prevent fire.

1. Confirm the inverter's rating nameplate, and connect a 3-phase input power source within the rated range to the R/L1, S/L2, and T/L3 power source terminals.

If an incorrectly-rated power source is connected to the inverter, such as when a 400V power source is connected to a 200V inverter, the inverter's internal components may explode.

2. No fuse is contained in the inverter, so install a suitable non-fuse breaker (MCCB) on the inverter's input power source.

(Refer to Table 5-1 on page 14 for Examples of selecting equipment for wiring.)

[IV] Refer to the following chapters for other precautions.

Chapter 1	Acceptance Inspection and Precautions	Page 1
Chapter 2	Installation Precautions	Page 2
Chapter 4	Operation Precautions	Page 5
Chapter 5	Wiring Precautions	Page 9
Chapter 12	Maintenance and Inspection	Page 110

Introduction

Thank you for purchasing the Toshiba High-Performance Inverter "TOSVERT VF-A5".

The "VF-A5" inverter has many various functions built in for use with a 3-phase induction motor. All Operations of this unit are done via the easy-to-use keyboard-type operation panel. A blind function (Refer to page 55) that displays only those functions required for operation, and an edit function (Refer to page 34) that automatically collects parameters that differ from their default settings are used to make basic operation and setting easier. Advanced control technology features (sensorless vector control, feedback control, current limit, retry, and stall prevention functions) are built in, so that the inverter will not trip easily, and will provide unparalleled reliability.

Please read this manual thoroughly before use to properly understand the correct use of the outstanding functions of the "VF-A5".

This manual should be stored by the user of the "VF-A5" for reference during maintenance and inspection.

Symbols used in this manual are as shown below. Understand them before reading this manual.

1. LED display character codes: Refer to page 131
2. To indicate a parameter display on the operation panel in this manual:

Example ^{Parameter} PCC1

To indicate a panel key:

Example ENTER key

The box is not used when indicating parameter group names and parameter settings.

Note) The box is not used when displaying parameters in tables.

Table of Contents

1. Acceptance Inspection and Precautions	1
2. Installation Precautions	2
3. External View and Component Names	3
4. Operation Precautions	5
5. Wiring Precautions	9
6. Standard Connections	15
6.1 Standard Connection Example	15
6.2 Terminal Functions	18
7. Operation and Adjustment	32
7.1 Operation Panel	32
7.2 Basic Operation	33
7.3 Operation Modes	37
7.3.1 Standard Monitor Mode	37
7.3.2 Status Monitor Mode	40
7.3.3 Setting Monitor Mode	41
7.3.4 JOG Run Mode	44
7.4 Operation Mode Selection	45
7.4.1 Operation Mode Changeover	45
7.4.2 Run/Stop Command [<i>CNOd</i> in <i>Gr.Ut</i>]	45
7.4.3 Frequency Command Source Setting Function [<i>FNOd</i> in <i>Gr.Ut</i>]	45
7.4.4 Parameter Setting Function [<i>PNOd</i> in <i>Gr.Ut</i>]	46
7.4.5 Standard Parameter Value Reset Function [<i>tSP</i> in <i>Gr.Ut</i>]	47
7.4.6 Selection of Stopping Method from the Panel	48
7.4.7 Fault Reset	49
8. Parameter Explanations	50
1. <i>Gr.F</i> V/f settings	50
V/f pattern ①	51
V/f pattern ②	52
Acceleration/deceleration time settings	53
Acc/Dec patterns, Acc/Dec pattern adjustment, Low/High	54
Blind function selection	55
Upper limit/lower limit frequencies	56
Reverse operation disable selection	56


2.	<i>Gr.Fn</i>	Acc/dec #1 and #2 selection	57
		Panel feedback control	58
		Panel reset selection	58
		Fundamental parameter switching	59
3.	<i>Gr.St</i>	Input terminal selections ①	60
		Input terminal selections ②	61
		Output terminal selections ①	62
		Output terminal selections ②	63
		Low speed, acceleration/deceleration complete, speed reach output signals	64
		Input/output terminal response time selections	65
		Commercial power/INV switching	66
		Output terminal pulse frequency selection	67
		RR input special function selection	67
4.	<i>Gr.SC</i>	Run frequency control	68
		Start-up frequency/End frequency	69
		Jump frequencies	70
		PWM carrier frequency	71
5.	<i>Gr.SF</i>	Preset speed operation ①	72
		Preset speed operation ②	73
		Frequency priority selections	74
		Jogging operation	75
		Frequency setting input signal characteristics	76
6.	<i>Gr.Pr</i>	Electronic thermal protection ①	77
		Electronic thermal protection ②	78
		DC injection braking settings ①	79
		DC injection braking settings ②	81
		Dynamic braking operation	82
		Emergency stop	83
		Retry function	83
		Regeneration power ride-through control	84
		Auto-restart	84
		Trip function selections	85
		Output short circuit detection selection	85
		Fault trip saving	86
7.	<i>Gr.Pt</i>	Pattern run ①	87
		Pattern run ②	88

8. Cr.UE	Panel operation permission	89
	Industrial application parameters selection	90
	Standard setting mode selection	90
	Command/frequency mode selections	91
	Status monitor display selections	92
	Blind function selection	92
	Units settings	93
9. Cr.AN	Meter adjustment parameters	94
9. Device Specifications	95
9.1	Model and Standard Specifications	95
9.2	External Dimensions	99
10. Options	103
11. Error Displays and Troubleshooting	105
11.1	Inverter Trip Causes and Remedies	105
11.2	Other Fault Troubleshooting	109
12. Maintenance and Inspection	110
12.1	Preventive Maintenance and Periodic Inspection	110
12.2	Component Replacement	111
13. Storage	112
14. Warranty	112
Appendix		
Appendix Table 1.	Parameter list	113
Appendix Table 2.	List of trips	129
Appendix Figure 1.	Input terminal information	130
Appendix Figure 2.	Output terminal information	130
Appendix Figure 3.	Character codes	131
Appendix Table 3.	Standard default settings per inverter capacity	132
Appendix Table 4.	Industrial application parameters	133
Appendix Table 5.	Changed settings memo	150


1. Acceptance Inspection and Precautions

- (1) Confirm that the unit has not been damaged during shipment.
- (2) Confirm that the model noted on the rating nameplate is as ordered.
- (3) When storing the unit temporarily after purchase, store it in dust-free, well-ventilated location.
- (4) Special care is taken during product manufacturing, packaging, and shipment. If any problems are discovered, however, please contact your dealer immediately.

Details of rating nameplate

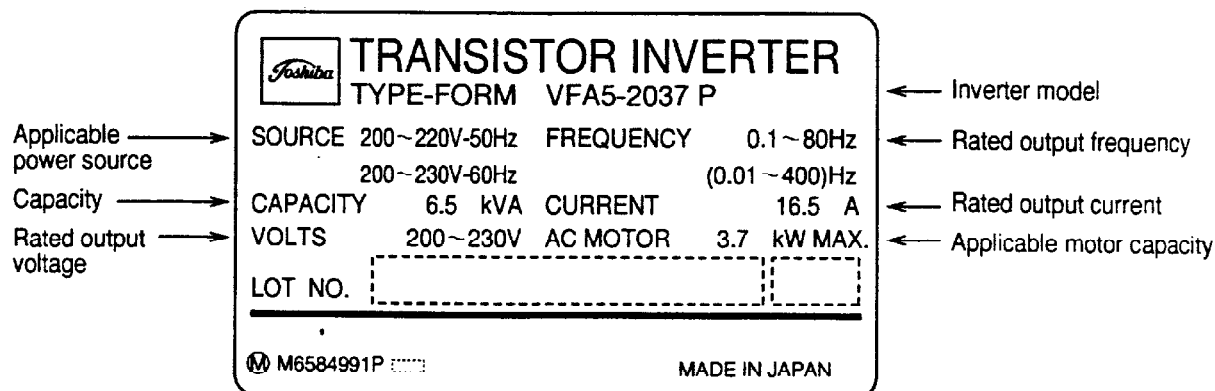


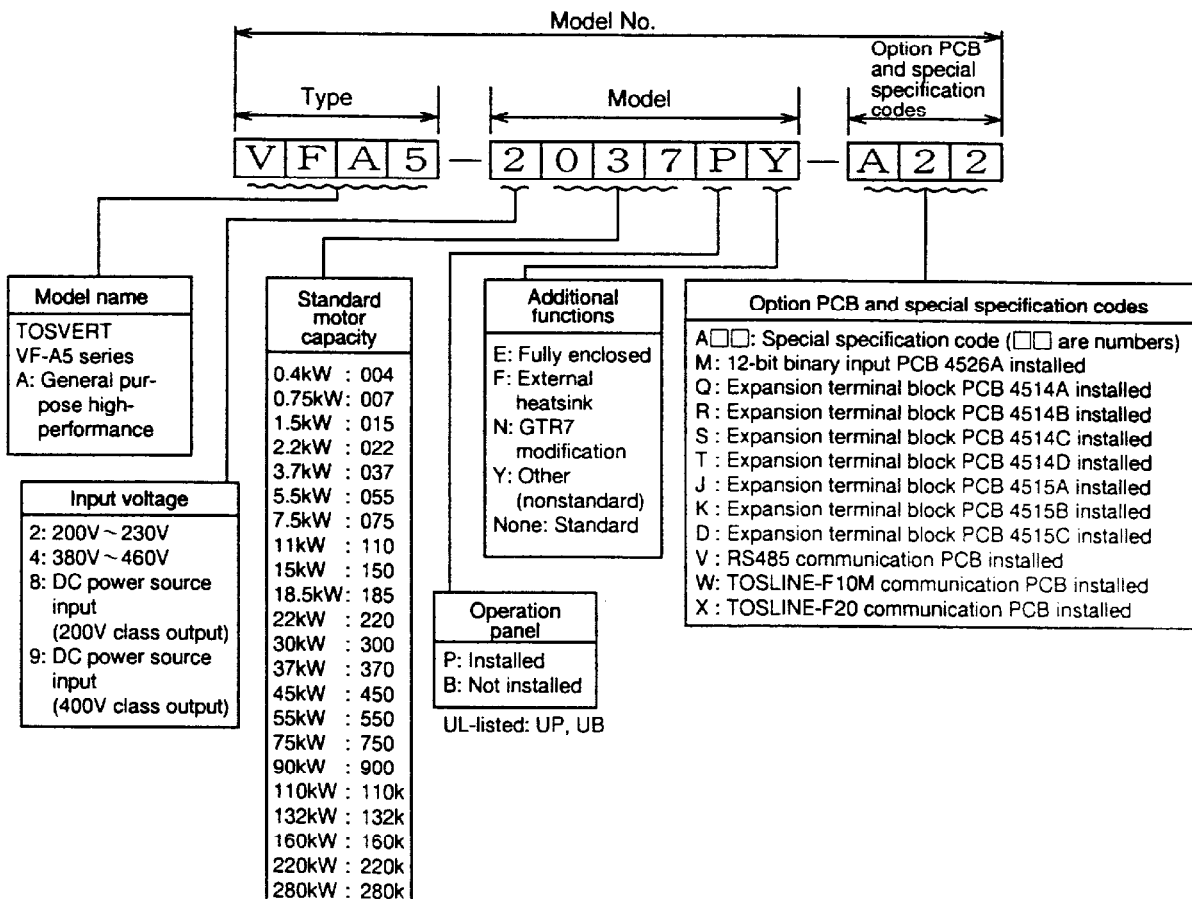



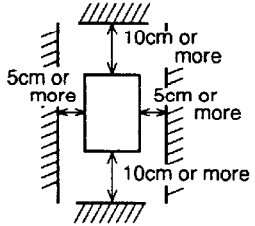
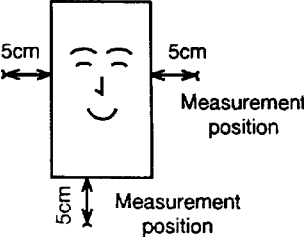
Details of model No.



2. Installation Precautions

This inverter is an electronic control unit. Take special care concerning the installation environment.

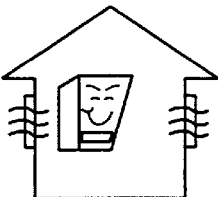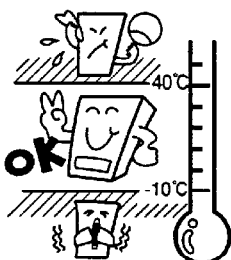
- Confirm that the input power is within $\pm 10\%$ of the rated value. If the input power voltage range tolerances are exceeded during use, the protective circuits may function or the inverter may be damaged.

<ul style="list-style-type: none"> • Avoid installation in hot and humid locations, where condensation or freezing may occur, or where water, dust, or metal chips may come into contact with the inverter.  <ul style="list-style-type: none"> • Install in a location free of corrosive gases or cutting fluids, etc. 	<ul style="list-style-type: none"> • Use the unit within an ambient temperature of -10 to 40 °C.  <p>Because the inverter radiates heat, when installing in a panel take special care concerning ventilation and panel space. Removal of the cover is recommended when using in a panel to ensure maximum longevity and reliability.</p>
<ul style="list-style-type: none"> • Do not install the unit in locations that experience large vibrations. 	<ul style="list-style-type: none"> • The inverter may malfunction if the following types of devices are installed nearby, so use proper precautions. <ul style="list-style-type: none"> • Solenoids • Brakes • Electromagnetic contactors • Fluorescent lights • Resistors <p>Install a surge killer on the exciting coil.</p> <p>Keep away from the inverter</p> 
<ul style="list-style-type: none"> • Ground the G/E terminal to prevent electrical shock and malfunction due to noise. 	<p>Attach the unit to a non-combustible material such as a metal panel. To ensure adequate ventilation, maintain the following installation spaces, and always install the unit vertically in the longitudinal direction. When installing multiple inverters in a row, leave a clearance of at least 10cm between each unit. This clearance can be reduced depending on the environment or by adding fans. (For 37kW and larger units, leave a clearance of at least 20cm above and below the inverter to allow for fan replacement and wire bending space.) Contact the Engineering Department for further details.</p> 
<p>Inverter life depends greatly on the ambient temperature. Make sure that the ambient temperature of the installation location does not exceed the maximum ambient temperature rating (40 °C). Measure the temperature at the positions shown in the diagram on the right, and confirm that it is less than the maximum ambient temperature rating (40 °C). (50 °C or less when the cover is removed.) 22kW and larger units can be used up to an ambient temperature of 50 °C. (Do not remove the cover from 22kW and larger units.)</p> 	

★ Always install the inverter in the longitudinal direction on a vertical surface.

3. External View and Component Names


3.1 Component Explanation (I)

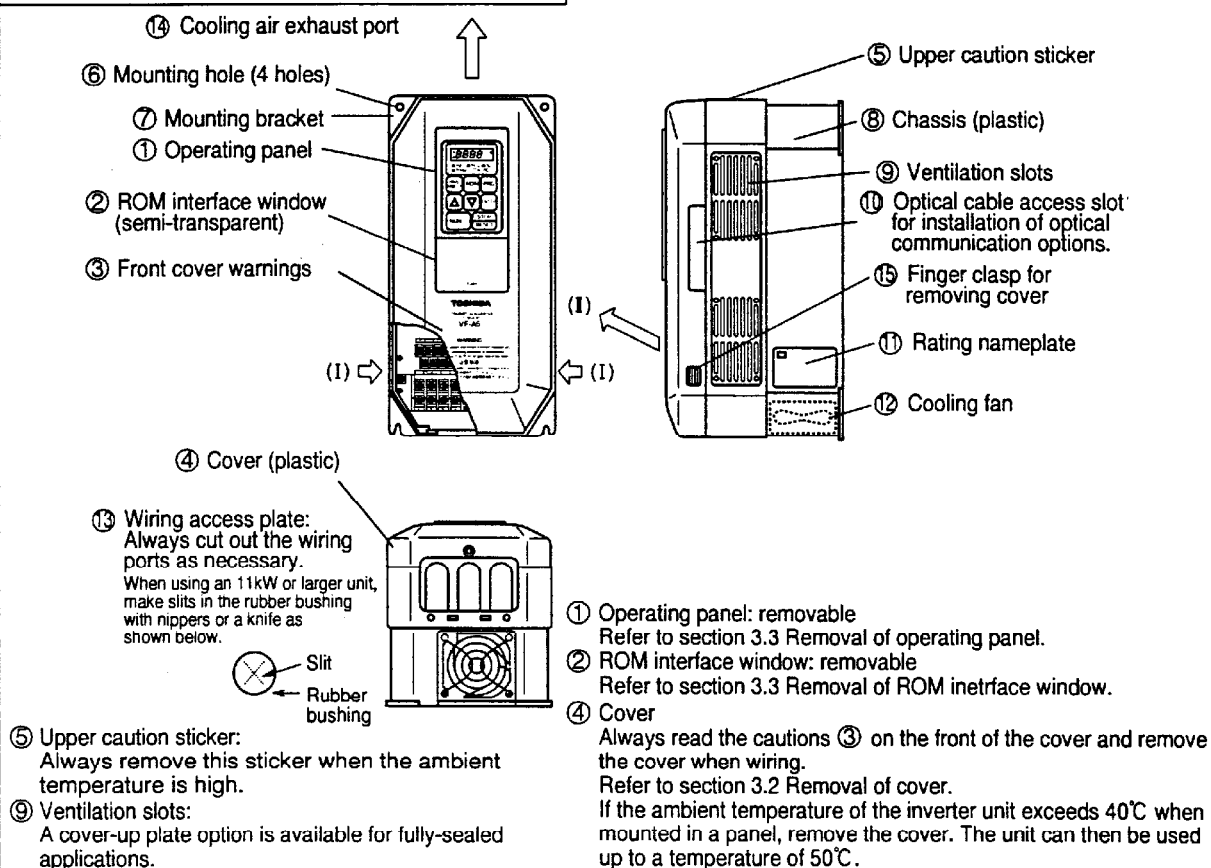


3.2 Removal of Cover

- 1) For 7.5kW and smaller... Place your fingers on the finger clasps for removing the cover shown in the 3.1 Component Explanation (I) drawing. Apply force in the direction of the arrows (I), and pull the cover up in the direction of arrow (II). The cover will come off.
- 2) For 11~18.5kW... Remove the two screws on the cover wiring inlet, and then remove the cover like the 7.5kW models.
- 2) For 22kW and larger... Wait for the "CHARGE" lamp on the cover (sheet metal) to go out. Then remove the four screws holding the cover (six screws for 37kW and larger), and the cover will come off.


Hook structure

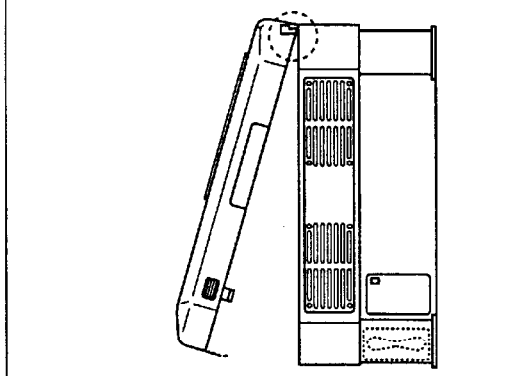

Fitting structures

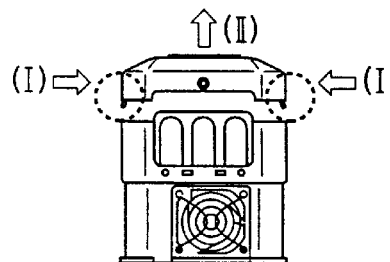


3.3 Removal of the ROM Interface Window and Operation Panel

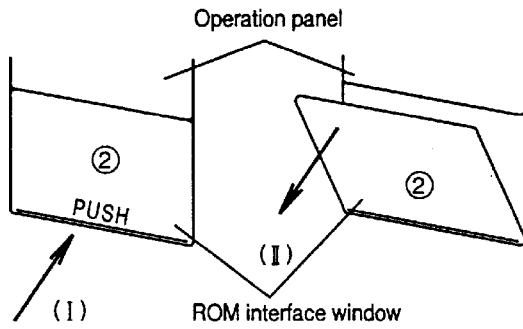

(I) Press where the word PUSH is located.

The top of the window will open.


(II) Hold the top of the window, and pull it out in the direction of the arrow (II).

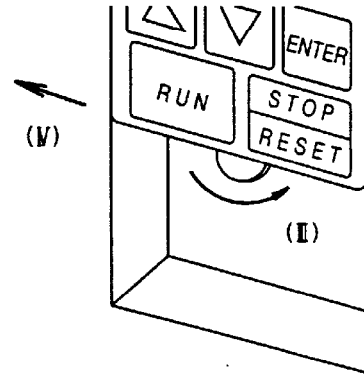

(III) The operation panel attachment screw can now be seen. Turn it in the direction of the arrow (III) until it completely loosens.

(IV) When the screw has completely loosened, pull the operation panel out in the direction of the arrow (IV).

3.4 Component Explanation (I)

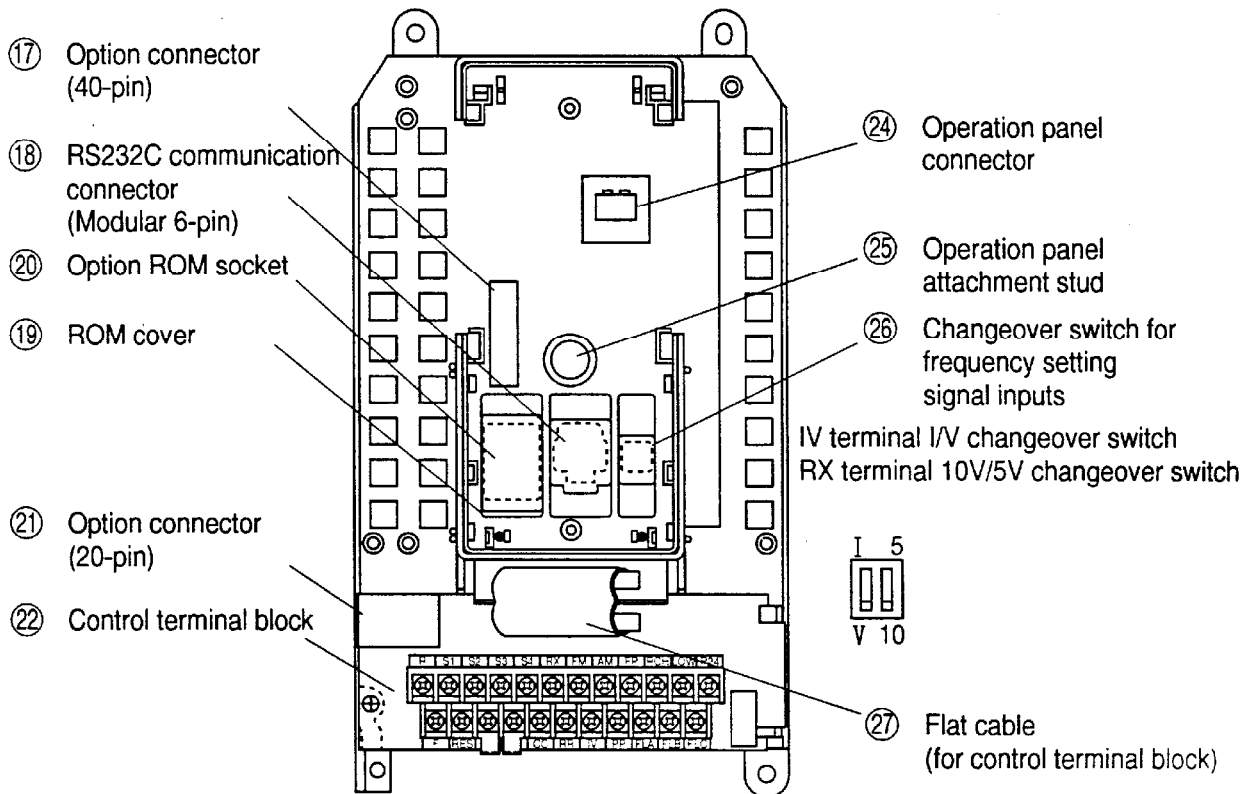

4. Operation Precautions

Observe the following points when using the VF-A5 inverter

4.1 Cautions Regarding Motor

Comparison with commercial power source operation:	The VF-A5 inverter uses a sinusoidal-wave PWM method, but the output voltage and output current will be distorted waveforms which closely approximate sinusoidal waveforms, instead of complete sinusoidal waveforms. In comparison to operating with the commercial power source, the motor temperature rise, noise and vibration will increase slightly.
Running at low-speeds:	When the inverter is used in combination with a general purpose motor and run at low speeds, the motor's cooling effect will decrease. Therefore, the output load must be reduced to less than the rated load. If the motor is to be run at the rated torque even at low speeds, use a Toshiba "VF motor" specially designed for use with inverters. When used with a VF motor, the inverter's overload protection level must be adjusted. (Refer to pages 77, 78 for details.)
Adjustment of overload protection level:	When using this inverter with a general purpose motor, the overload protection of the VF-A5 is performed by use of an overload detection circuit (electronic thermal relay) that meets a general purpose motor's reduced load characteristics. The reference current value for this electronic thermal relay is set to the inverter's rated current value; therefore, this may need adjustment depending on the motor.
Running at speeds exceeding 60Hz:	When operating at a frequency that exceeds 60Hz, motor vibration and noise will increase. Furthermore, this type of operation may be limited by the motor's mechanical strength and bearing construction, so please contact the motor manufacturer for further information.
Load equipment lubrication method:	When driving an oil-lubricated speed reduction gear or geared motor, the lubrication may deteriorate at low-speeds, so contact the speed reduction gear manufacturer for information on usable variable-speed areas.
Ultra-light loads and low-inertia loads:	Instability phenomena, such as abnormal vibration or overcurrent trips, may occur when operating with an ultra-light load at a load ratio of 5% or less, or with a load having an extremely small moment of inertia. In these cases, lower the carrier frequency. (Refer to page 71)
Measures for instability phenomena:	Instability phenomena may also occur when using the inverter with the following types of motors or loads, so always confirm applicability before use. <ol style="list-style-type: none">(1) Combination with motor exceeding recommended applicable motor rating.(2) Combination with special motors such as explosion-proof motors.(3) Combination with special loads having severe rotational fluctuations, such as piston-type movements.

- Braking during power off:** The inverter will enter the coast-stop state when the power source is turned off. The motor will therefore not stop immediately. To stop the motor immediately, install an auxiliary brake unit. Dynamic braking units and mechanical braking units are available, so select one that suits your specific application.
- Loads that generate a negative torque:** The overvoltage protection or overcurrent protection may function and trip the inverter when used with loads that generate a negative torque. In this case, a braking resistor that meets the load condition must be installed.
- Motors with brakes:** If a motor with a brake is directly connected to the inverter, the voltage when the motor is started will be low, which may result in the brake not being released. In this case, separately wire the brake circuit and motor main circuit. In addition, there is a delay in the time to when the inverter output stops if the inverter's ST to CC control terminal connection is released, so use of the circuit configuration in Fig. 4-1 is recommended.
- In Fig. (a), the brake power is turned ON and OFF via MC2 and MC3. If a circuit configuration as shown in the drawing is not used, a bound current may flow during braking and may cause an overcurrent trip. The brake power can also be turned ON and OFF using the low-speed signal LOW as shown in Fig. (b).

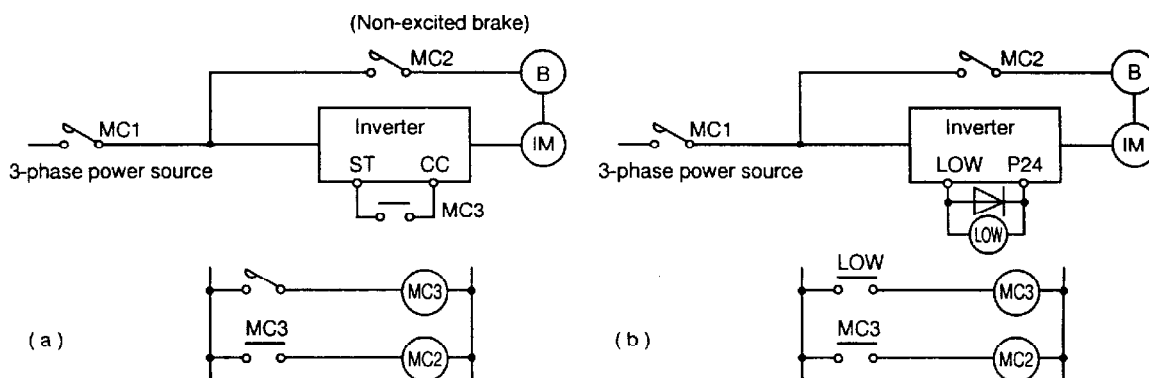


Fig. 4.1 Circuit configuration for motor with brake

In some cases, such as in hoist applications, turning the brake ON and OFF by using low-speed detection (LOW terminal function) may be better, so contact your dealer for further details.

4.2 Cautions Regarding the Inverter


- Inverter's overcurrent protection:** Overcurrent protection is used as the VF-A5 inverter's protection function, and the current setting level is set to match the largest applicable motor. Therefore, when operating a motor that is smaller than the inverter capacity, the overcurrent level and electronic thermal protection parameters must be readjusted. (Refer to pages 77, 78.)

Running with light loads:

Operating a large capacity motor with a light load using a small capacity (kVA) inverter must be avoided. The output peak current will increase due to the current ripple, and overcurrent trips may frequently occur.

Power-factor improvement capacitors:

Power-factor improvement capacitors must not be installed on the inverter's output. When operating a motor with power-factor improvement capacitors installed, remove the capacitors, or the inverter may fault trip or the capacitors may be damaged.

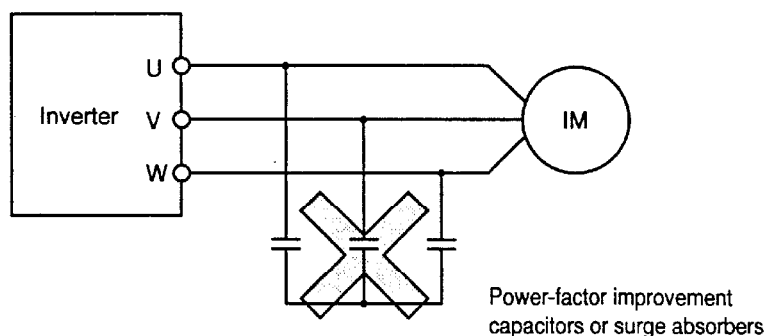

Use with voltage sources other than the rated voltage:

Use with voltage sources other than the rated voltage is not possible. If necessary, use a transformer, etc., to increase or decrease the source voltage to the rated voltage.


Protection device for lightning surges:

A DSA (lightning surge absorber) is used for protection in the unit. If a surge voltage exceeding 2600 to 3600V peak is applied, the device will light like a glowing electrical discharge. This will cause no problems if the condition does not continue for an extended period of time.

(Refer to Fig. 6-2-1 Fig. Ⓐ on page 21.)

Use of multiple inverter units:

Observe the following points when using multiple inverter units on the same power source line.

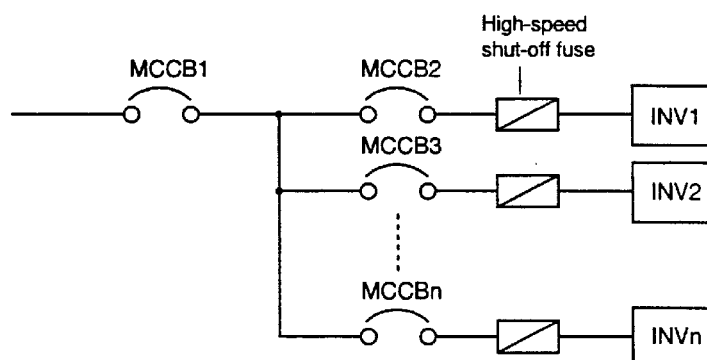

As shown above, there is no fuse installed in the inverter's main circuit. If a short circuit fault occurs in the inverter, not only MCCB2 will trip, but the main breaker MCCB1 may also trip.

Select the shut-off characteristics of MCCB1 and MCCB2 so that a selective shutdown can be executed and only MCCB2 trips. If the optimum characteristics cannot be selected, install a high-speed shut-off fuse after MCCB2. (Refer to page 14 for MCCB selection.)

4.3 Inverter Disposal Precautions

Observe the following points when disposing of the inverter.

Explosions from incineration:

Placing the inverter in an incinerator may be dangerous, as the electrolytic fluid used in the electrolytic capacitors may expand and explode.

Gasses from plastics:

The plastic used for the cover, etc., may generate poisonous gases when incinerated.

Disposal method:

Commission the disposal of the inverter to a specialist.

5. Wiring Precautions

5.1 Connection to Main Circuit (Refer to page11, Fig. 5.1.)

Observe the following precautions when making connections to the inverter.


Confirmation of power OFF:	Always turn the primary power distribution panel switch OFF, and confirm with a tester that a voltage is not present before beginning wiring to the inverter.
Electrical shock prevention-Confirmation of charge dissipation:	Before changing the wiring, wait <u>at least five minutes</u> after the "CHARGE" lamp inside the inverter has gone out, and then confirm that the capacitors have fully discharged by using a tester, etc., that can measure high-voltage DC. The internal electrolytic capacitors are charged, and there is a danger of electrical shock if the charged areas are touched while the "CHARGE" lamp is on. Do not touch the terminal block or remove the upper cover while the lamp is lit.
Confirmation of main circuit connections:	The inverter will be damaged if the input power source is applied to the motor terminals (U/T1, V/T2, W/T3). Always confirm the wiring for the power source terminals (R/L1, S/L2, T/L3) and motor terminals (U/T1, V/T2, W/T3) before turning the power on.
Separation of power source and motor wiring:	To prevent problems due to radio-frequency noise, etc., do not bundle the wiring to the input power terminals (R/L1, S/L2, T/L3) and the motor terminals (U/T1, V/T2, W/T3) together.
Separation of control and main power supplies:	In order to maintain the control power supply to display faults or to operate the communication options while the main circuit power is shut down, remove the two shorting bars (between R/L1-R0, S/L2-S0) on the control power supply terminal block. Connect the control power to a power source that is separate from the main circuit supply.

5.2 Connection of Control Signals

Observe the following points when making control signal connections.

Rating of relay contacts:	Use a relay intended for use with micro-current (min. applicable load rating less than 4mA-24V.), and install a surge killer on the relay's exciting coil.
Power wiring for control circuit:	Use shielded wiring or twisted-pair wiring for the control circuit, and separate the wiring from the main circuit wiring.
Control wiring wire sizes:	The following wiring sizes for the control circuit are recommended. Frequency setting signal input, frequency meter, ammeter: shielded wire that is 0.3mm ² or larger Other signals: Vinyl-insulated wire that is 0.75mm ² or larger
Isolation from main circuit:	All control terminals other than FLA, FLB and FLC are connected to internal electronic circuits, so input signals must always be electrically isolated from the main circuit.

Ratings of connected meters:	Connect a full-scale 1mA _{dc} DC ammeter or full-scale 7.5V _{dc} -1mA DC voltmeter to the control terminals.
Rating of FL signal contacts:	The contact rating of the protection operation detection relay (FL) is 250Vac ($\cos \phi = 0.4$) 30V _{dc} -1A.
External use of control power:	A max. of 24V _{dc} -100mA can be used from the P24 control power terminal to drive external relays.
Open collector outputs:	The RCH and LOW control terminals are open-collector output, and can output a max. 24V _{dc} -50mA. Use of a 24V _{dc} OMRON MY1 relay (RY) is recommended. Always install a diode (200V-1A class) for surge absorption. Take special note of the diode polarity to avoid incorrect application.
Frequency-setting potentiometer:	Use a potentiometer rated at 1k to 10k Ω -1/4W for the frequency-setting input signal.

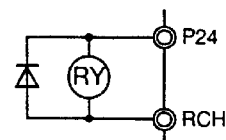

5.3 Other Precautions

Use of crimp-on terminal lugs:	The clearance between terminals on the inverter main circuit terminal block is small, so use sleeved crimp-on terminal lugs for all main circuit terminals. Take special care during connection so that the terminal lugs do not make contact with neighboring terminal lugs.
Grounding terminal:	Always ground the G/E grounding terminal with a wire that is 3.5mm ² or larger.
Built-in braking resistor:	For inverter capacities that are 3.7kW or less, a built-in braking resistor is connected between the main circuit terminals (PA1) and (PB1), providing dynamic braking as a standard feature.
Internally-connected (E) terminal:	The (E) terminal is for internal connections, so do not remove connections from it or make any external connections to it.

The main circuit wiring is shown in Fig. 5.1.

(For 3.7kW or less, not showing control power terminals R0, S0)

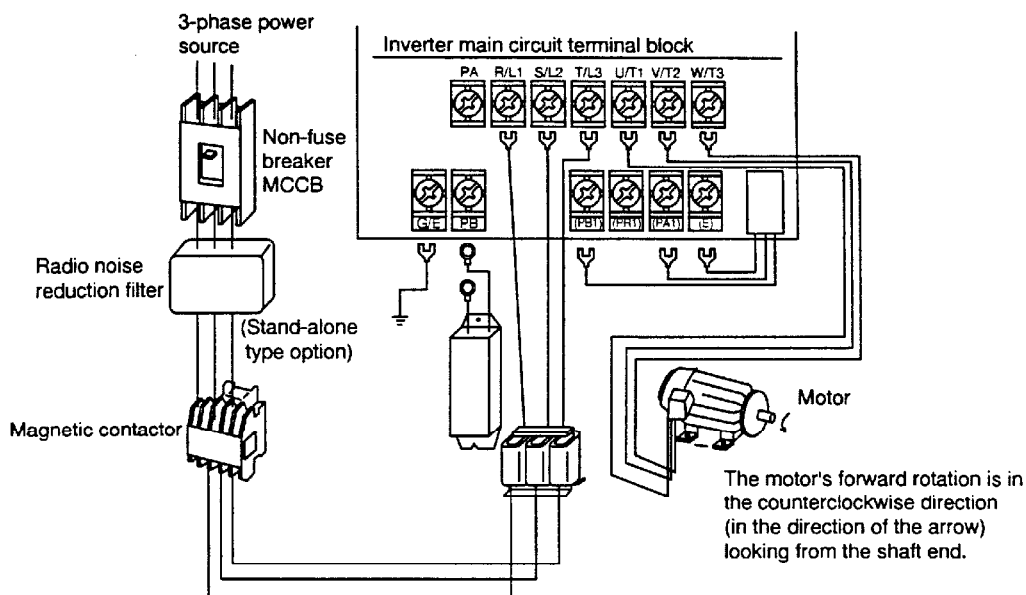


Fig. 5.1 Main circuit wiring

Note) A DC reactor (stand-alone type option) can be installed on 5.5kW and larger units. (Refer to the function of main circuit terminals P0 and PA on page 18.)

Installation of non-fuse breaker

- (1) Install a non-fuse breaker (MCCB) for wiring protection on the input power source side.
- (2) Avoid frequent starting/stopping by turning the non-fuse breaker ON and OFF.
- (3) Start and stop by turning terminals F to CC (or R to CC) ON and OFF.

Installation of primary magnetic contactor

(Refer to page 14; Examples of selecting equipment for wiring.)

- (1) When using an external braking resistor, install a magnetic contactor (MC) or non-fuse breaker with trip coil (MCCB) on the inverter's power supply input side for protection. Make sure that the power circuit can be opened with the built-in fault detection relay (FL).
- (2) The VF-A5 has a built-in fault detection relay (FL). Connect the contacts of this relay to the primary side magnetic contactor (MC) operation terminals, so that the MC can be opened when the inverter's protection circuit functions.

The fault detection relay (FL) contacts (250VAC-1A $\cos \phi = 0.4$) can be directly connected on 200V systems. When using a 400V system, a transformer must be used to create 200V or less for the FL sequence.

If the MC exciting current exceeds the FL contact rating, install another relay step.

- (3) Turn terminal F (or R) to CC ON and OFF to frequently start and stop. Due to repeated inrush currents when the power is turned on, the life of the inverter will be shortened when the primary magnetic contactor is used to start and stop, so do not use this method to start and stop frequently.
- (4) Install a surge killer on the magnetic contactor (MC) exciting coil.

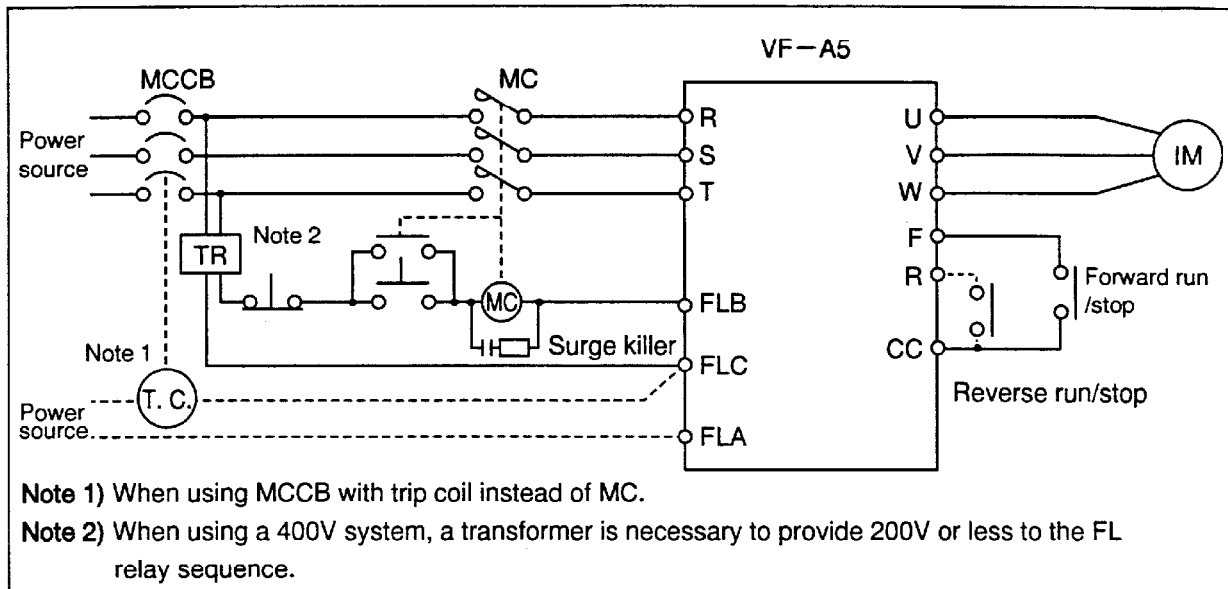


Fig. 5.2 Wiring example using a magnetic contactor

Installation restrictions of secondary-side magnetic contactors


- (1) As a rule, if a magnetic contactor is installed between the inverter and motor, do not turn it ON/OFF while running. (If the secondary-side contactor is turned ON and OFF while running, a large current may flow in the inverter, causing inverter damage and failure.)
- (2) A magnetic contactor may be installed to change the motor or to change to the commercial power source when the inverter is stopped. Always use an interlock with the magnetic contactor in this situation so that the commercial power supply is not applied to the inverter's output terminals.

Installation of overload relay (thermal relay)


(Refer to page 14; Examples of selecting equipment for wiring.)

- (1) The VF-A5 has a built-in overload protection function that uses an electronic thermal relay. However, in the following cases, the thermal relay operation level must be adjusted or an overload relay matching the motor's characteristics must be installed between the inverter and motor.
 - ① When using a motor having a rated current value different from a Toshiba general-purpose motor. (Adjust the electronic thermal level)
 - ② When running a single motor with an output less than the specified standard applicable motor, or when running several motor simultaneously (An overload relay must be installed on each motor.)

Note) If the motor cables for a 400V class inverter are long, the thermal relay may malfunction. In this case, lower the carrier frequency (refer to adjustment parameters on page 71), or install a 0.1μ to 0.5μ F-1000V film capacitor between the input/output terminals of each phase's thermal relay.

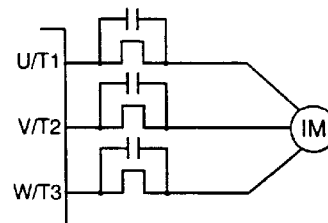

<Example> When using external thermal relays, the inverter can be externally fault-tripped and immediately stopped by using the following method (Fig. 5.3).

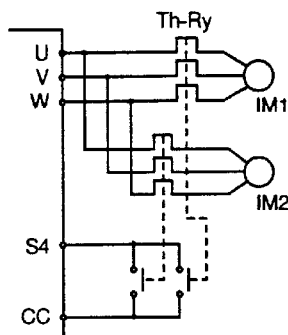

Note) In this case, ensure that S4 is set to "Emergency stop function", by setting **1E4** in **Gr.St** to **10**.
If the Th-Ry functions, the inverter will display "E", and fault trip.

★ Other unused terminals can also be used instead of the S4 terminal.

Fig. 5.3 Wiring example using external thermal relays

Gr.St etc., indicate the LED display on the operation panel. (Refer to Appendix 3, Character codes, on page 131.) The boxed items indicate a parameter or panel operation key.

- (2) When using the VF-A5 to drive a "Toshiba VF motor", designed exclusively for constant torque/inverter-driven applications, set the electronic thermal protection characteristics for a VF motor. (Refer to pages 77, 78, Electronic Thermal Protection.)
- (3) For protection measures, use of a motor with an imbedded-type thermal relay in the motor coil is recommended when running a motor at low speeds.

Restrictions on the installation of power-factor improvement capacitors (both input/output)

Do not install power-factor improvement capacitors on the input or output sides of the inverter. Large currents containing high frequency elements may flow to the capacitors and adversely affect them. Capacitors on the output side may cause the inverter to overcurrent trip. Install an input reactor or DC-link reactor (optional) for power-factor improvement.

Countermeasures against radio wave interference

The inverter may cause radio wave interference to audio equipment, etc., used near the inverter. In this case, install a radio noise reduction filter (optional) on the inverter's power source side, or shield the cables to the motor with a conduit to reduce the interference. Contact your dealer for further details.

Cautions concerning ground faults

Verify that there are no incorrect connections between the motor and inverter and that there are no short circuits in the motor before beginning operation. Do not ground the neutral point of a star-connected motor.

Installation of an input reactor

An input reactor can be used to improve the input power-factor, to suppress high harmonic elements, and to minimize the risk of damage to the inverter that may be caused by sudden power fluctuations. Always install an input reactor when connecting the inverter to the following types of systems.

- (1) When power source capacity is 500kVA or more, and when power source capacity is greater than the inverter capacity by a factor of 10 times or more.
- (2) When connecting the inverter to the same power system as thyristor-commutated control equipment.
- (3) When connecting the inverter to the same power system as a distorted-wave generation source, such as an arc furnace or thyristor-switched converter unit.

Leakage currents

Leakage currents may increase slightly depending on the connection method.

- (1) When multiple inverters are connected to one ELCB, increase the ELCB current sensitivity value.
- (2) Keep the wiring length between the inverter and motor as short as possible.
- (3) Use an ELCB with high-harmonic suppression.

Table 5.1: Examples of selecting equipment for wiring

Voltage class	Applicable motor (kW)	Inverter	Non-fuse breaker (MCCB)		Magnetic contactor (MC)		Overload relay Th-Ry		Surge killer	Wire size		
		Model	Rated current (A)	Toshiba model	Rated current (A)	Toshiba model (Note 1)	Adjusted current value (A) [Reference value]	Toshiba model	Model (Note 2)	Main circuit (mm ²) (Note 3)	DC reactor (mm ²)	Dynamic braking resistor (mm ²)
200V class	0.4	-2004P	5	SS30	11	C13J	2.3	T13J	Toshiba model SS-2 or Marcon Electronics RFM2E224KD	2.0	—	1.25
	0.75	-2007P	10	SS30	11	C13J	3.6	T13J		2.0		
	1.5	-2015P	15	SS30	11	C13J	6.8	T13J		2.0		
	2.2	-2022P	20	SS30	11	C13J	9.3	T13J		2.0	2.0	
	3.7	-2037P	30	SS30	18	C20J	15	T20J		3.5		
	5.5	-2055P	50	ES50	35	C35J	22	T35J		8.0	5.5	
	7.5	-2075P	60	EH100B	50	C50J	28	T35J		14		14
	11	-2110P	100	EH100B	65	C65J	44	T65J		14	38	
	15	-2150P	125	EH225	80	C80A	57	T65J		22		38
	18.5	-2185P	125	EH225	93	C100A	70	T80A		38	22	
	22	-2220P	150	EH225	93	C100A	85	T125A		38		60
	30	-2300P	200	EH225	180	C180A	108	T125A		60	60	
	37	-2370P	225	EH225	180	C180A	138	T150A		100		38×2
	45	-2450P	250	EH400	220	C220A	162	T180A		100	150	
	55	-2550P	250	EH400	220	C220A	198	T220A		100		60
75	-2750P	500	EH600	300	C300A	3.2	T400A	100×2	150×2			
90	-2900P	600	EH600	400	C400A	4.0	T400A	150×2				
400V class	0.75	-4007P	5	SS30	9	C13J	2.3	T13J	Marcon Electronics RFM2H104KD (400V system) (Note 6)	2.0	—	1.25
	1.5	-4015P	10	SS30	9	C13J	3.6	T13J		2.0		
	2.2	-4022P	10	SS30	9	C13J	5.0	T13J		2.0		
	3.7	-4037P	15	SS30	9	C13J	6.8	T13J		2.0	2.0	
	5.5	-4055P	30	SS30	17	C20J	11	T13J		3.5		2.0
	7.5	-4075P	30	SS30	17	C20J	15	T20J		5.5	3.5	
	11	-4110P	50	ES50	33	C35J	22	T35J		8		5.5
	15	-4150P	60	EH100B	48	C50J	28	T35J		8	8.0	
	18.5	-4185P	75	EH100B	48	C50J	35	T65J		14		14
	22	-4220P	100	EH100B	48	C50J	44	T65J		22	22	
	30	-4300P	125	EH225	80	C80A	57	T65J		38		38
	37	-4370P	125	EH225	93	C100A	65	T80A		38	38	
	45	-4450P	150	EH225	180	C180A	85	T125A		38		60
	55	-4550P	175	EH225	180	C180A	100	T125A		60	60	
	75	-4750P	225	EH225	220	C220A	138	T150A		100		100
	110	-4110KP	350	EH400	265	C300A	2.7	T220A		60×2	60×2	
	132	-4132KP	400	EH400	400	C400A	3.6	T400A		60×2		100×2
	160	-4160KP	500	EH600	400	C400A	4.2	T400A		100×2	150×2	
220	-4220KP	700	E800	600	C600A	CT	T20A	200×2	200×2			
280	-4280KP	800	E800	600	C600A	CT	T20A	200×2		250×2		
											80	

(Note 1) When selecting a magnetic contactor (MC) with 2a auxiliary contacts and using the auxiliary contacts for the control circuit, parallel the 2a contacts to improve contact reliability.

(Note 2) Install a surge killer on the magnetic contactor or relay exciting coil.

(Note 3) The wire sizes for the input side R, S, T and output side U, V, W are shown. These sizes apply only when the wiring length is less than 30m. Increase the wire sizes when the length exceeds 30m.

(Note 4) For the control circuit, use the shielded wire of 0.75mm² or more in wire size.

(Note 5) Use a wire size 3.5mm² or more for the grounding wire.


(Note 6) 200V system: type SS-2 or Marcon Electronics RFM2E224KD

6. Standard Connections

Refer to the operation selection explanation (7.4 Operation mode selection, page 45), and parameter list (page 113).

6.1 Standard Connection Example

Example 1 To set run frequency, forward/reverse run, and decelerated stop via the panel.

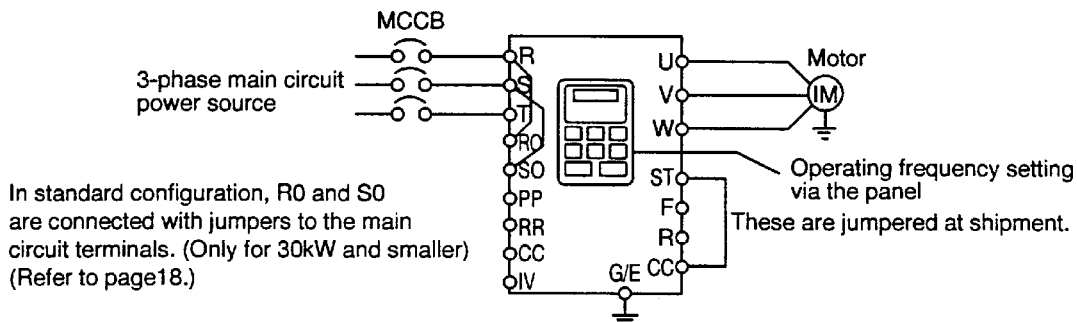

Setting


Parameter group	Parameter	Setting value	Reference page
Gr. Ut	<i>CNOd</i> (Command mode selection)	2 or 4 Note 1)	45
Gr. Ut	<i>FNOd</i> (Frequency setting mode selection)	2 or 4 Note 2)	45

Note 1) *CNOd* set to 2 ... Press **[RUN]** to start running.
CNOd set to 4 ... Press **[PANEL/REMOTE]**, then **[RUN]** to start running.

★ Refer to page 33 "7.2 Basic Operation" for the operation methods.

Note 2) *FNOd* set to 2 ... The reference frequency can be set only from the operation panel.
FNOd set to 4 ... Press **[PANEL/REMOTE]**, and the reference frequency can be entered from the operation panel.

Example 2 To set operating frequency via the panel, and forward/reverse run, decelerated stop, and coast-stop with external signals.

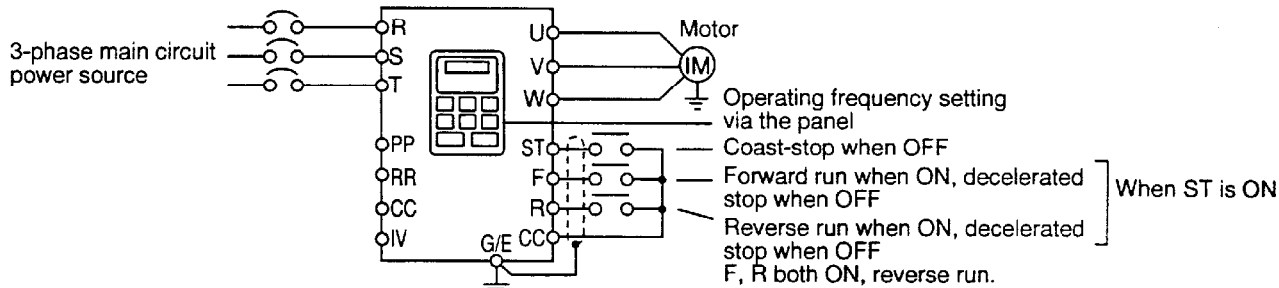


Setting

Parameter group	Parameter	Setting value	Reference page
Gr. Ut	<i>CNOd</i> (Command mode selection)	1 or 4 Note 3)	45
Gr. Ut	<i>FNOd</i> (Frequency setting mode selection)	2	45

Note 3) Emergency stop is possible from the panel by pressing **[STOP]** twice.
CNOd set to 1 ... Running from operation panel is not possible.
CNOd set to 4 ... Press **[PANEL/REMOTE]**, and running is possible from the operation panel by pressing **[RUN]**.

Example 3 To set operating frequency with external signals, and forward/reverse run and decelerated stop with the panel.

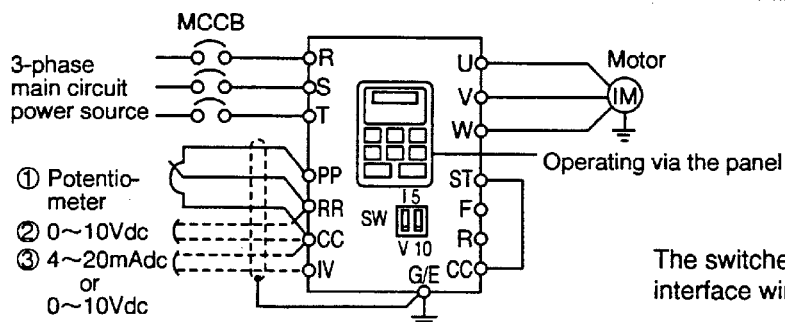


Setting

Parameter group	Parameter	Setting value	Reference page
<i>Gr.Ut</i>	<i>CNOd</i> (Command mode selection)	2 or 4 Note 1)	45
<i>Gr.Ut</i>	<i>FNOd</i> (Frequency setting mode selection)	1	45

External operating frequency signal	<i>Gr.SF FC</i> Setting value ^{Note 5)}	Switch SW
① Potentiometer	1	—
② 0~10Vdc	1	V side
③ 4~20mAdc or 0~10Vdc	1	I side V side

Note 5) Refer to page 74.

Example 4 To set operating frequency, forward/reverse run, decelerated stop, and coast-stop via external signals.

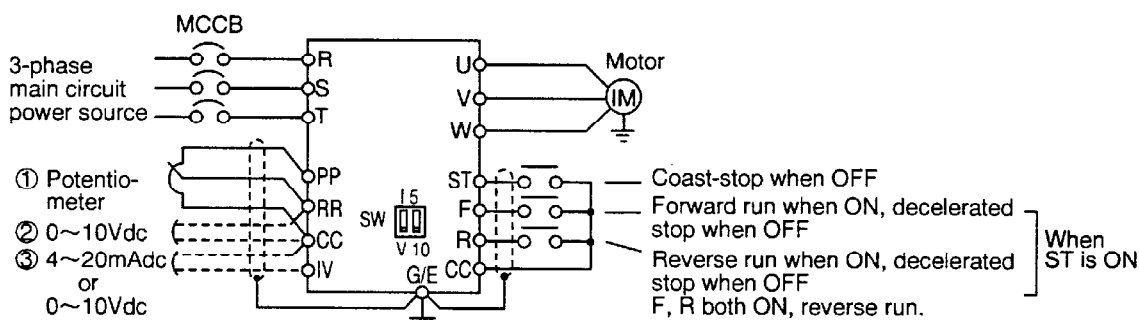

Setting

Parameter group	Parameter	Setting value	Reference page
<i>Gr.Ut</i>	<i>CNOd</i> (Command mode selection)	1 or 4 Note 3)	45
<i>Gr.Ut</i>	<i>FNOd</i> (Frequency setting mode selection)	1 or 4 Note 4)	45

External operating frequency signal	<i>Gr.SF FC</i> Setting value ^{Note 5)}	Switch SW
① Potentiometer	1	—
② 0~10Vdc	1	V side
③ 4~20mAdc or 0~10Vdc	1	I side V side

Note 5) Refer to page 74.


Note 4) Emergency stop is possible from the panel by pressing **STOP** twice.

FNOd set to 1 ... The reference frequency can only be input from the terminal block.

FNOd set to 4 ... Press **PANEL/REMOTE**, and the reference frequency can be entered from the operation panel.

Example 5 When using built-in braking resistor

(For 3.7kW and smaller units)

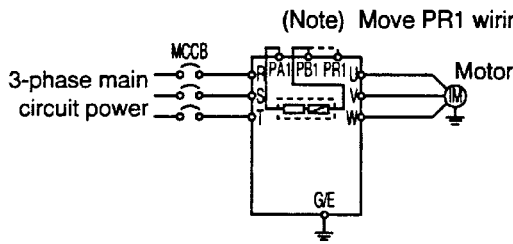

(Note) Move PR1 wiring to PB1

Setting: Set **Pb** in parameter group **Cr.Pr** (dynamic braking selection) to **2** (dynamic braking with overload detection).


The built-in braking resistor is connected to the PB1 terminal (refer to page 24) at shipment.

Example 6 When connecting a braking resistor (optional)

Note) Select a braking resistor that is higher than the min. allowable resistance value (refer to page 103).

For 22kW and larger units, the separate GTR7 (dynamic braking circuit) option is required.

a) When using an optional braking resistor with temperature fuse

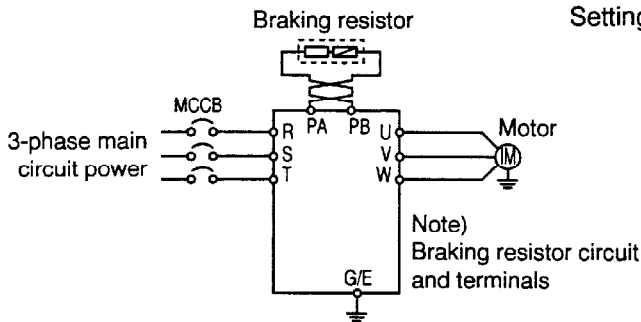


Setting: for 5.5kW and larger units, set **Pb** in parameter group **Cr.Pr** (dynamic braking selection) to **2** (dynamic braking with overload detection).

When using the built-in braking resistor with 3.7kW and smaller units, avoid the use of an external braking resistor. However, parallel connection is possible in the following combinations. (For max. braking rate applications)

		Built-in braking resistor	Minimum external resistor value that can be used with the built-in braking resistor	Min. total braking resistance value
200V systems	2.2kW and smaller	70 Ω	70 Ω	35 Ω
	3.7kW	40 Ω	40 Ω	20 Ω

b) When using an optional braking resistor without temperature fuse

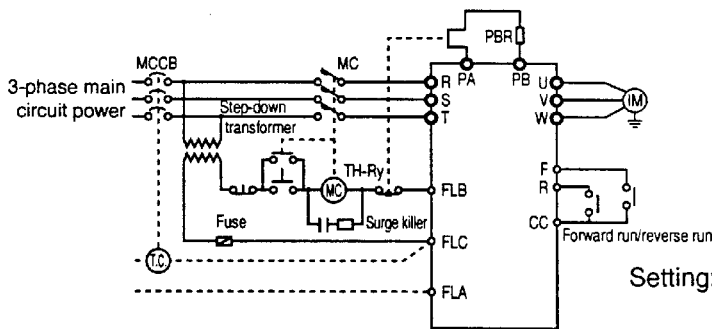

TH-Ry is used as a fire prevention fail-safe. DBR overload and overcurrent protection functions are incorporated in the inverter for protection of the braking resistor, but TH-Ry operates if those protective functions are not possible. Select TH-Ry according to the DBR power rating.

Setting: Set **Pb** in parameter group **Cr.Pr** (dynamic braking selection) to **2** (dynamic braking with overload detection), and set the braking resistor capacity and resistance value. (Refer to **PbCr** **Pbr** on page 82.)

Note) The step-down transformer does not need to be installed for 200V class inverters.

6.2 Terminal Functions

Table 6.2.1: Main circuit terminal functions for 3.7kW and smaller units

Main circuit terminal functions for 3.7kW and smaller units are as shown below. The internal circuit diagrams for each terminal are shown on page 21.

Terminal symbol	Terminal function	Internal circuit diagram
G/E	Terminal for external grounding.	A
R/L1, S/L2, T/L3	Connect to properly-rated power source.	A
U/T1, V/T2, W/T3	Connect to motor(3-phase induction motor).	B
PA, PB	When built-in braking resistor is insufficient, connect to external braking resistor(optional). Change the settings related to dynamic braking resistor protection. Note) Do not short-circuit PA terminal and PB terminal.	C1
PC	Minus potential terminal for internal DC circuit. A DC power source can be input between this terminal and the PA terminal (plus potential).	C1
R0, S0	Control circuit power is input via the shorting bars on the terminal block (R/L 1-R0, S/L2-S0). When using a separate power supply for the control power, remove the shorting bars before connecting the power supply.	D1
(PR1), (PB1)	Connected to the built-in braking resistor. When not using the built-in braking resistor, change the wiring from(PB1)to(PR1), and then change the settings of the dynamic braking resistor operation parameters.	C1
(PA1)	This is an internal connection, so do not remove wires from it or connect external wires to it. It is connected to the built-in braking resistor.	C1
(E)	This is for internal connections, so do not remove or connect external wires. This is wired to the inverter chassis.	A

Table 6.2.2: Main circuit terminal functions for 5.5kW and larger units

Main circuit terminal functions for 5.5kW and larger units are as shown below. The internal circuit diagrams for each terminal are shown on page 21.

Terminal symbol	Terminal function	Internal circuit diagram
G/E	Terminal for external grounding.	A
R/L, S/L2, T/L3	Connect to properly-rated power source.	A
U/T1, V/T2, W/T3	Connector to motor(3-phase induction motor).	B
PA, PB	Connect to braking resistor(optional)and then set the dynamic braking resistor operation parameters. Note) Do not short-circuit PA terminal and PB terminal.	C2,C3,C4
PC	Minus potential terminal for internal DC main circuit. A DC power source can be input between this terminal and the PA terminal(plus potential).	C2,C3,C4
P0, PA	Terminals for connecting a DC-link reactor(DCL)(standalone type). This is short circuited with s shorting bar at shipment.	C2,C3,C4
R0, S0	Control circuit power is input via the shorting bars on the main circuit terminal block(R0-R/L1,S0-S/L2). When using a separate power supply for control power, remove the shorting bars before connecting the power supply. On 37kW and larger units, these terminals are not connected to the main circuit terminals at shipment, so connect a power supply for the control circuit.	D1,D2
R20, S20	Power supply output terminals(190 to 220V-50Hz, 190to 230V-60Hz)for operation circuits. Only installed on 400V-class 37kW and larger units(10VA).	D2

Table 6.2.3 Control circuit terminal functions

Control circuit terminal functions are as shown below. The internal circuit diagrams for each terminal are shown on page 22.

Terminal symbol	Terminal function	Internal circuit diagram
FLA, FLB, FLC	These are the multifunction programmable relay contact outputs(refer to page 12)The contact ratings are 250Vac-2A(COS ϕ =1), 30Vdc-1A, 250Vac-1A(COS ϕ =0.4). The standard function setting detects when the inverter protection function have operated. When a protection function activates, FLA-FLC will close, and FLB-FLC will open.	E
P24	24Vdc power output. (Max. 100mA)	F
RCH	This is a multifunction programmable open-collector output(refer to page 62). (Max.50mAdc) The standard function setting activates this signal when completion of deceleration or acceleration is detected.	G
LOW	This is a multifunction programmable open collector output(refer to page 62). (Max. 50mAdc) The standard function setting activates this signal when a low speed is detected.	G
FP	This is a dedicated open-collector output. (Max.50mAdc). Pulses that are 48-, 96- or 360-times the output frequency are output according to parameter settings. The standard setting is for 48-times the output frequency.	H
FM	This is a multifunction programmable analog output(refer to page 94.) The standard setting is the pre-compensation reference frequency. When connecting a meter, use a 1mAdc full-scale ammeter or 7.5Vdc-1mA full-scale voltmeter.	I
AM	This is a multifunction programmable analog output(refer to page 94.) The standard setting is the output current. When connecting a meter, use a 1mAdc full-scale ammeter or 7.5Vdc-1mA full-scale voltmeter.	I
PP	This is the power supply for reference frequency setting. (10Vdc) Connect a 3k Ω potentiometer (a 1 to 10k Ω potentiometer may also be used).	J
RR	This is a multifunction programmable analog input. The standard setting is a 0 to 10Vdc input corresponding to a 0 to 80Hz frequency setting.	K
IV	This is a multifunction programmable analog input. Change between 0 to 10Vdc (SW at V side) or 4 (0) to 20mAdc (SW at I side) via SW, located under the ROM interface window. The standard setting is a 0 to 10Vdc input corresponding to a 0 to 80Hz frequency setting with the switch at the V side.	L
RX	This is a multifunction programmable +/- analog input. Change between 0 and 10Vdc (SW at 10V side) or 0 to \pm 5Vdc (SW at 5V side) via SW, located under the ROM interface window. The standard setting is a 0 to \pm 10Vdc input corresponding to a 0 to 80Hz forward/reverse frequency setting with the switch at the 10V side.	M
CC	This is the control circuit common terminal.	N

Terminal symbol	Terminal function	Internal circuit diagram
ST	The standard setting is "run ready" with a short circuit between ST-CC. The motor will coast-stop when opened. This can also be used for interlocks. (Run ready/coast-stop terminal)	○
F	The standard setting is forward run with a short circuit between F-CC, and decelerated stop when opened. (ST-CC in ON condition)	○
R	The standard setting is reverse run with a short circuit between R-CC, and decelerated stop when opened. (ST-CC in ON condition) The motor will reverse run when both F-CC and R-CC are short circuited.	○
S1	The standard setting is preset speed run with a short circuit between S1-CC.	○
S2	The standard setting is preset speed run with a short circuit between S2-CC.	○
S3	The standard setting is preset speed run with a short circuit between S3-CC.	○
S4	The standard setting is preset speed run with a short circuit between S4-CC.	○
RES	The standard setting is that the hold during operation of the inverter protection functions is reset with a short circuit between RES-CC. Even if RES-CC is short circuited while the inverter is operating normally, the reset function will not activate.	○

Fig. 6.2.1 Input/output internal circuits (1/2)

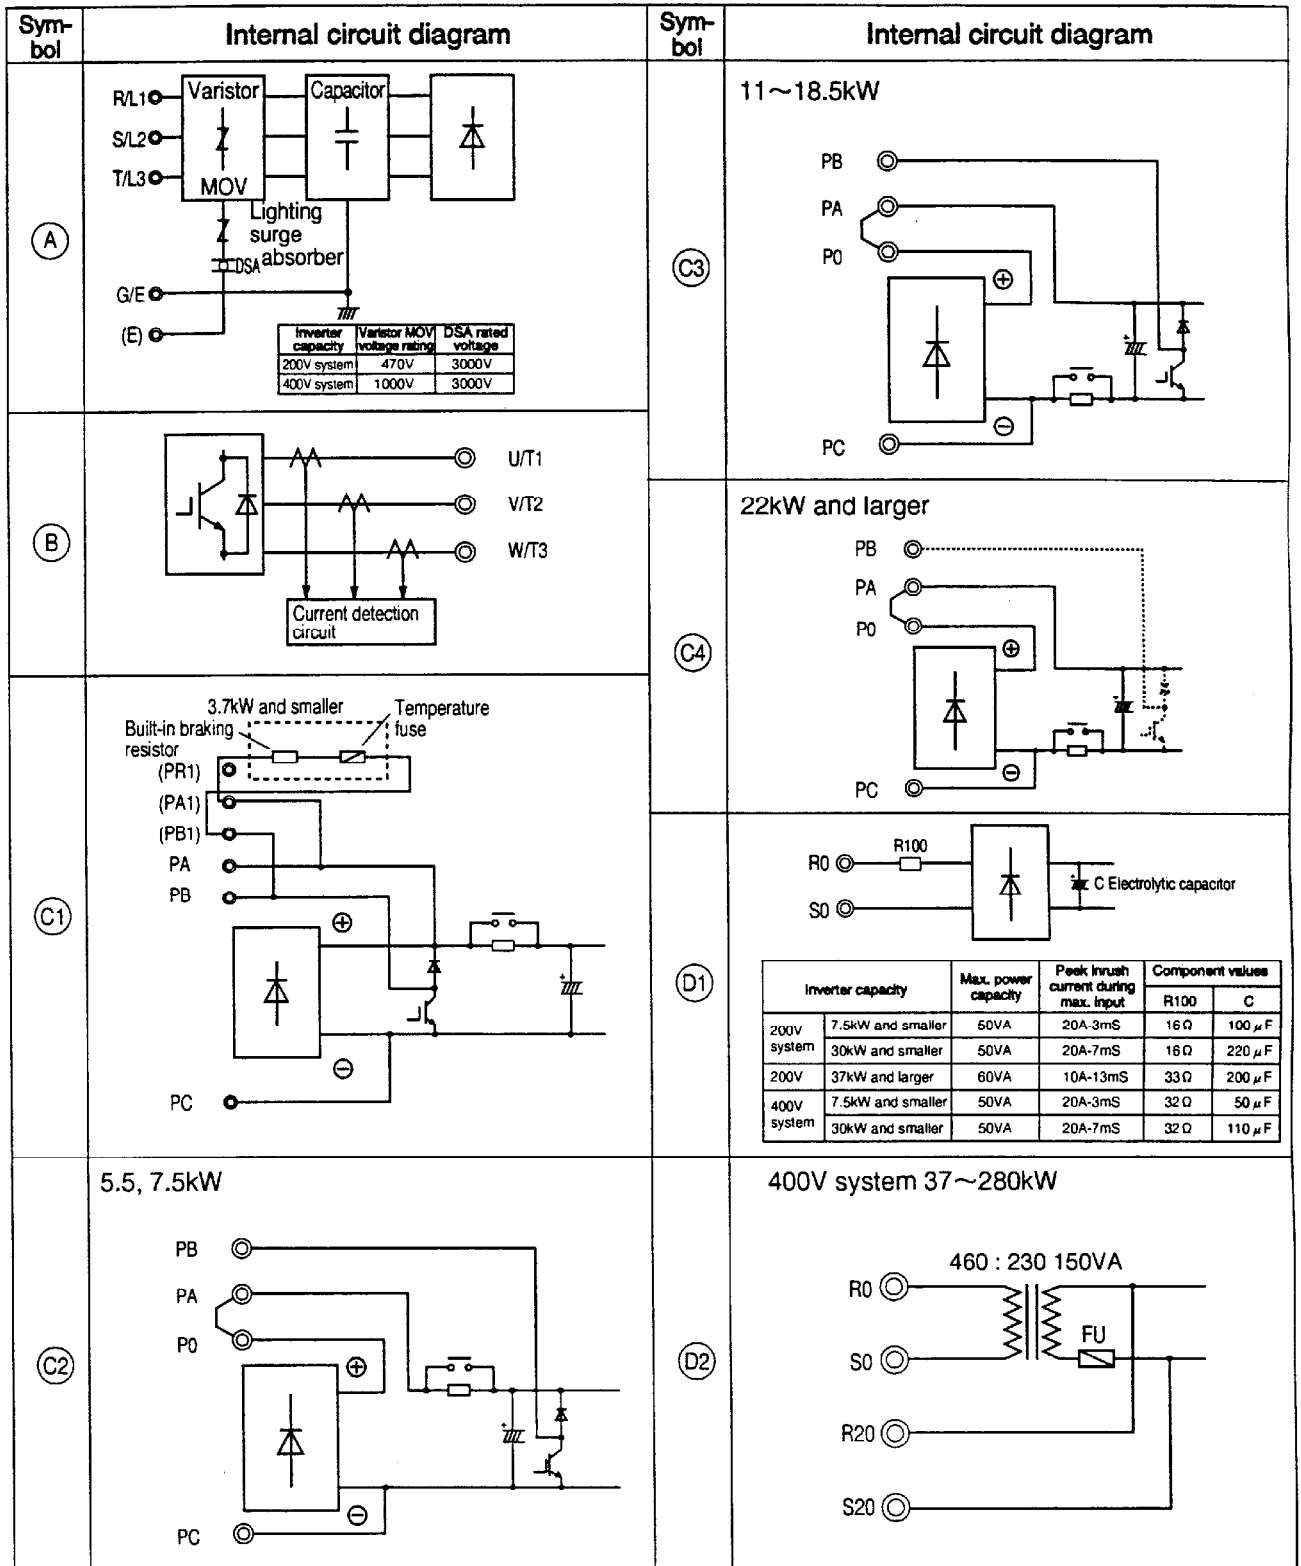


Fig. 6.2.1 Input/output internal circuits (2/2)

Sym- bol	Internal circuit diagram	Sym- bol	Internal circuit diagram									
E		K	<p>Analog input (0~10Vdc)</p> <p>Note 1)</p> <p>CC</p>									
F		L	<p>Analog input (0~10Vdc, 0~20mAdc)</p> <p>Note 1)</p> <p>CC</p> <p>0~10Vdc (switch at V side) 4~20mAdc (switch at I side)</p>									
G		M	<p>+/- Analog input (0~+/-10Vdc, 0+/-5Vdc)</p> <p>Note 1)</p> <p>CC</p> <p>0~5Vdc (switch at 5 side) 0~10Vdc (switch at 10 side)</p>									
H		N	<p>Grounding capacitor 22 µF</p>									
I	<p>Analog output</p> <table border="1" data-bbox="438 1534 710 1624"> <thead> <tr> <th></th> <th>Response</th> <th>Resolution</th> </tr> </thead> <tbody> <tr> <td>AM</td> <td>3mS</td> <td>1/256</td> </tr> <tr> <td>FM</td> <td>100mS</td> <td>1/1024 or better</td> </tr> </tbody> </table>		Response	Resolution	AM	3mS	1/256	FM	100mS	1/1024 or better	O	<p>Contact inputs</p>
	Response	Resolution										
AM	3mS	1/256										
FM	100mS	1/1024 or better										
J												

Note 1) A capacitor is installed on the analog input terminals (RR, RX, IV), so if an output such as an operational amplifier is directly connected to these terminals, instability may result. Always pass signals of this type to these terminals through a 100Ω to 1kΩ resistor.



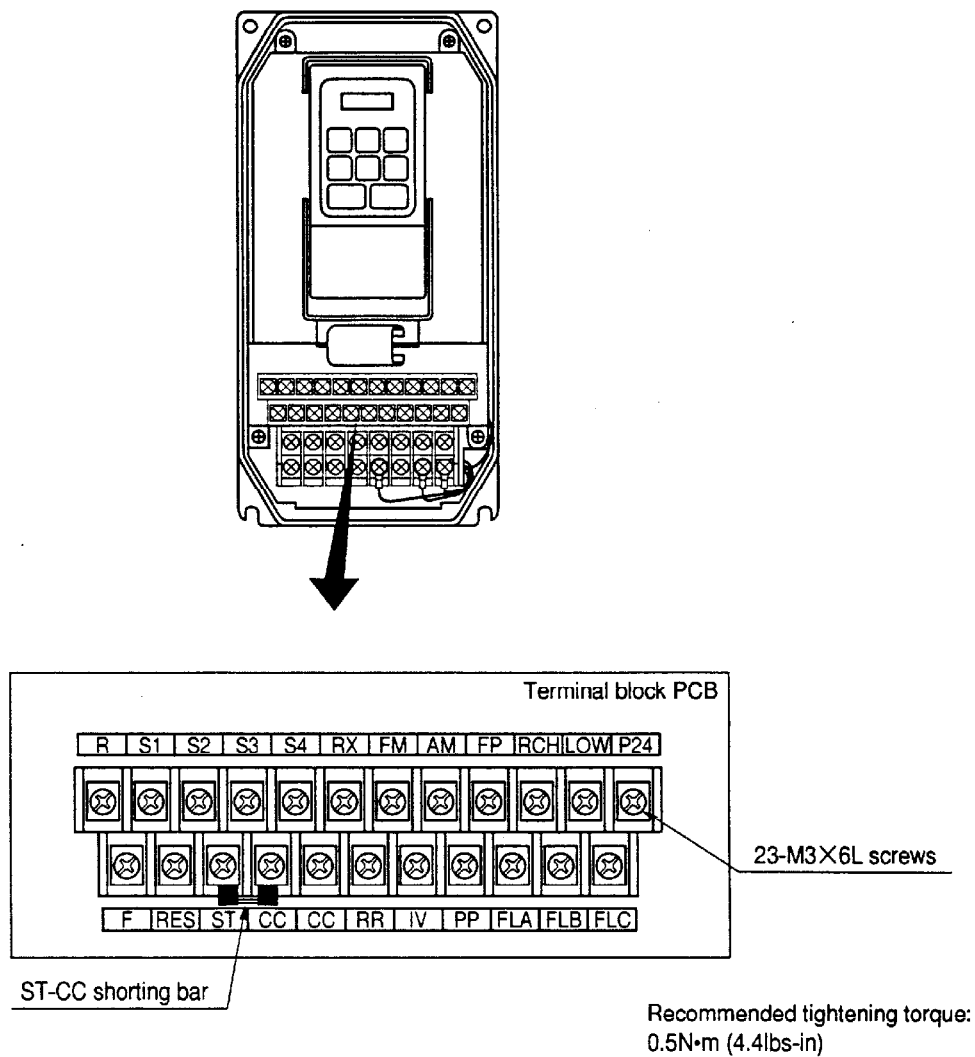


Fig. 6.2.2 Control terminal block

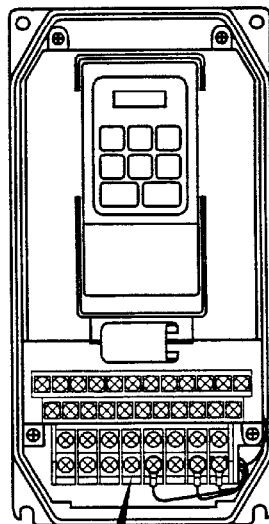

Terminal block cover

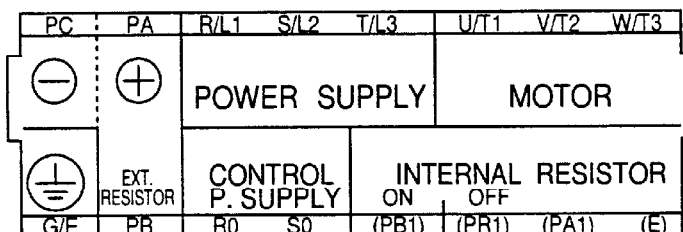

Terminal block

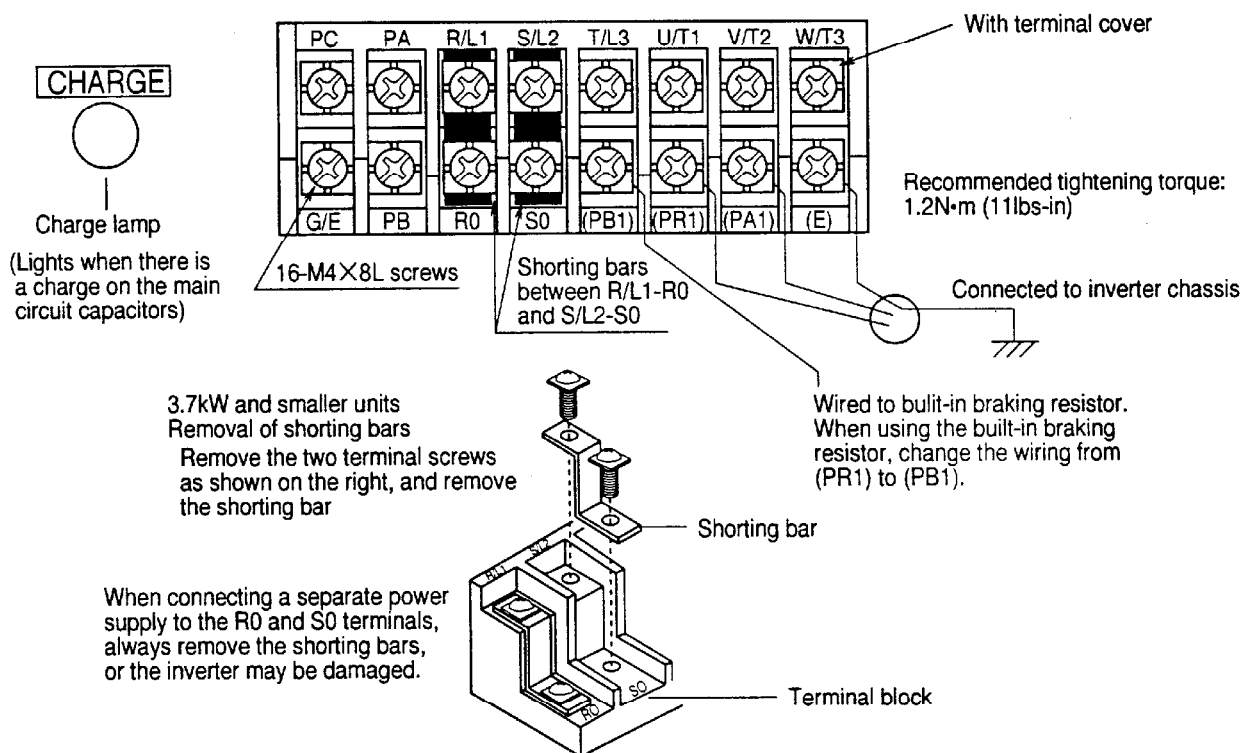


Fig. 6.2.3 Main circuit terminal block (3.7kW and smaller units)

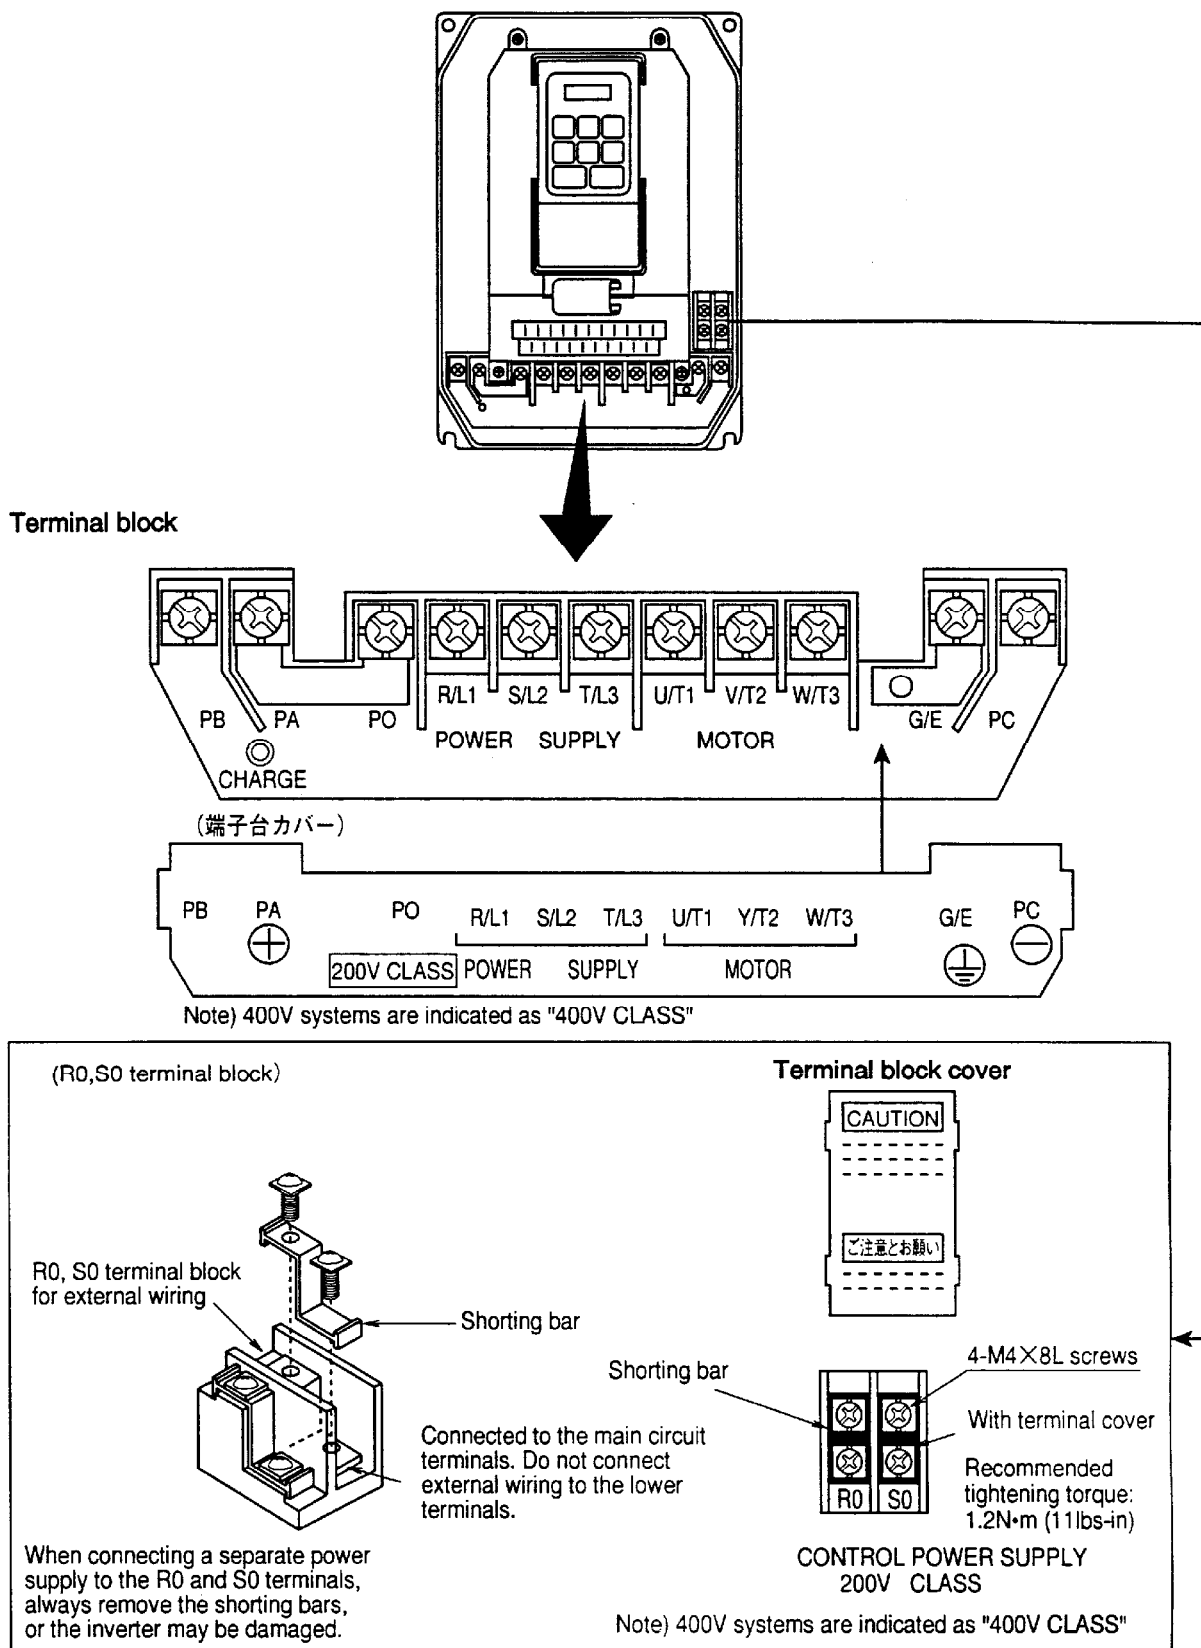


Fig. 6.2.4 Main circuit terminal block (5.5kW to 7.5kW units)

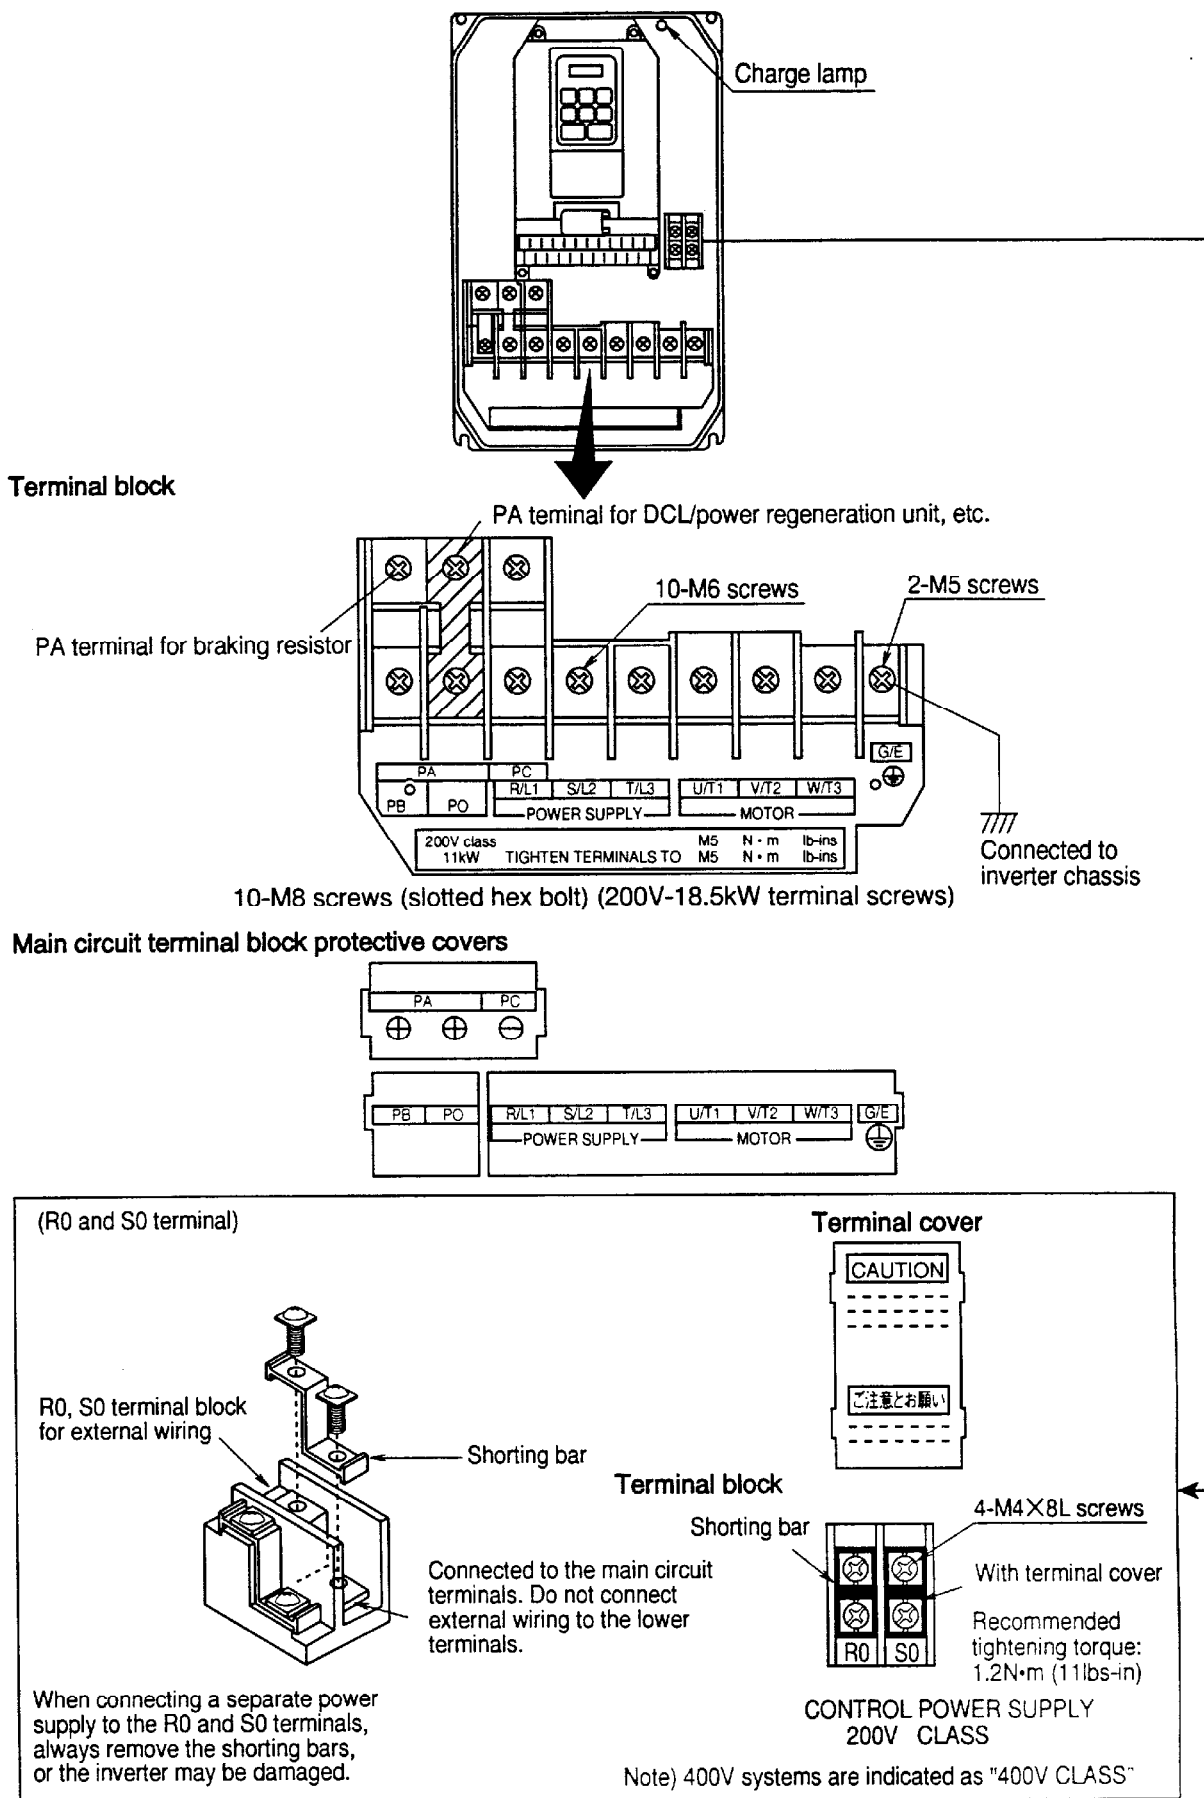


Fig 6.2.5 Main circuit terminal block (11kW to 18.5kW units)

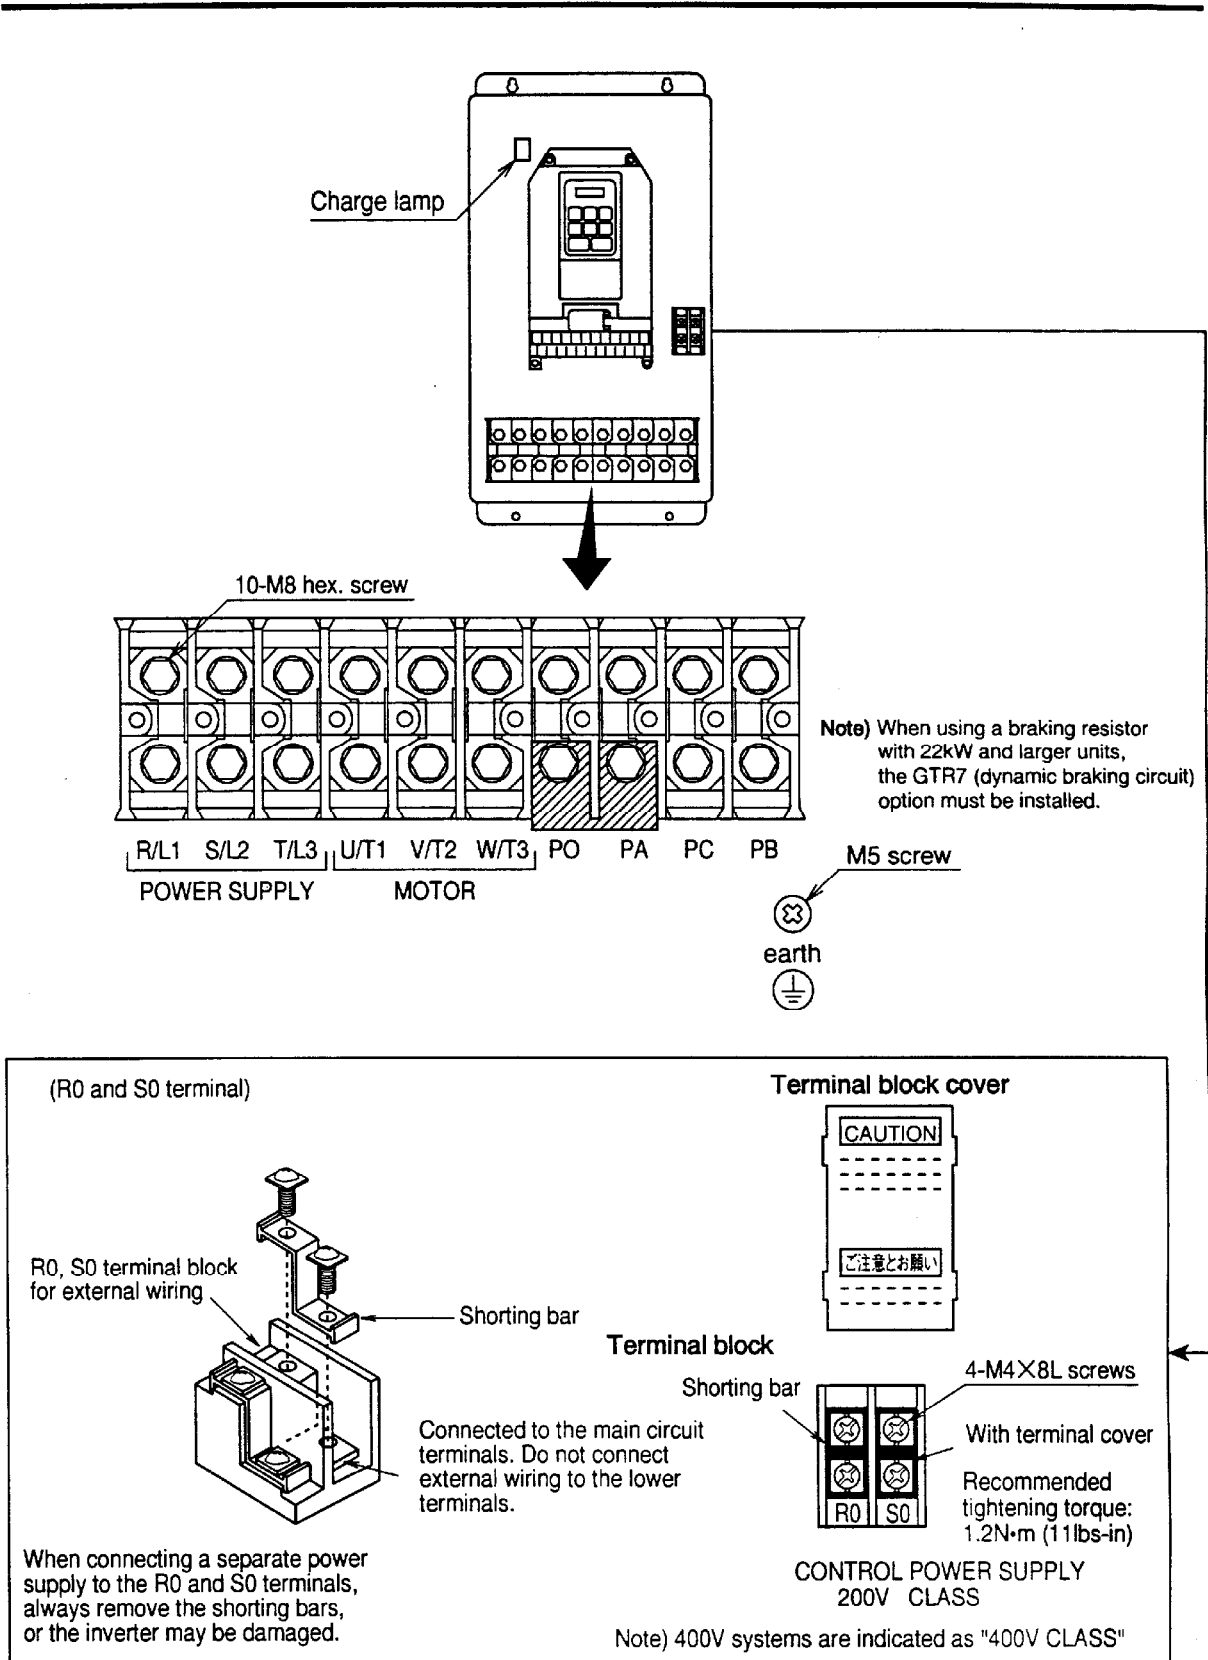


Fig 6.2.6 Main circuit terminal block (22kW to 30kW units)

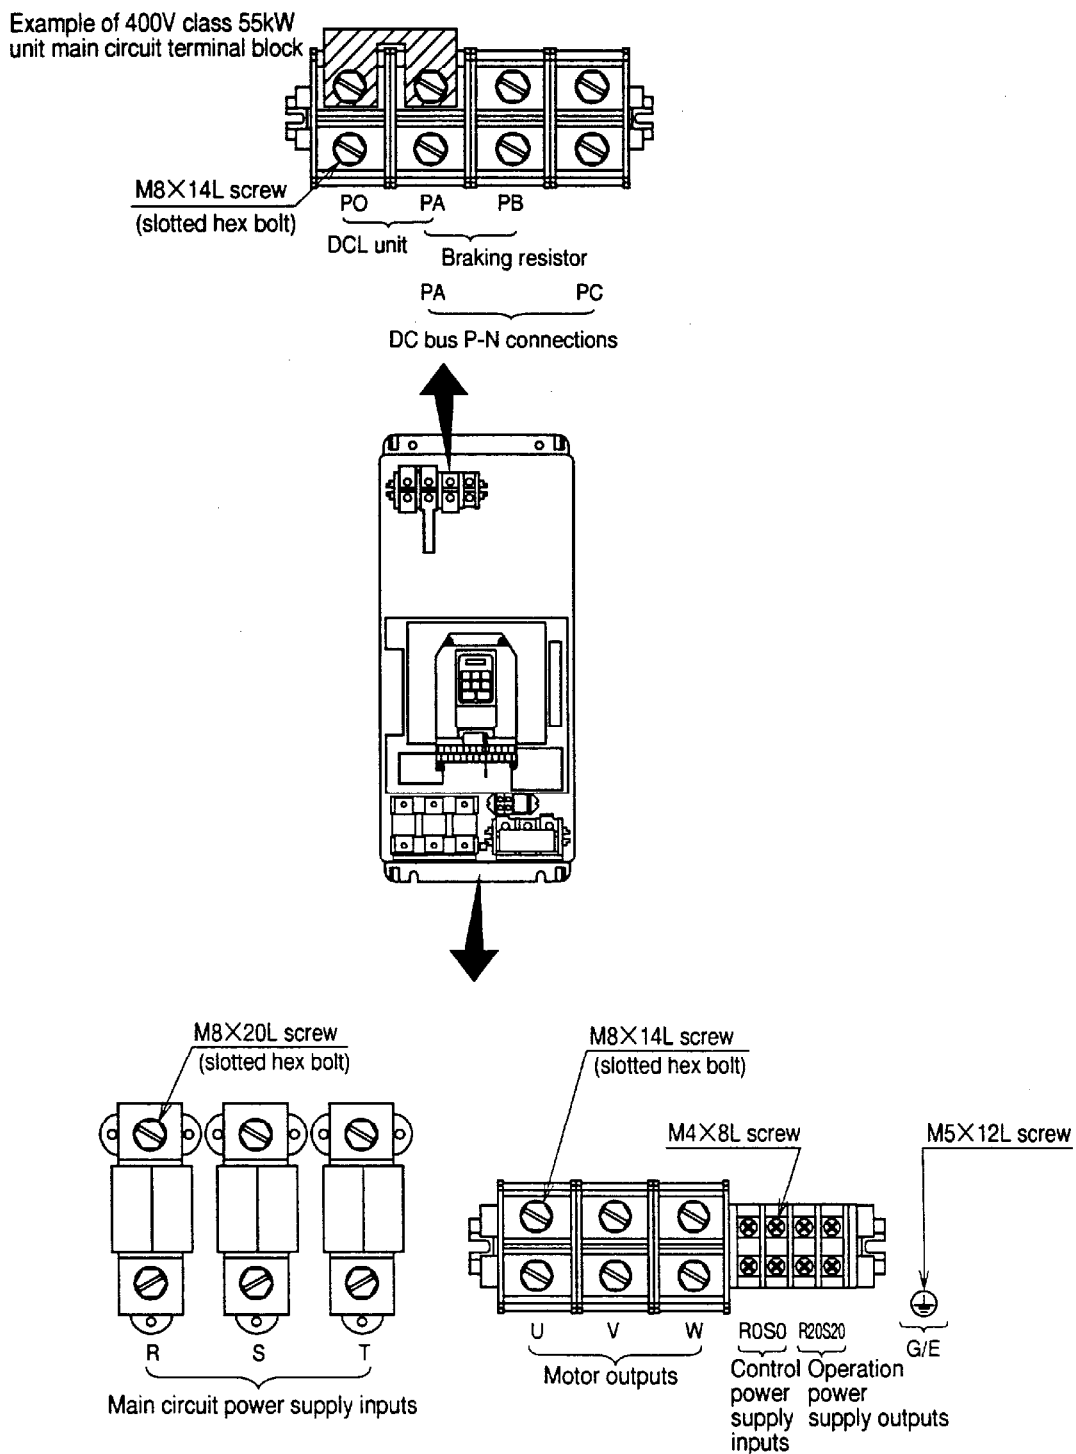


Fig 6.2.7 Main circuit terminal block (37kW to 75kW units)



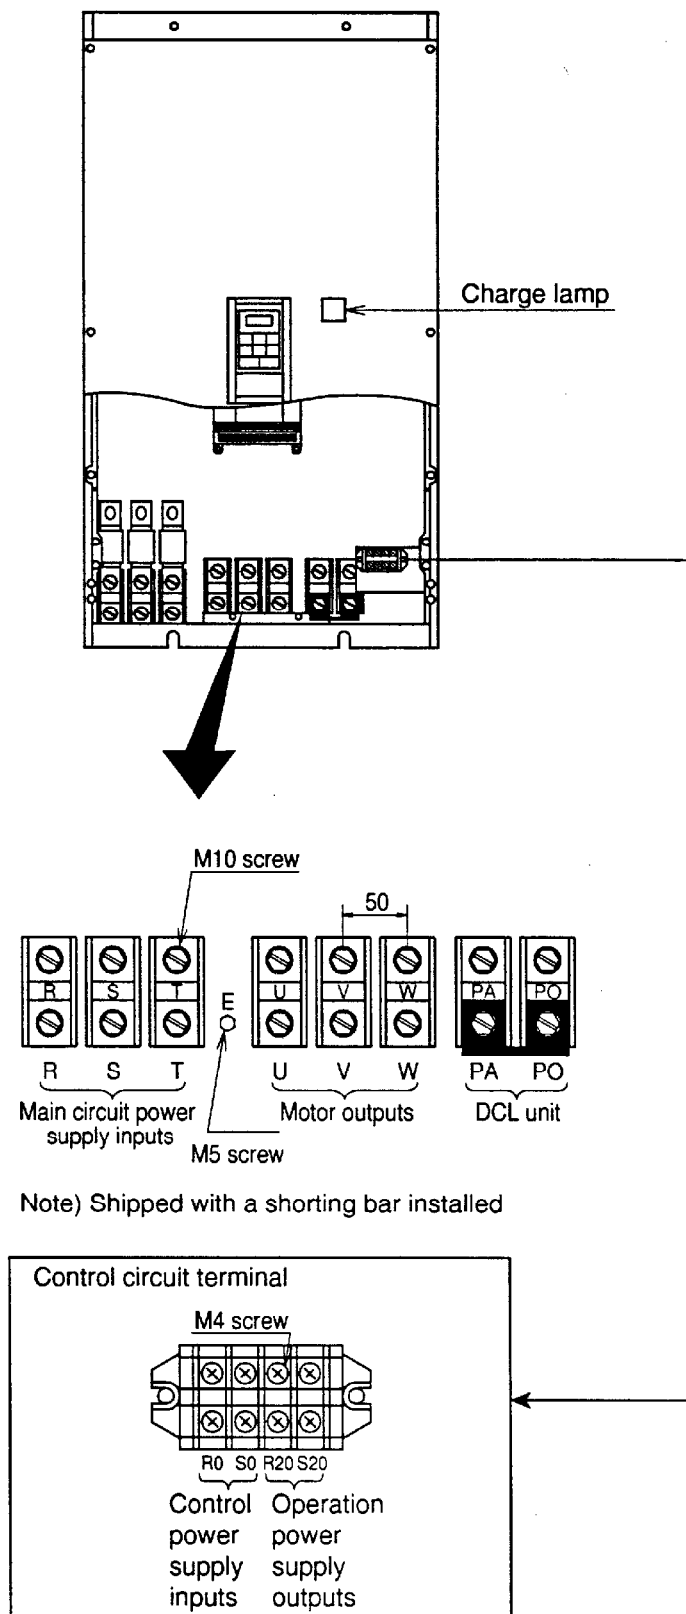


Fig 6.2.8 Main circuit terminal block (110kW and 132kW units)

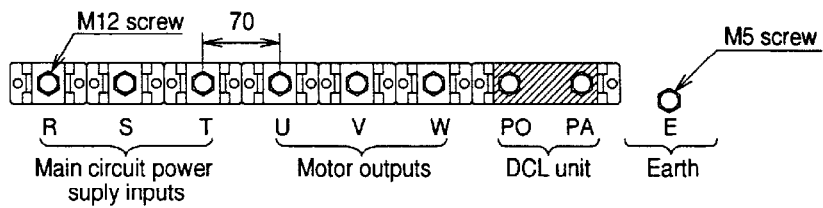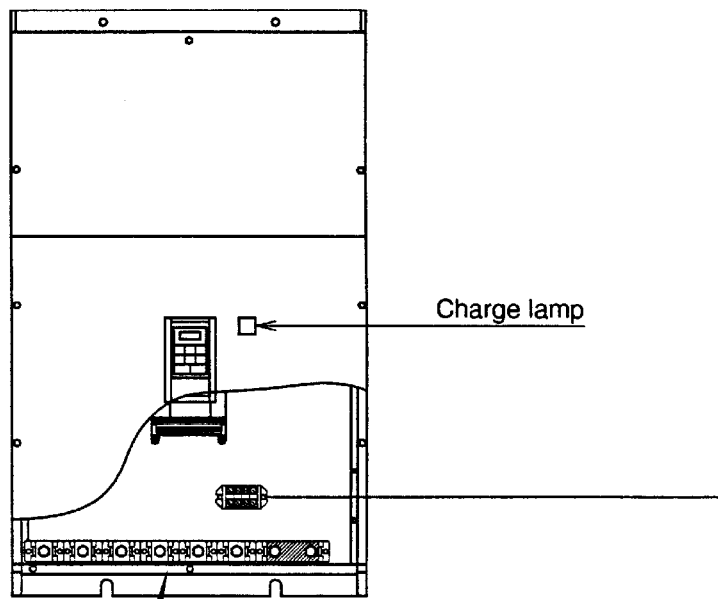

Note) Shipped with a shorting bar installed

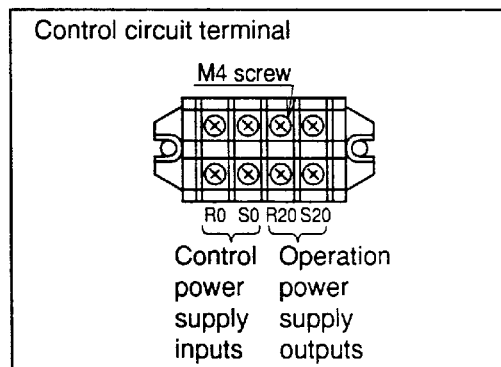


Fig 6.2.9 Main circuit terminal block (160kW units)


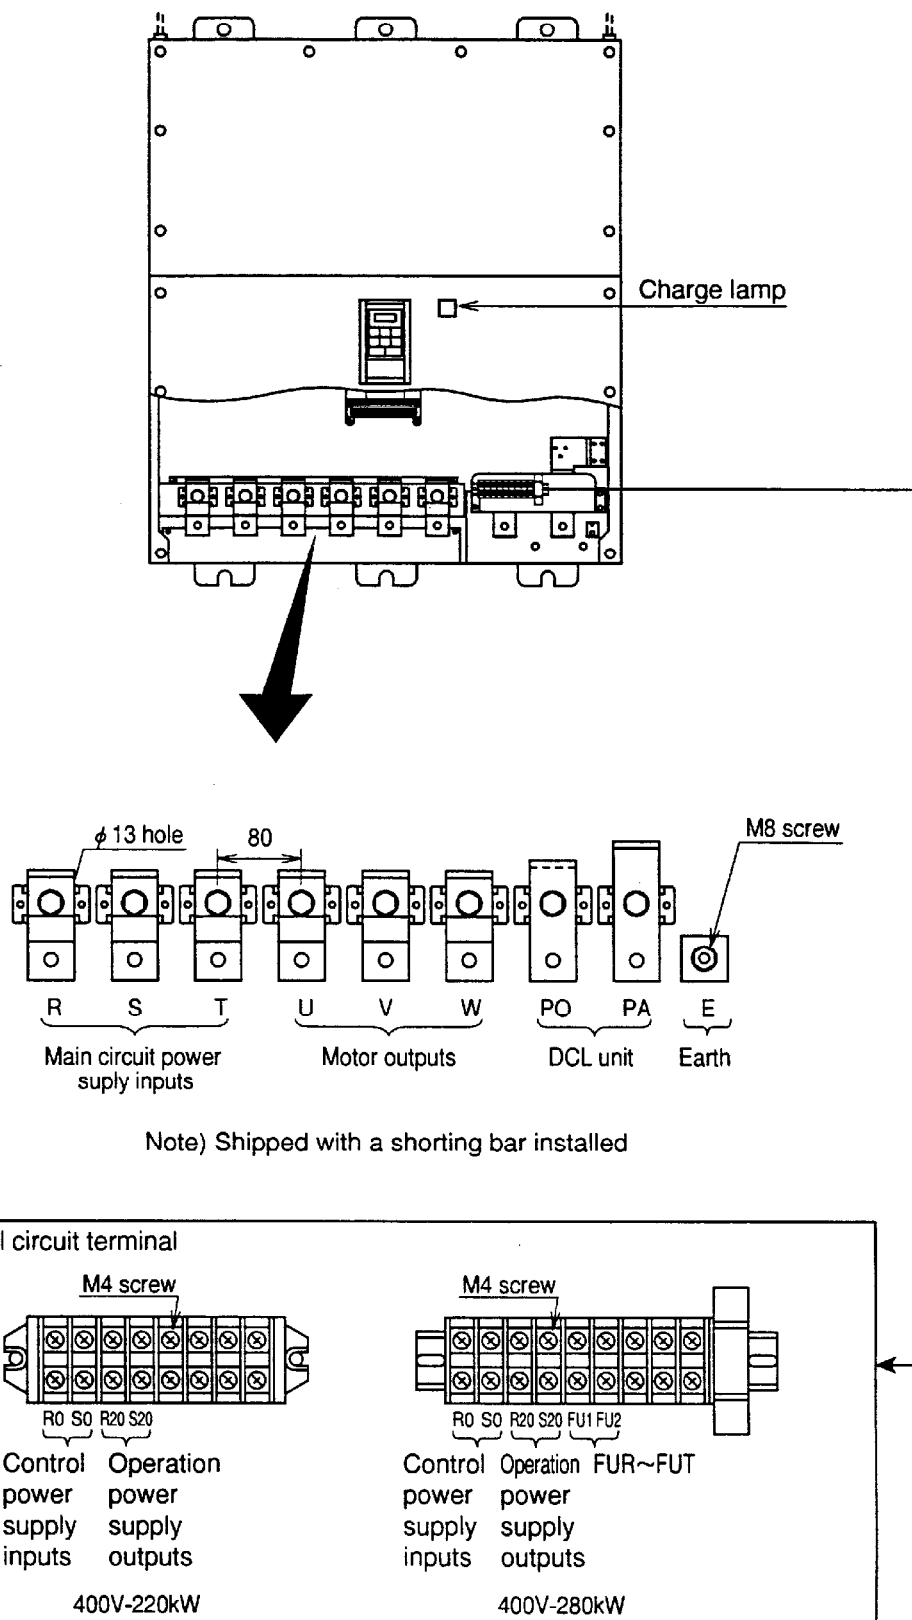


Fig 6.2.10 Main circuit terminal block (220kW and 280kW units)

7. Operation and Adjustment

7.1 Operation Panel

The operation panel (hereafter, panel) allows the inverter to be operated, and functions and data to be set and monitored.

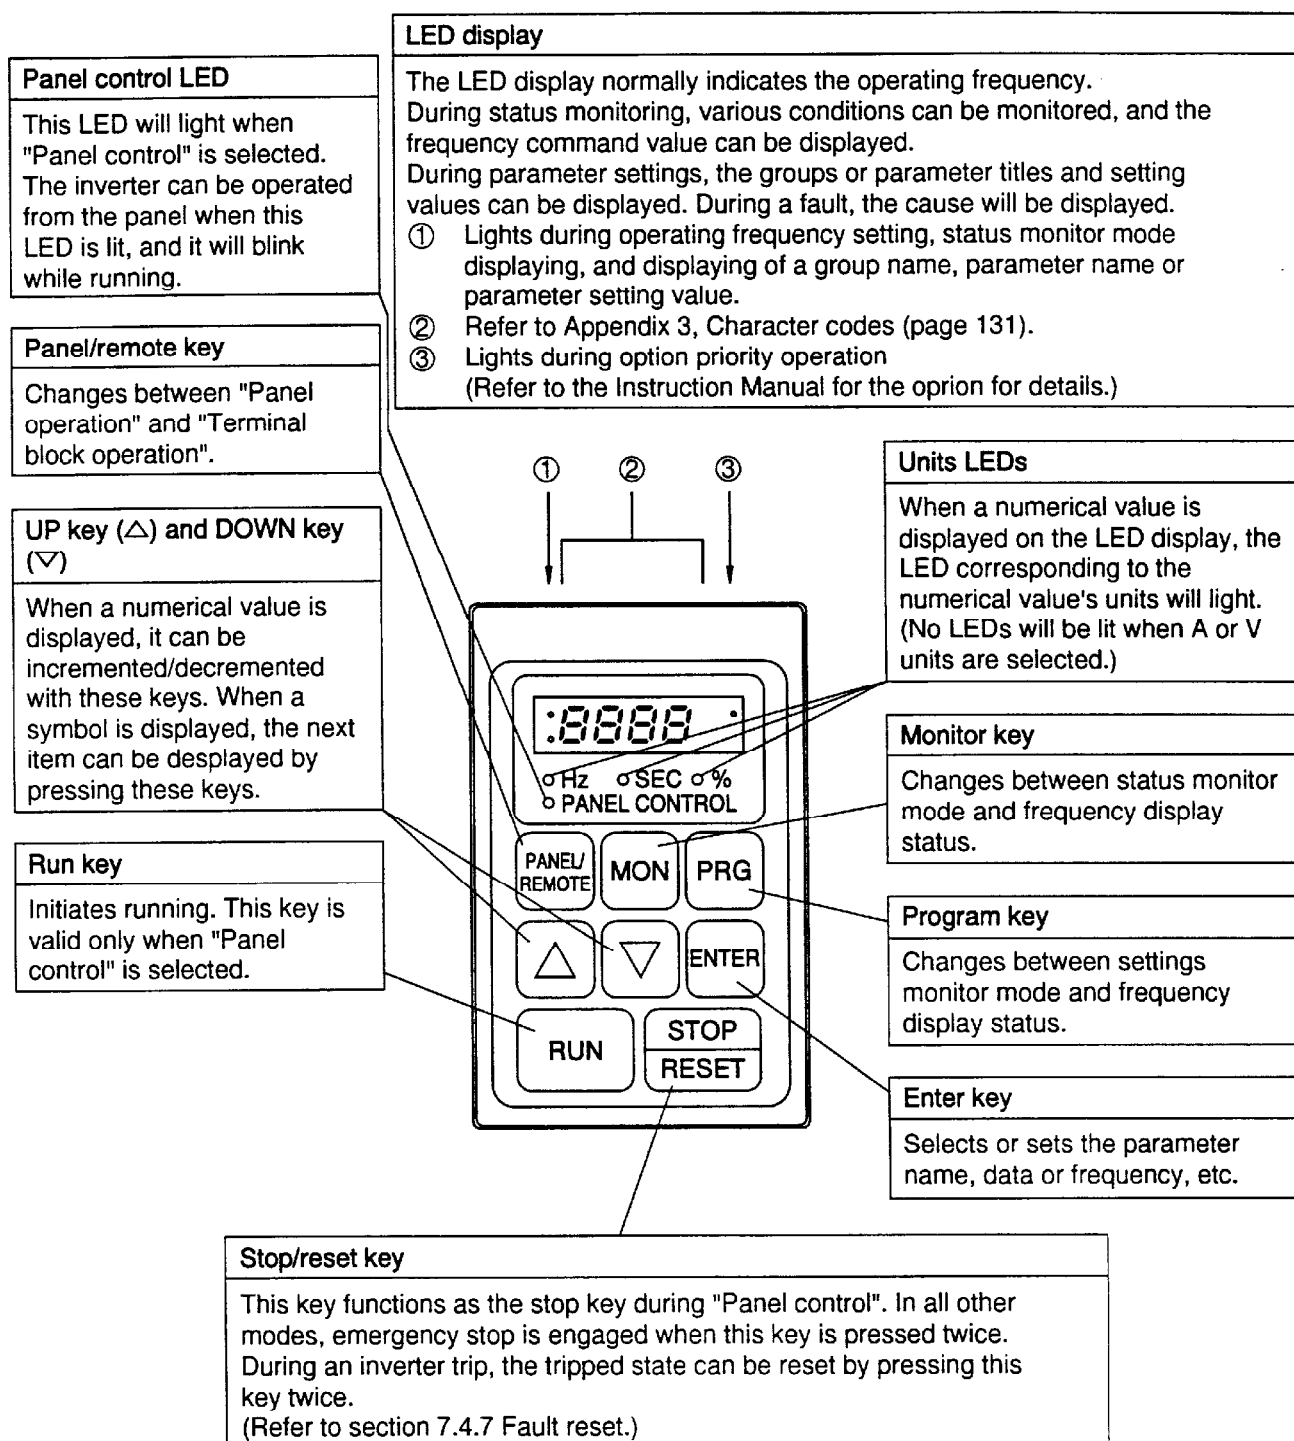

7.2 Basic Operation

Verify the following items before starting operation.

(1) Check that the wiring is correct.

(Refer to Chapter 6, Standard connections, on page 15.)

(2) Check that the power source is the correctly-rated value.

After confirming that there are no mistakes, perform simple operations with the standard settings.

Operate according to the following procedure.

When performing trial operations, run the motor at a low frequency (approx. 10Hz).

(1) Starting and stopping via the panel




Step	Operation
1) Power ON	Turn ON the power source's non-fuse breaker (MCCB). If the LED display is OFF, all preparation conditions are not established, so running will not be possible. Terminals ST-CC must be "closed". Running is possible when the LED display is . Remote operation mode from the control terminal block is automatically entered when power is turned on.
2) 	Changeover to "Panel control". The panel control LED will light, and operation from the panel will be possible. (If this key is pressed again, the panel control LED will go out, and remote operation mode from the control terminal block will once again be entered.)
3) 	Set the operating frequency. The frequency command value can be incremented/decremented with the UP key () or DOWN key (). When one of these keys is pressed, the LED display will blink, indicating that the value is being changed. When the desired frequency is displayed, press the key. and the frequency will be alternately displayed on the LED display.
4) 	The frequency will increase according to the acceleration time, and the motor will rotate. The panel control LED will blink while running.
5) 	The frequency will decrease according to the deceleration time, and the motor will decelerate and stop.

Caution

If the power switch is turned off in the 4) state, the motor will coast-stop. However, this method should only be used in the case of an emergency.

Avoid frequent starting and stopping of the inverter by turning the power switch on and off, as this will shorten the life of the inverter.

(2) Changing the frequency while running

Step	Operation
1)   	<p>The frequency can be changed while running by pressing the UP key (Δ) or DOWN key (∇). Note that the frequency command value will change and the operating frequency will change.</p> <p>The operating frequency can be changed even if the ENTER key is not pressed, but if the power is turned off at this time, the frequency command value will return to the frequency set before changing.</p>

(3) Function setting and adjustment

Use the following procedure to change the "standard settings".

First, refer to the parameter list to find the parameter group where the function to be changed is, and how the symbol name is displayed.

Blind function

In the standard setting, only groups *U*, *F* and *Ut* can be displayed on the panel. The other groups are blinded via the blind function in group *Ut*. Unbind the desired group if necessary. (Refer to *Gr.Ut* **blnd** Blind function on page 55.)

Gr.U

Gr.U displays only those parameters for which the setting value has been changed by the user, and the changed setting value differs from the standard default setting. [Auto edit function]

The parameter settings can also be changed in this group.

However, if a parameter setting value that is the same as the default setting is once again input, that parameter will no longer be displayed in this group.

Gr.U sequentially compares the settings of all parameters to the standard default setting values, so this process may take several seconds. The *Gr.U* display will blink and may not appear to immediately react, but the *Gr.U* search can be stopped by pressing a key other than Δ , ∇ or **ENTER**.

(There is a changed settings memo section on page 150 in which changed setting values may be recorded.)

Panel operation mode selection

Various panel operation modes (**PNOD** in *Gr.Ut*) can be selected to prevent undesired operations from the operation panel. If this parameter is set by mistake, the function will become valid after a power-on initialization or fault reset is executed, and the anticipated key operations may not be possible. In this case, reset the panel operation mode selection **PNOD**.

(Refer to *Gr.Ut* **PNOD** panel operation mode selection on page 89.)

Parameter groups

Gr.U : User parameters	Gr.Br : Communication parameters
Gr.F : Fundamental parameters #1 (V/F, accel/decel etc.)	Gr.D1 : Industrial application parameters (pump)
Gr.F2 : Fundamental parameters #2 (V/F, accel/decel etc.)	Gr.D2 : Industrial application parameters (fan)
Gr.Pn : Panel control parameters	Gr.D3 : Industrial application parameters (conveyor)
Gr.St : Terminal selection parameters	Gr.D4 : Industrial application parameters (hoist)
Gr.Sc : Special control parameters	Gr.D5 : Industrial application parameters (textiles)
Gr.SF : Frequency setting parameters	Gr.D6 : Industrial application parameters (machine tools)
Gr.Pr : Protection parameters	Gr.AN : AM/FM adjustment parameters
Gr.Pt : Pattern run parameters	Gr.Ut : Utility parameters
Gr.Fb : Feedback parameters	Gr.Nt : Motor parameters

The following parameters cannot be changed while running, so stop first and then set them.














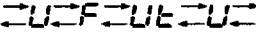


Gr.F	FH	Max. frequency	Gr.Fb	PGPH	PG input-No. of phases
	ULSL	Maximum voltage frequency voltage selection	Gr.Nt	Nt.P	No. of motor poles
	Pt	V/f pattern		Nt.tn	Auto-tuning
Gr.Ut	RPL	Industrial application parameters selection			
	tYP	Standard setting mode selection			

The following parameters can be changed while running, but the function will become valid only after the motor has stopped (0.00Hz)

Gr.Ut	CNOd	Command mode selection	Gr.Nt	Nt.C	Motor rated capacity
	FNOd	Frequency setting mode selection		Nt.t	Motor type
	PNOd	Panel operation mode selection		Nt.u	Motor rated voltage
				Nt.F	Motor rated frequency
				Nt.r	Motor rated rpm

★ **PNOd** becomes valid only after resetting.


The method for making setting changes is explained below using maximum voltage frequency ($G_r.F$, $U_L 1$) as an example.

Key operation	LED display	Operation
	0.0	Operating frequency is displayed (standard monitor mode)
1) 	:Gr.U	The mode changes from standard monitor mode to parameter setting mode. Gr.U , the first group name, will be displayed.
2)   	:Gr.U ↓ :Gr.F	Select the desired group name with the Δ / ∇ keys.  When the desired group name is displayed, press ENTER to display the parameter names in that group.
3)  	:FH ↓ :UL 1	Select the name of the parameter to be changed with the Δ / ∇ keys.
4) 	:UL 1 ↓ :60.0	When the desired parameter name is displayed, press ENTER to display the current parameter value.
5)   	:50.0 :UL 1 → 50.0 :UL 1	Change the parameter value with the Δ / ∇ keys. When the desired parameter value is displayed, press ENTER to save it. After the parameter name and data are alternately displayed, the parameter name will once again be displayed.
6)  or  or  or  		Returns to step 4) above. Returns to standard monitor mode. Moves to status monitor mode. Returns to step 3) above.

Another mode can be moved to in any of the above states by pressing the **PRG** or **MON** keys. However, if **ENTER** is not pressed first after changing a parameter setting value, the new value will not be saved, and the original setting will be returned to when the power is turned off. Always press the **ENTER** key after changing a setting.

7.3 Operation Modes

This inverter unit has the following four operation and display modes.

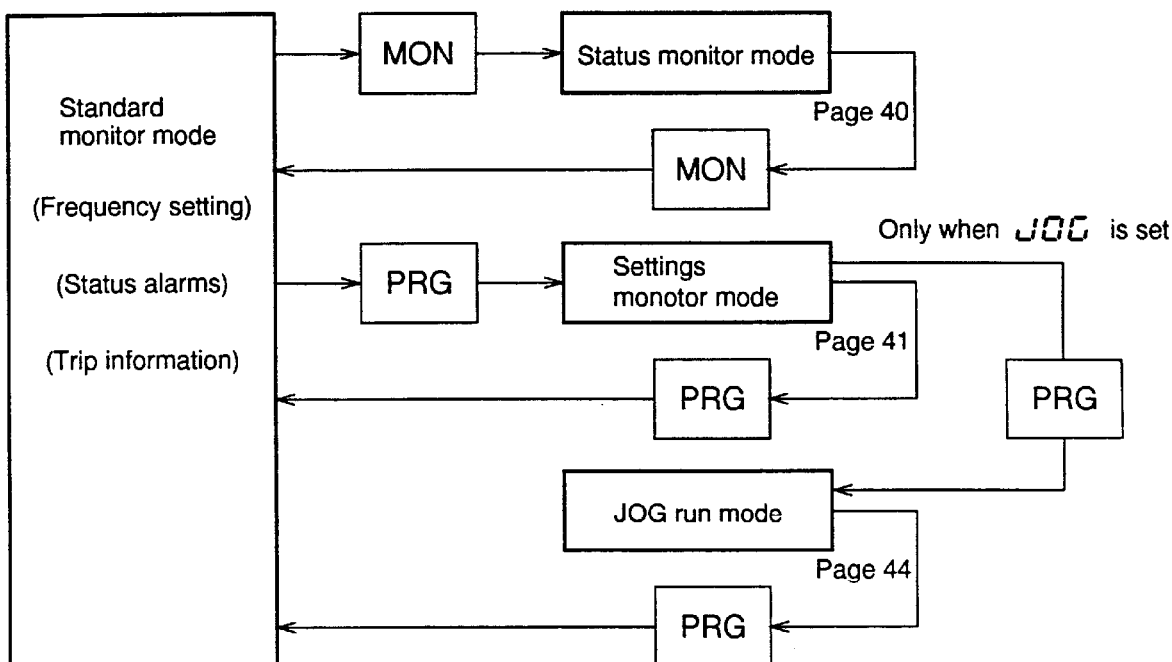

7.3.1 Standard Monitor Mode

Standard monitor mode is automatically entered when power is turned on. The inverter's output frequency can be monitored and the frequency command value can be set in this mode. Status alarms are displayed while running and trip data is displayed during an inverter trip.

(1) Frequency command value setting function

This function can be used by pressing the Δ ∇ keys in standard monitor mode. Status monitor mode can be entered by pressing **MON** and settings monitor mode by pressing **PRG**. (Standard monitor mode will once again be entered if the same key is pressed again.) If the frequency command value is changed while running, the operating frequency will change according to the new value. If the command value is ahead of the operating frequency, the motor will accelerate or decelerate according to the acceleration/deceleration time.

This function can be locked out (changes not possible) with the "frequency setting mode selection" (**FNOd** in **Gr.Ut**).

(2) Forward/reverse run changeover during run function

Forward and reverse run are possible by pressing the following keys in standard monitor mode.

ENTER + Δ Forward run
ENTER + ∇ Reverse run

Note) \square key + \square key means to press the two keys simultaneously.

This changeover is valid only via panel operation, and the setting value of **Fr** in **Gr.Pr** will also change when these key sequences are executed.

(3) Status alarms

Alarm characters and the frequency setting may be alternately displayed on the LED in standard monitor mode. The following four types of characters may be displayed.

C ...When current exceeding the overcurrent stall level flows.

P ...When voltage exceeding the overvoltage stall level is generated.

L ...When 50% or more of the overload trip value is reached.

H ...When the temperature reaches the overheat protection alarm setting level.

Several alarms may also be displayed simultaneously. (" **LC** " " **PC** " " **LPC** ")

The alarms will automatically go out when the alarm condition is removed.










(4) Trip information

The standard monitor mode trip display will be entered immediately when a trip occurs.


Display	Explanation
OC 1	Overcurrent during acceleration
OC 2	Overcurrent during deceleration
OC 3	Overcurrent during constant-speed run
OC 1P	DC section overcurrent during acceleration
OC 2P	DC section overcurrent during deceleration
OC 3P	DC section overcurrent during constant speed run
OCL	Load-end short circuit (output terminal check) trip during start-up
OCRA 1	U-phase short circuit
OCRA 2	V-phase short circuit
OCRA 3	W-phase short circuit
OP 1	Overvoltage during acceleration
OP 2	Overvoltage during deceleration
OP 3	Overvoltage during constant-speed run
OL In	Inverter overload trip
OL M	Motor overload trip
OCr	Dynamic braking resistor overcurrent trip
OLr	Dynamic braking resistor overload trip
OH	Overheat trip
EFU	DC fuse cut
E	Emergency stop
EEP 1	EEPROM fault (write error)
EEP 2	Initial read fault
Err 2	RAM fault
Err 3	ROM fault
Err 4	CPU error trip
Err 5	Communication interruption error
Err 6	Gate array fault
Err 7	Output current detector fault
Err 8	Option PCB fault trip
Err 9	Optional ROM drop-off error
UC	Low-current operating condition trip
UP 1	Undervoltage trip (main circuit)
Ot	Overtorque trip
EF 1 or EF 2	Earth-fault trip
Et n	Auto-tuning error
EtYP	Inverter typeform error (Special error, refer to page 42.)
nErr	No error (Refer to past trip display on page 35.)

The inverter status at the time of the saved trips (trips that previously occurred) can also be read. (Refer to Status monitor mode on page 40.)

Trip occurrence example
(Overvoltage trip occurrence during deceleration)

Key operation	Example display	Explanation
	<i>OP2</i>	Standard monitor mode (Trip display will blink) The motor enters the coast-stop state.
	<i>: 40.0</i>	Operating frequency at time of trip
	<i>:Fr - F</i>	Run direction at time of trip
	<i>: 60.0</i>	Operating frequency command value at time of trip Note)
	<i>:C 130</i>	Load current (%) at time of trip Note)
	<i>:V280</i>	Input voltage (V) at time of trip Note)
	<i>:V 150</i>	Output voltage (V) at time of trip Note)
	<i>:R.....</i>	Input terminal status at time of trip
	<i>:bllll..</i>	Input terminal status at time of trip
	<i>:Ollll..</i>	Output terminal status at time of trip

If there are past trips, the trip status information for a max. of four trips can be displayed in the same manner. If **MON** is pressed, the initial display will be returned to.

If the  key is held down during the above steps, the display will change to the next item every 0.5 sec. The trip title display state can be changed to if the **MON** key is pressed at any time.

★ The trip status monitor function will remain active until power is turned OFF or the trip is cleared.

Note) The display will follow **non 1** to **non 4** in *Cr. Ut* .



























Other monitor items can be displayed by changing the settings of **non 1** to **non 4** before clearing the trip.

The fault trip hold function will not maintain fault status after power is turned off, after a reset, or if a fault occurs during CPU initialization. Instead, the current monitor item will be displayed.

7.3.2 Status Monitor Mode

This function monitors the various status items (frequency setting, output voltage, current, terminal information, etc.). This mode can be entered by pressing the **MON** key in standard monitor mode . To exit this mode, press the **PRG** key to move to settings monitor mode, or **MON** to return to standard monitor mode.

Example of monitor operation in standard monitor mode.
(Assume that the motor is running.)

Key operation	Example display	Explanation
	60.0	Standard monitor mode (operating frequency is displayed)
MON	:F r -F	Run direction (Forward run <i>F</i> , reverse run <i>r</i>) Note 1)
 	: 60.0	Operating frequency command value Note 2) Pr.03 in Cr. Ut
 	:C 100	Load current (%/A) monitor Note 2) Pr.02
 	:U200	Input voltage (V/%) monitor Notes 2) and 3) Pr.03
 	:P200	Output voltage (V/%) monitor Notes 2) and 4) Pr.04
 	:A.....	Input terminal status monitor
 	:b.....	Input terminal status monitor
 	:O.....	Output terminal status monitor
 	:t0.0 1	Cumulative run time Note 5)
 	:OC3 → 1	(Alternating display) past trip 1
 	:OH → 2	(Alternating display) past trip 2
 	:OP3 → 3	(Alternating display) past trip 3
 	:nErr → 4	(Alternating display) past trip 4
 	:F r -F	Run direction (Monitor top menu item)

Note 1) When $\boxed{d15r}$ in $Gr.F$ (reverse run disable selection) is set to 1 , the display will always be:
 $:Fr - F$.

Note 2) Four monitor elements can be selected by the status monitor display selections in $Gr.Ut$.
 In addition, the display units for current and voltage elements can be set to A, V (respectively) or %.

Note 3) The input voltage value displayed is calculated by multiplying $1/\sqrt{2}$ times the DC voltage obtained by rectifying the input voltage. If the input voltage drops below 100V, the display will be:
 $:y - - -$.

Note 4) The display will be: $:P - - -$ when only control power is applied.

Note 5) The cumulative run time is counted only while running.

(The time is not counted when the output frequency monitor is displaying 0.0 .)

The value shown is in 100-hour units ($00.1 \sim 999$: 1hour to 99900 hours)

When the $\boxed{\Delta}$ $\boxed{\nabla}$ keys are held down during the above steps, the display will change to the next item every 0.5 sec. The run/stop, frequency display status or settings monitor mode can be entered, and terminal input operation mode can be switched to (only when stopped) at any point in the process. The \longleftrightarrow symbol in the example indicates that the left and right symbols are alternately displayed every 0.5 sec.

7.3.3 Setting Monitor Mode

This mode is entered by pressing the \boxed{PRG} key in standard monitor mode.

To exit this mode, press the \boxed{PRG} key to move to standard monitor mode, or the \boxed{MON} key to move to status monitor mode.

As described below, this mode both displays parameters and settings, and contains the setting and adjustment functions.

The "Panel Operation Mode Selection" (\boxed{PNOd} in $Gr.Ut$) must be set to 32 or greater in order to change parameter settings. (The standard default setting allows this.)

The "Panel Operation Mode Selection" parameter can be changed even when set to "parameter changes prohibited".

(1) Parameter setting and display function

Use the following procedure to set the desired parameter value.

1. Press \boxed{PRG} to enter setting monitor mode.
2. At the group title display, press $\boxed{\Delta}$ $\boxed{\nabla}$ to select the desired group, then press \boxed{ENTER} to display the group's parameter names.
3. At the parameter name display, press $\boxed{\Delta}$ $\boxed{\nabla}$ to select the parameter name, then press \boxed{ENTER} to display the data setting.
4. At the data setting display, change the data with the $\boxed{\Delta}$ $\boxed{\nabla}$ keys.
5. Save the changed data by pressing \boxed{ENTER} .

(2) Settings monitor mode adjustment function (Parameter group **Gr.AN**)













This function is used to adjust the scale when an analog meter is installed to monitor the output frequency or current.

This adjustment is done in the same manner as the parameter setting and display function, except that the meter indicator amplitude changes, instead of the LED display, when the \triangle ∇ keys are pressed.

The value indicated by the meter is adjusted to match the LED display, and is adjusted while running.

If **Gr.AN** is not displayed, set **BLnd** (blind function) in **Gr.Ut**. (Refer to page 55.)

Example of FM (Frequency Meter) adjustment

Key operation	Example display	Explanation
	60.0	Standard monitor mode (operating frequency is displayed)
	:Gr.U	Change to setting monitor mode.
	:Gr.AN	Select Gr.AN . (The group name will change when \triangle ∇ are pressed.) UFZF2 ~ UtnttU
	:Gr.AN → :FNSL	Set the group. The first parameter name will be displayed.
	:FNSL	Select the parameter name. (The parameter name will change when \triangle ∇ are pressed.) FNSL FNSL ANSL AN
  	FNSL : 0 :FNSL → 0	Set the parameter. The parameter setting will be displayed. Select the FM terminal function with the \triangle ∇ keys to output the pre-compensation reference frequency. Set the data.
	:Fn	Display the next parameter name.
	: 60.0	Set the parameter. The FM adjustment mode will be entered. (The adjustment value will be displayed.)
 ⋮ 	: 60.0 60.0	Adjust the frequency meter value with the \triangle ∇ keys. (The display will blink) → (The LED display will not change, but the meter indicator will move.) → (Adjust with the \triangle ∇ keys until the LED display and meter value are the same.) The adjustment value will be stored in inverter memory. (The blinking will stop.)
	60.0	Move to standard monitor mode (frequency display).

Note) When DC voltage is selected for **FNSL** or **ANSL** and the main circuit power is turned OFF (**NOFF** status), the FM (AM) output will not be 0, but instead will show a slight output.

(3) Setting value alarm display

When a setting value and one of the following alarms are alternately displayed on the LED, a setting value limitation is indicated.

H I alarm (upper limit alarm)--- When the upper limit of the setting range has been reached, or when the setting value of the current parameter being changed exceeds its upper limit value as a result of another parameter setting value being changed. (In the latter case, the value will be corrected to its upper limit value.)

L O alarm (lower limit alarm)--- When the lower limit of the setting range has been reached, or when the setting value of the current parameter being changed exceeds its lower limit value as a result of another parameter setting value being changed. (In the latter case, the value will be corrected to its lower limit value.)








The data setting of parameters that have an adjustment range limited by the setting values of \boxed{LL} and \boxed{UL} , such as the preset speed frequency parameters, cannot exceed the values of \boxed{LL} and \boxed{UL} .

When the \boxed{FM} , \boxed{UL} or \boxed{LL} parameter values are changed, the setting values of some parameter may exceed their limits as a result. In this case, an alarm will be displayed when a parameter with a setting exceeding its adjustment range is selected and adjustment is attempted. To change a parameter with this type of setting value, the moment that the \triangle ∇ keys are pressed, the alarm will be displayed and the setting value will change to its limiting value.

If \boxed{UL} is exceeded, the value will become the same value as \boxed{UL} .

If \boxed{LL} is exceeded, the value will become the same value as \boxed{LL} .

Example when \boxed{UL} =60Hz, \boxed{LL} =40Hz, and $\boxed{Sr01}$ =80Hz is set.






Key operation	LED display	Operation
	:Gr.U	
	:Gr.SF	Select Gr.SF.
	:FC1	
 	:Sr01 : 80.0	Select $\boxed{Sr01}$.
	: 60.0 --HI	(Upper limit alarm) The value becomes the UL value. (Same as when the ∇ key is pressed.)
 ↓	: 59.9 : "Decreasing" : 40.0 : 40.0 --LO	Hold down the ∇ key. \boxed{LL} is reached (lower limit frequency). The alarm information will be alternately displayed as long as the ∇ key is pressed.

7.3.4 JOG Run Mode

This mode is used to run the inverter at low speeds, and especially allows short-time runs (inching) to be done easily. The following explanation is for executing jog from the panel. When using terminal block signals to execute jog, refer to the parameter explanation section for $Gr.SF$ JOG .

This mode is entered via the following procedure.

The JOG run frequency (JOG in $Gr.SF$) and JOG stop control ($JSEP$ in $Gr.SF$) parameters must be set from settings monitor mode before entering this mode. (Refer to page 75.)

Key operation	Example display	Explanation
 	:Gr.U :FJOG	Press the PRG key twice. The JOG mode will not be entered if a different key sequence is pressed. The JOG mode will be entered when the PRG key is pressed the second time only if panel control mode is selected and the JOG run frequency setting value is not 0Hz. (Forward JOG) If panel control mode is not selected or the JOG run frequency is not set, operation will return to standard monitor mode (frequency display) when the PRG key is pressed the second time.
	:rJOG	Execute reverse JOG by pressing ∇ . Execute forward JOG by pressing \triangle .
	5.0	The JOG run frequency will continue to be output while the RUN key is held down.
	0.0	Standard monitor mode will be returned to when PRG is pressed.

Note) If positioning is attempted in JOG run mode and the motor shaft does not smoothly stop at the desired location, set the output short-circuit detection selection ($OCLS$ in $Gr.Pr$) setting value to 2 (position sensing during JOG). (Refer to page 85.)

7.4 Operation Mode Selection

The methods for operation and adjustment from the operation panel, validating/invalidating operating commands from the terminal block, selection of the stopping method, and resetting are explained in this section.

7.4.1 Operation Mode Changeover

Panel operation mode or terminal block operation mode can be selected.

- When terminal block operation mode (REMOTE) is selected, commands from the panel are ignored.
- When panel operation mode (PANEL) is selected, commands from the terminal block are ignored.

The operation mode is changed by the **PANEL/REMOTE** key, and can be done only when the motor is stopped. (When stopped, **OFF** or a frequency display of **0.0** will be shown.)

Terminal operation mode is automatically entered after power is turned on, unless the input mode is preset as explained below. The panel control LED will be lit when panel operation is selected.

7.4.2 Run/stop Command [**CNOd**] in **Cr.Ut**]

The following sources can be selected for run/stop commands (command mode).

CNOd setting	Function
0	Only RS232C input valid
1	Terminal block input valid (Note)
2	Panel input valid
3	Communication option board input valid
4	Panel/terminal changeover possible

Note) The intended input functions are

It * in **Cr.St** : input terminal function setting values 0 to 5, 8 and 9, on page 55.
(Refer to pages 60 and 91 for details.)

7.4.3 Frequency Command Source Setting Function [**FNOd**] in **Cr.Ut**]

This function allows the selection of the frequency command source as follows, according to the frequency setting mode selection parameter (**FNOd** in **Cr.Ut**).

FNOd setting	Function
0	Only RS232C input valid
1	Terminal block input valid
2	Panel input valid
3	Communication/12-bit binary option board input valid
4	Panel/terminal changeover possible

7.4.4 Parameter Setting Function [**PNOd** in **Gr.Ut**]











Parameters can be set in the standard mode, but alternatively, the panel operation mode selection (**PNOd** in **Gr.Ut**) can be changed as follows.

PNOd setting	Function
0	Prohibit all key operations
+ 1	Can perform reset
+ 2	Can perform monitor operations
+ 4	Can perform emergency stop
+ 8	Can perform run/stop operations
+ 16	Can perform parameter read operations
+ 32	Can perform parameter change operations
63	Standard mode (all operations valid)

★ If **PNOd** is set to **3** , **1** (reset operations) and **2** (monitor operations) will be valid.

7.4.5 Standard Parameter Value Reset Function [\boxed{tYP} in $Gr.Ut$]

All parameter values can be changed to standard settings at one time by setting parameter \boxed{tYP} . The operation is performed as described below, but cannot be done while the inverter is running. Stop the inverter before performing this operation.

Key operation	Example display	Explanation
	0.0	Frequency display (stopped condition)
1) 	:Gr.U	Enter parameter setting mode from standard monitor mode. Gr.U will be displayed.
2)   	:Gr.U ↓ :Gr.Ut	Select Gr.Ut with the Δ/∇ key. U-F-F2 ~ U-t-n-t-u When Gr.Ut is displayed, press the \boxed{ENTER} key. the first parameter name will be displayed.
3)   	:APL ↓ :tYP ↓ :0 0	Select tYP with the Δ/∇ keys. When tYP is displayed, press the \boxed{ENTER} key.
4)   	:0 3 In It	Change the setting with the Δ/∇ keys. 1 : Standard setting for 50Hz applications. (See Fig. 7.5) 2 : Standard setting for 60Hz applications. (See Fig. 7.5) 3 : Return to factory settings (Fig. 7.5) Note 2) 4 : Trip clear 5 : Save user-set parameters 6 : TYP 5 reset 7 : Initialize inverter typeform Note 3) When the desired data is displayed, press the \boxed{ENTER} key. In It will be displayed, and operation will return to standard monitor mode.

Notice

- When $\boxed{tYP} = 1$ is selected, only the max. frequency \boxed{FH} , maximum voltage frequency $\boxed{UL1}$, $\boxed{UL2}$, upper limit frequency \boxed{UL} , commercial power/inverter switching frequency \boxed{FCHG} , and frequency setting signals $\boxed{F-P2}$, $\boxed{F-P4}$, $\boxed{F-P6}$, $\boxed{F-P8}$, and $\boxed{F-PA}$ will change to 50. No other data will be changed.
- When $\boxed{tYP} = 2$ is selected, only the above parameters will change to 60.
- Setting \boxed{tYP} is not possible while running. Stop the inverter and then change the setting.

Note 1) A dual display of the previous setting value and current setting value (always 0) is used.

$\boxed{3}$ $\boxed{0}$

Previous setting Current setting

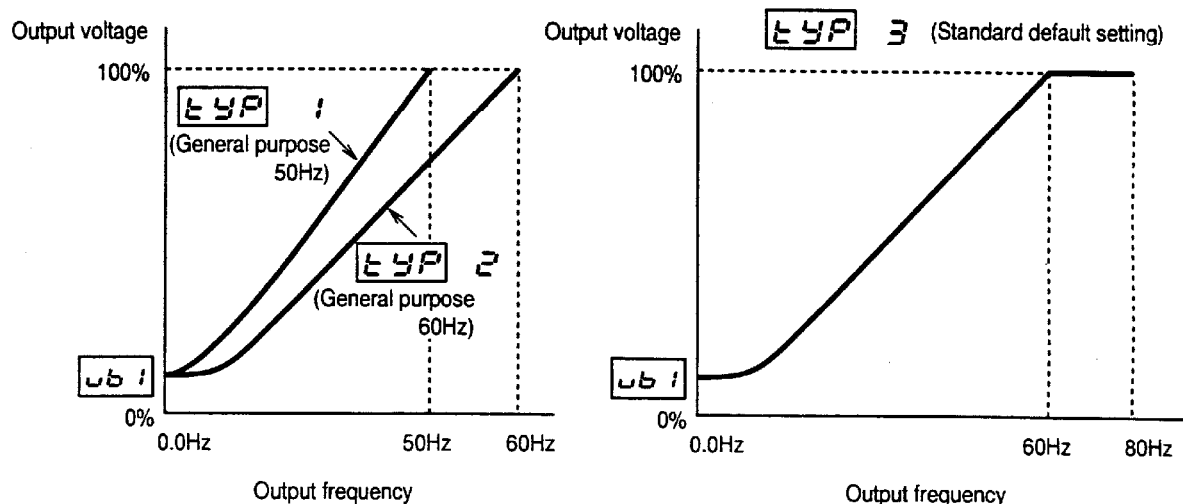


Fig. 7.5 Standard setting Value

Note 2) When $\boxed{EYP} = 3$ is selected, all parameters other than those in $Gr.AN$ will return to factory settings.

Note 3) $\boxed{EYP} = 7$ is used to clear an $EEYP$ error that may occur when a control PCB is installed in a different inverter unit, and to reset the typeform to that of the new inverter. Verify that the inverter typeform contained in the table on page 132 matches the value of \boxed{FON} in $Gr.UE$, and then execute the \boxed{EYP} function.

7.4.6 Selection of Stopping Method from the Panel

In addition to the normal decelerated stop (deceleration according to the set deceleration time) with the $\boxed{STOP/RESET}$ key, the following stopping methods can be used from the panel.

Stopping method	Operation	Method and setting
Coast-stop	The power output to the motor from the inverter is shut off, so the motor will coast and then stop.	This is possible only when operation from the panel is valid. 1. Press $\boxed{PANEL/REMOTE}$ during panel run. 2. Standard monitor mode will be entered, and the LED will display $\boxed{Ct-L}$. 3. Coast-stop will be activated by pressing $\boxed{STOP/RESET}$. (If another key is pressed, the $\boxed{Ct-L}$ display will go out and the process will be canceled. The process will also be canceled if the key is not pressed within 3 seconds.)
Emergency stop (To forcibly stop with the panel when not in panel run mode.)	Select from the following: • Coast-stop • Decelerated stop • Emergency DC injection braking stop (note) The default setting of \boxed{ESEP} in $Gr.PF$ is coast-stop.	Assume that terminal block run mode is active. (Normal stopping is possible when in panel mode.) 1. Press the $\boxed{STOP/RESET}$ key. 2. Standard monitor mode will be entered, and the LED will display $EOPF$. 3. Press $\boxed{STOP/RESET}$ again. 4. The LED will display E , and the motor will stop according to the setting of \boxed{ESEP} in $Gr.PF$. This mode will be canceled if a key other than $\boxed{STOP/RESET}$ is pressed when $EOPF$ is displayed.

(Note)

ESLP in *Gr.Pr* settings: **0** : Coast-stop
1 : Decelerated stop
2 : Emergency DC injection braking stop
 If **2** is selected, also set the DC injection current **dbc** and ESTOP DC injection time **Edbt**.

★ If DC braking is not required during normal stopping when **ESLP** = **2** (emergency DC injection braking stop) is selected, set the DC braking time **dbt** to **0**.

Caution

The emergency stop command forcibly stop the motor with the inverter unit key operation even if the command mode is not set to panel operation mode. This command cannot be prohibited with the command mode selection. When executed, the emergency stop will be regarded as a trip and will be recorded as a past fault.

7.4.7 Fault Reset

Remove the trip cause before resetting an inverter that has tripped due to a failure or other fault. The inverter will trip again if the cause is not removed.

Reset the tripped state with one of the following methods:

Reset

- (1) Turn off the power (until the LED display goes out) Note 1)
- (2) External signal (short circuit between control terminals RES-CC)
- (3) Panel operation

Note 1)

Refer to *Gr.Pr*.
ErCL (page 85).

Resetting with the panel is performed by the following process.

1. Press **STOP/RESET** and confirm that **CLR** is displayed.
2. Press **STOP/RESET** again, and if the trip cause has been removed, the inverter will reset.

★ For the following overload trips, the inverter cannot be reset with an external signal or with the panel during the required cooling time.

OL In : inverter overload
OL M : motor overload
OLr : dynamic braking resistor overload

The standard cooling time settings are as follow:

OL In : Approx. 1 minute after trip
OL M : Approx. 5 minute after trip
OLr : Approx. 30 seconds after trip

Caution

To reset immediately due to an emergency, the power can be turned off to reset the inverter, but if this method is used frequently, the inverter or motor may be damaged.

8. Parameter Explanations


U-F (Fundamental Parameters #1)

UL I	UL SL	V/f settings
UL U I		(Output voltage and frequency ratio setting)


Related parameters

FH Maximum frequency	UL SL Maximum voltage frequency voltage selection
UL I Maximum voltage frequency	UL U I Maximum voltage

The V/f settings are among the most important parameters. The motor voltage to frequency ratio is set by them.

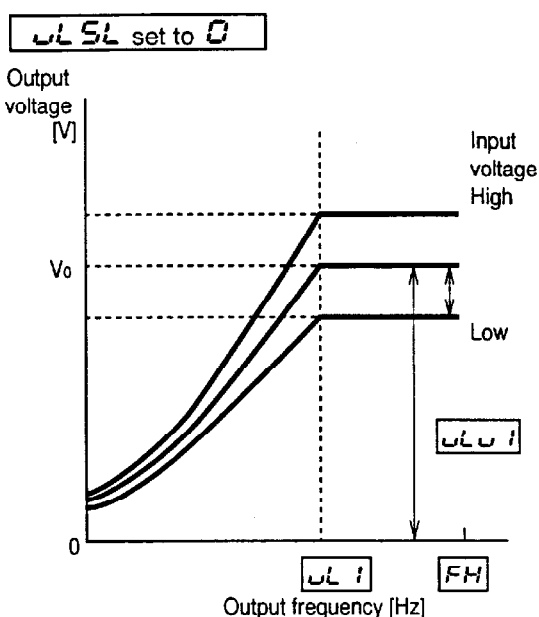

Set to **0** : V_0 fluctuates according to the input voltage

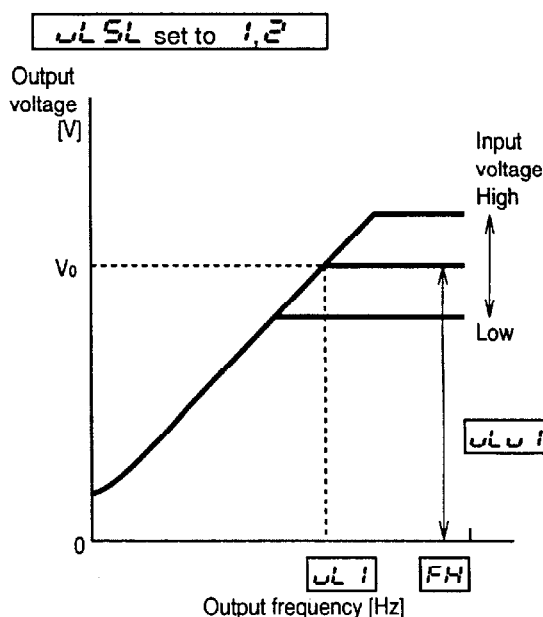

Set to **1** : V_0 is automatically set between the following values according to the input voltage when the power is turned on.

200V class: 200 to 230Vac

400V class: 380 to 460Vac

Set to **2** : V_0 is set with **UL U I**.

- ★ Even if **UL U I** is set higher than the input voltage, the output voltage will not be higher than the input voltage.
- ★ Even if **UL U I** is set when **UL SL** is set to **1**, it will be ignored.

U_r.F



(Fundamental Parameters #1)

F_t**V/f pattern ①**


Related parameters

F_t V/f pattern**ub₁** Voltage boost**ul₁** Maximum voltage frequency**Cr.Nt** **Ne.P** No. of motor poles**Ne.C** Motor rated capacity**Ne.t** Motor type**Ne.u** Motor rated voltage**Ne.F** Motor rated frequency**Ne.r** Motor rated RPM

Constant torque, variable torque, automatic torque boost, automatic energy saving, and vector control can be selected for the V/f pattern.

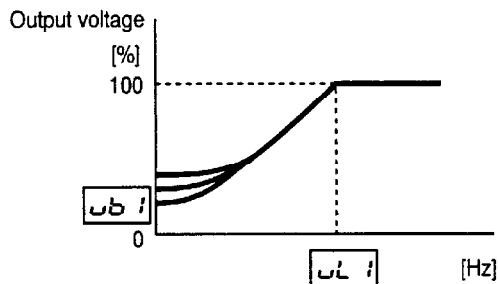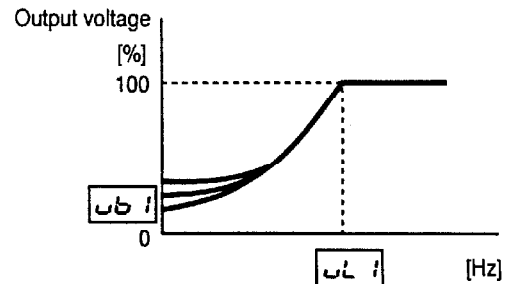F_t set to 1 Constant torque characteristics**F_t set to 2** Variable torque characteristics

- ★ If the voltage boost value is set too high, the motor will be overexcited, and an OL or OC trip may occur. In some cases, this may also shorten the life of the inverter.
- ★ The voltage boost value is automatically initially set for the max. applicable motor according to the inverter capacity. If a standard motor matching the inverter capacity is used, the value does not necessarily need to be adjusted. Even when readjusting, setting to within $\pm 2\%$ of the initial setting value is recommended.

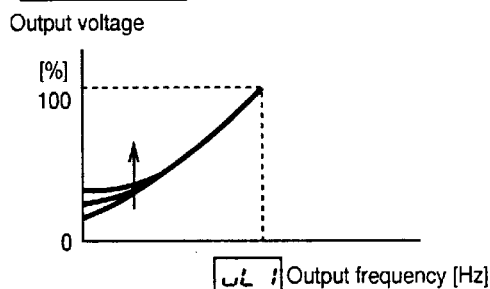F_t set to 3 Automatic torque boost**F_t set to 4** Automatic torque boost with automatic energy saving**F_t set to 5** Vector control

Motor speed fluctuations are suppressed, even with high torque at low frequencies.

F_t set to 6 Vector control with automatic energy saving

The output voltage is closely monitored during the automatic torque boost (vector control) setting, and energy is saved by allowing only the proper amount of current to flow that is suitable for that output voltage.

The load current is detected, and the inverter's output voltage (torque) is automatically adjusted.


F_t and **Ne.P** cannot be changed while running. Even if **Ne.C**, **Ne.t**, **Ne.u**, **Ne.F**, **Ne.r** are changed while running, the changes will not become valid until the motor is stopped (0.00Hz).

G_r.F

(Fundamental parameters #1)

P_E

V/f pattern②

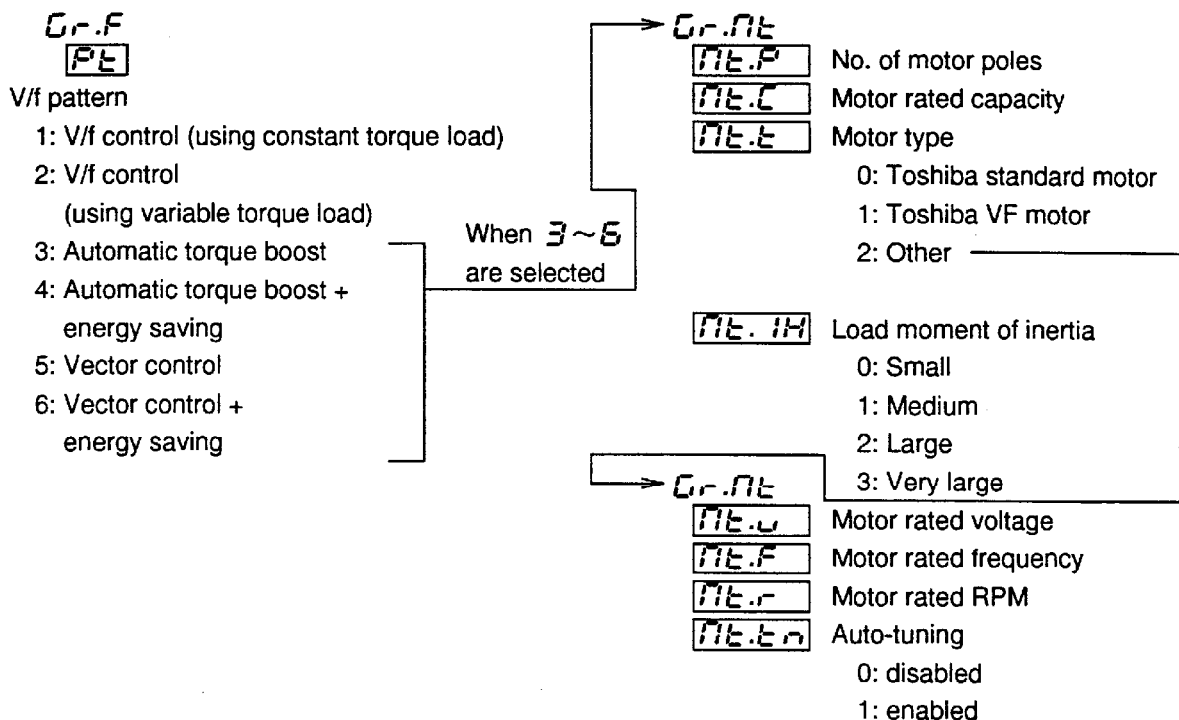Parameter setting process when P_E is set to 3 ~ 6**Motor requirements when using vector control**

- Motor capacity should be the same as the inverter, or should be a Toshiba general purpose squirrel-cage type motor or Toshiba constant torque motor that differs by at most 1 rank.
- No. of motor poles should be 2 to 16.
- Only one machine should be operated (one motor per inverter).
 - ★ The output frequency and set frequency will not match.
 - ★ The max. wire length that can be used between the inverter and motor is 30m. If 30m is exceeded, the torque can be improved during deceleration by using auto-tuning, but the torque will drop slightly near 60Hz.

The vector control function will operate properly with adequate torque and little speed fluctuation when used below the maximum voltage frequency setting value. However, in situations where the maximum voltage frequency is exceeded (field-weakening area), the same type of characteristics may not be achieved. The maximum voltage frequency setting range during vector control use should be between 40 to 120Hz.

The motor rated voltage parameter P_E.U is used only to calculate motor constants. The inverter's max. output voltage will always depend on the maximum voltage U_{LU} during vector control.

Cautions during auto-tuning

- The motor must be completely stopped before executing auto-tuning. Due to motor residual voltage, an error may occur in the tuning if executed immediately after stopping.
- The motor will rotate only slightly during auto-tuning, but use caution, as the main voltage will be applied.
- Auto-tuning will normally finish within 3 sec. If an error occurs, the inverter will trip and motor constants will not be set.
- Auto-tuning of special motors, such as high-speed or high-slip motors, is not possible.

★ The auto-tuning error (refer to page 129) will be displayed when auto-tuning fails.

★ Change the P_E.IH setting value if an overvoltage trip (OP) or overcurrent trip (OC), etc., occur. Then retry the auto-tuning operation.

Gr.F (Fundamental Parameters #1)

ACC 1 DEC 1 Acceleration/deceleration time settings

Related parameters

ACC 1 Acceleration time #1

DEC 1 Deceleration time #1


Gr.F 2 ACC 2 Acceleration time #2

DEC 2 Deceleration time #2

Gr.Ut DSPt Acc/Dec time units selection

• The acceleration time **ACC** is the time to reach the max. frequency **FH** from 0Hz, and the deceleration time **DEC** is the time to reach 0Hz from the max. frequency **FH**.

• The setting adjustment range and resolution can be set by the Acc/Dec time units selection **DSPt**.

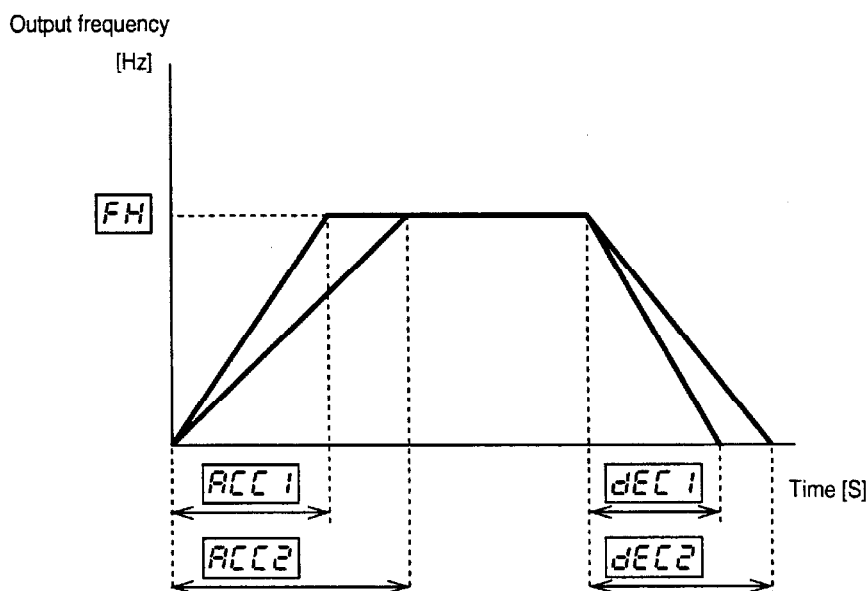

- ★ The default acceleration/deceleration time settings will depend on the inverter capacity.
- ★ Switching between **ACC 1 DEC 1** and **ACC 2 DEC 2** is possible with the operating panel or terminal block. Switching can also take place at a set frequency. (Refer to acceleration/deceleration #1 and #2 selection on page 57.)

Gr.F (Fundamental Parameters #1)

SCU1 Acc/Dec patterns,
SCL SCH Acc/Dec pattern adjustment, Low/High

Related parameters

- SCU1** Acc/Dec pattern #1
- SCL** Acc/Dec pattern adjustment (LOW) **SCH** Acc/Dec pattern adjustment (HIGH)


An acc/dec pattern that matches the application can be selected.

- SCU1** set to **0** (Linear acc/dec) This is a general acceleration/deceleration pattern, and is used under most circumstances.
- SCU1** set to **1** (Self-adjusting function) An acceleration/deceleration time that matches the load conditions is automatically set.

Self-adjusting function
 This function cannot be used when the frequency reference constantly fluctuates or when the load changes suddenly. The **ACC1 DEC1** parameters will be automatically changed, but when the control power is turned OFF, the settings will return to their original values.
 To save the self-adjusting function results, display **ACC1 DEC1** in **Gr.U**, press **ENTER**, make the data setting blink by pressing the **Δ** or **▽** keys once, and then press **ENTER** again to write the data.
 Set **Gr.F2 SCU2** for **ACC2** and **DEC2**.

- SCU1** set to **2** (S-Pattern #1) This pattern is used when accelerating/decelerating to a high speed area (exceeding 60Hz) is required in a short time. This pattern is suitable for conveyers, etc.
- SCU1** set to **3** (S-Pattern #2) This pattern gradually accelerates in the field-weakening area where the motor's acceleration torque is small. This pattern is suitable for high-speed spindles.

Examples of acceleration/deceleration pattern settings

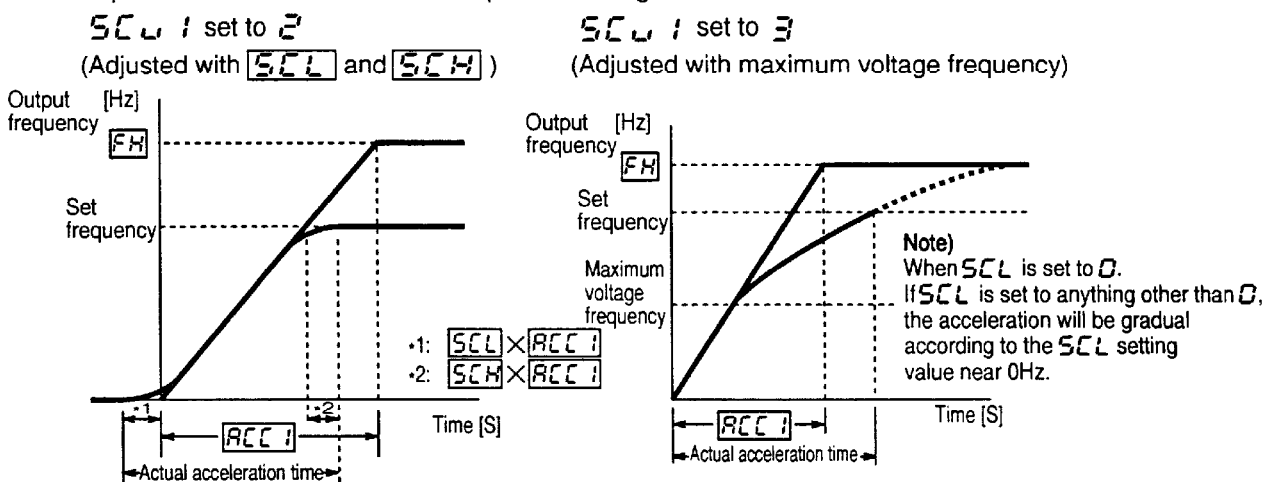

Note that actual acceleration/deceleration times of the S-pattern will be longer than the linear times by the values of *1 and *2.

The curve will depend on the (max. voltage frequency/max. frequency), and the inclination will taper off as the (max. voltage frequency/max. frequency) decrease, and the actual acceleration time will increase. (The rate of acceleration will decrease in the field-weakening area.)

Gr.Ut (Utility Parameters)

blnd

Blind function selection

Related parameters

blnd Blind function selection











blf2 ~ **blnt** Group blind selections

It is possible to not display the parameter groups other than **Gr.F**, **Ut** and **U** when they are not necessary.

blnd	setting value	Function
	0	Blind
	1	Selective unblinding

- ★ The parameters **blf2** ~ **blnt** will be displayed when **blnd** is set to 1. Cancel the blind function for the desired parameter group by setting its corresponding parameter value to 1 (**blf2** for **Gr.F2**).

Example) To cancel the blind function for parameter group **Gr.AN**

Key operation	Display	Explanation
	0.0	Frequency display (stopped condition)
1) PRG	:Gr.U	Enter the parameter setting mode from standard monitor mode. The name of the first group (Gr.U) will be displayed.
2)   ENTER	:Gr.U ↓ :Gr.Ut	Select the group with the Δ ∇ keys. Display Gr.Ut , and press ENTER .
3)   ENTER	:APL ↓ :blnd ↓ : 0	Select the parameter with the Δ ∇ keys. Display blnd , and press ENTER .
4)   ENTER	: 1 ↓ :blnd → 1 :blnd	Change the data with the Δ ∇ keys. Cancel the blind function. (Set to 1) Press ENTER . The parameter name and data will be alternately displayed, and then the parameter name will be displayed.
5)   ENTER	:blnd ↓ :blAN ↓ : 0	Parameters bl + the group name will appear after the blnd parameter. Select the group which is to be unblinded. Display the group to be unblinded, and then press ENTER .
6)   ENTER	: 1 ↓ :blAN → 1 :blAN	Change the data with the Δ ∇ keys. Unblind the group. (Set to 1) The parameter name and data will be alternately displayed, and then the parameter name will be displayed.

U-L.F (Fundamental Parameters #1)

UL **LL** Upper limit/lower limit frequencies

Related parameters


UL Upper limit frequency

LL Lower limit frequency


The upper limit frequency **UL** sets the upper limit of the output frequency, and the lower limit frequency **LL** sets the lower limit of the output frequency.

The upper limit frequency can be set between 0 and the max. frequency.

The lower limit frequency can be set between 0 and the upper limit frequency.

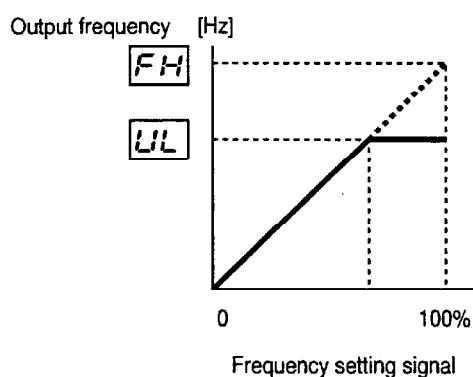

★ A frequency exceeding **UL** will not be output.

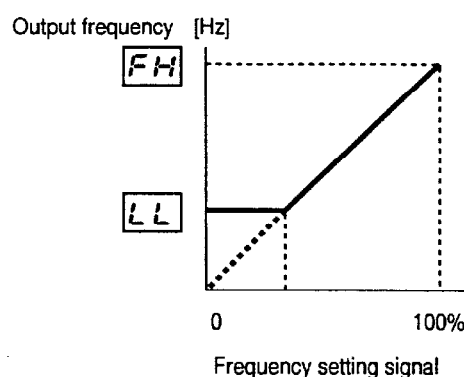

★ The output frequency cannot be set below **LL**.

★ The operating frequency can only be set within the range of the upper limit frequency and lower limit frequency when set from the panel. An error display (**H I** → **50.0** alternately displayed) will occur if an attempt is made to set the frequency from the panel above 50Hz when the upper limit frequency is set to 50Hz.

d 15r Reverse operation disable selection

This is used to prevent reverse run problems which may occur if an incorrect start signal is input.

d 15r setting value	Function
0	Reverse operation allowed
1	Reverse operation not allowed

★ This applies to both panel and external control.

Gr.Fn (Panel Control Parameters)


Ad2 Acc/dec #1 and #2 selection

Related parameters

Ad2 Acc/dec #1 and #2 selection **Gr.F2 Ad2F** Acc/dec #1 and #2 switching frequency

Automatic switching of the acc/dec times can be easily performed by combining the use of terminal block input AD2, acc/dec #1 and #2 selection **Ad2**, and acc/dec #1 and #2 switching frequency **Ad2F**.

(Refer to **CNOd** in **Gr.Ut** and **It*** in **Gr.St** (*: 0 to 10) for setting the terminal block inputs.)

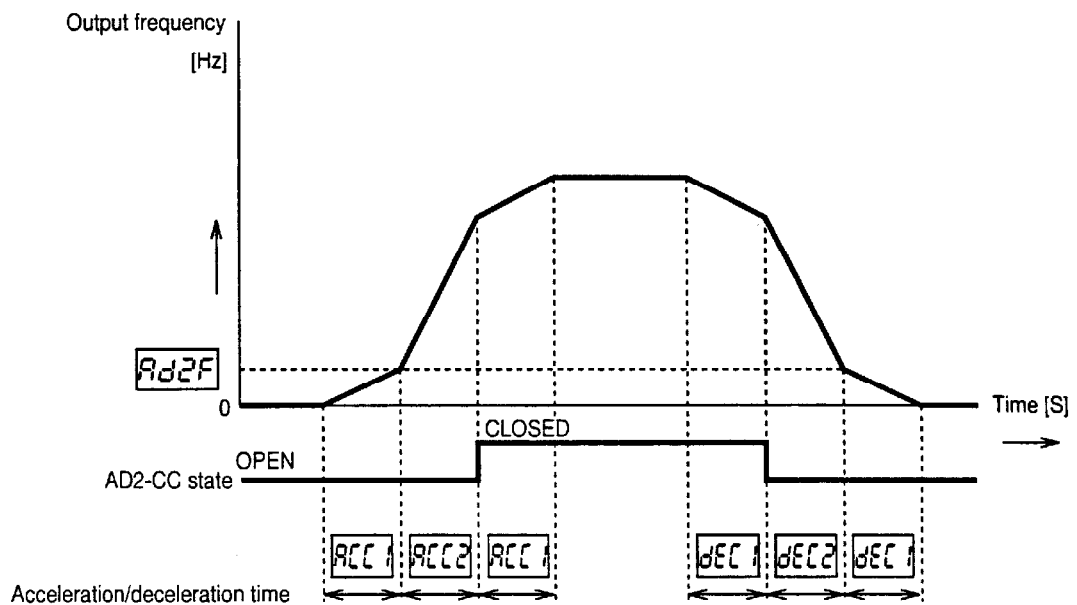

- ★ Refer to the section on command mode selection (**CNOd** in **Gr.Ut**) for the selection of the start/stop command.
- ★ If the start/stop command source is selected to be the operating panel, the acc/dec will function according to the setting of parameter **Ad2** regardless of the state of terminals AD2-CC.
- ★ If the start/stop command source is selected to be the input terminals, acceleration/deceleration #1 and #2 switching will be selected by the terminal input AD2-CC state regardless of the setting of parameter **Ad2**.

Cr.Pn (Panel Control Parameters)

PFbC Panel feedback control

This is used when **Cr.Fb** feedback parameters are used.

★ If no feedback control is selected with the **Cr.Fb** feedback control selection parameter **FbP1**, feedback control will not occur even if panel feedback control ON (**PFbC** = 0) is selected.

PrES Panel reset selection

The trip causes that can be reset when the inverter trips as a result of a failure or fault, etc., can be selected.

PrES setting value	Function
0	All possible
1	Only OL can be reset
2	Only OL, OC1, OC2 and OC3 can be reset

★ The trip cause must be removed before the inverter is reset, or the inverter will trip again.

OL indicates **OL In**, **OL Nt**, and **OL r**. Resetting is not possible during the required cooling time after tripping. The inverter can be reset, however, by turning the control power OFF.

Required cooling time under standard settings	OL In : Approx. 1 min.
	OL Nt : Approx. 5 min.
	OL r : Approx. 30 sec.

Gr.Pr (Panel Control Parameters)

PEP AD2 Fundamental parameter switching

Related parameters

PEP Fundamental parameter switching

AD2 Acc/dec #1 and #2 selection
Gr.St **IT0** ~ **IT10** Input terminal selections

This parameter is used when two different types of motors are used by one inverter or when the motor V/F characteristics are to be changed while running.

Gr.F (Fundamental parameters #1) Gr.Pr (Protection parameters)	Gr.F2 (Fundamental parameters #2)	Switching from the panel	Switching from the terminal block
ACC1 Acceleration time DEC1 Deceleration time SCU1 Acc/Dec pattern	ACC2 DEC2 SCU2	Switch with AD2 1 : Acc/dec #1 2 : Acc/dec #2	Switch with input terminal function IT* set to 9 (AD2 switching selection)
UL1 Maximum voltage frequency ULV1 Maximum voltage UB1 Voltage boost THR1 Electronic thermal protection level STC1 Stall protection SEL1 Stall protection level	UL2 ULV2 UB2 THR2 STC2 SEL2	Switch with PEP 1 : Fundamental parameters #1 (V/F #1) 2 : Fundamental parameters #2 (V/F #2)	Switch with input terminal function IT* set to 12 (fundamental parameter switching)

★ * : select 1 to 10 according to the terminal being used. (Refer to **IT** in Gr.St)

0-51 (Terminal Selection Parameter)

11	Input terminal selections ①
110 ~ 1110	

Related parameters

11	Input terminal selection
110 ~ 1110	Input terminal function selections
1111	Potential terminal function selection (Allocated to a function to always be ON.)

Parameter	110	111	112	113	114	115	116	117	118	119	1110	1111
Input terminal	R	S1	S2	S3	S4	F	RES	ST	S5	S6	S7	Potential terminal

The input terminal functions can be changed by setting **110** to **1111** according to the data in the following table.

Note 1) Input terminals S5, S6 and S7 are added with the expansion terminal block PCB (optional).


Note 2) If the same setting value is assigned to more than 1 input terminal function, "OR" logic is in effect.

Note 3) To turn each terminal ON/OFF, open/close each terminal-CC (closed=ON, open=OFF).

Setting value	Valid code	Function	Setting value	Valid code	Function
0	C	R (reverse run)	28	F	Binary bit #6
1	C	SS1 (15 preset speed selection)	29	F	Binary bit #7
2	C	SS2 (15 preset speed selection)	30	F	Binary bit #8
3	C	SS3 (15 preset speed selection)	31	F	Binary bit #9
4	C	SS4 (15 preset speed selection)	32	F	Binary bit #10
5	C	F (forward run)	33	A	No effect
6	A	RES (fault reset)	34	F	Up/Down frequency setting (UP)
7	A	ST (gate ON/OFF)	35	F	Up/Down frequency setting (DOWN)
8	C	JOG selection	36	F	Frequency clear
9	C	AD2 selection	37	C	PUSH-type RUN key
10	A	Emergency stop	38	C	PUSH-type STOP key
11	C	DC injection braking ON/OFF	39	A	No effect
12	C	Fundamental parameter switching (V/F #2)	40	C	Forward/reverse run selection
13	C	Feedback control ON/OFF	41	C	RUN
14	C	Pattern run selection #1	42	F	Binary data write
15	C	Pattern run selection #2	43	P	PNL/REMOTE key
16	C	Pattern run selection #3	44	P	MON key
17	C	Pattern run selection #4	45	P	PRG key
18	C	Pattern run continue signal	46	P	UP (Δ) key
19	Note	Pattern run step trigger signal	47	P	DOWN (▽) key
20	C	JOG forward run	48	P	ENTER key
21	C	JOG reverse run	49	P	RUN key
22	F	Binary bit #0	50	P	STOP key
23	F	Binary bit #1	51	C	Commercial power/INV switching signal
24	F	Binary bit #2	52	A	Reserved for option
25	F	Binary bit #3	53	F	RR frequency switching input
26	F	Binary bit #4	54	F	IV frequency switching input
27	F	Binary bit #5			

★ The function in the portion of **000** is displayed in software version 120.

Cr.St (Terminal Selection Parameter)

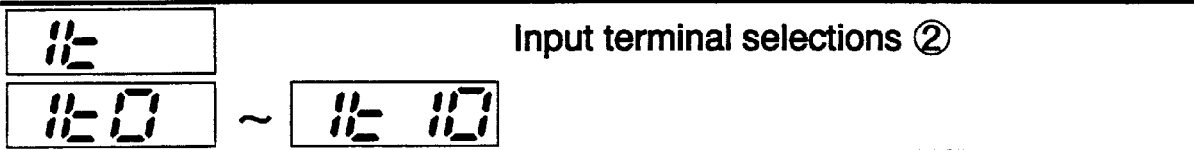

★ The relationship between the settings of **CNOd** and **FNOd** in **Cr.St** and the valid modes is given in the following table.


Valid code	CNOd	FNOd	Valid mode
A	0~4	0~4	Always valid
C	1 or 4	0~4	Valid when terminal block command input is selected.
F	0~4	1 or 4	Valid when terminal block frequency input is selected.
P	0~4	0~4	Substitute for panel keys
Note	Always valid during terminal or panel operation.		

★ If ST is not selected, the setting will be viewed as " / ". (Same as ST-CC : ON state)

★ Up/down frequency setting: The rate of change of the frequency command during up/down contact input will follow the **ACC2** **DEC2** setting values. Therefore, to change the setting while displaying the output frequency on the LED display, always set **ACC1** ≤ **ACC2** and **DEC1** ≤ **DEC2**. With these settings, the frequency command value and the output frequency can be matched, and the up/down frequency can be adjusted while viewing the LED display.

★ Expansion terminal block PCB (optional): The input terminal block normally has 8 contact points, but by adding the expansion terminal block PCB (optional) an additional three points can be added, for a total of 11 contact points.

★ PUSH-type RUN/STOP: Always use the PUSH-type RUN/STOP (setting values = **37** , **38**) and the forward/reverse run selection (setting value = **40**) as a pair.

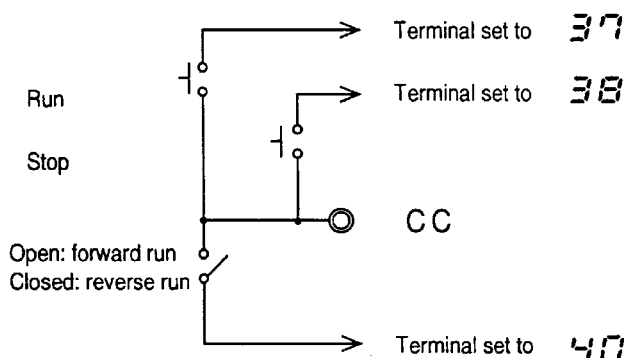

The expansion terminal block PCB is required for PG input.

01.51 (Terminal Selection Parameters)

010 ~ 013 Output terminal selections ①

The function for the output terminals RCH (010), LOW (011), FL (012) and OUT (013) can be selected from 64 types of signals according to the data in the following table.

★ The output terminal block normally has three contact points, but by adding the expansion terminal block PCB (optional) the output terminal OUT (013) can be added, for a total of four contact points.

Setting value	Function	Setting value	Function
0	LL (Frequency lower limit)	33	/Executing emergency stop
1	/LL (opposite of LL)	34	Executing retry
2	UL (Frequency upper limit)	35	/Executing retry
3	/UL (opposite of UL)	36	Pattern run switching output
4	Low speed signal	37	/Pattern run switching output
5	/Low speed signal	38	PID variation limit
6	Accel/decel complete	39	/PID variation limit
7	/Accel/decel complete	40	Run/stop
8	Selected speed reach signal	41	/Run/stop
9	/Selected speed reach signal	42	Severe fault (OCA, OCL, open phase, output error, EF)
10	Fault FL	43	/Severe fault (OCA, OCL, open phase, output error, EF)
11	/Fault FL	44	Non-severe fault (OL, OC1, OC2, OC3, OP)
12	Fault occurrence other than EF or OCL	45	/Non-severe fault (OL, OC1, OC2, OC3, OP)
13	/Fault occurrence other than EF or OCL	46	Commercial power/INV switching output 1
14	Overcurrent pre-alarm	47	/Commercial power/INV switching output 1
15	/Overcurrent pre-alarm	48	Commercial power/INV switching output 2
16	Inverter overload pre-alarm	49	/Commercial power/INV switching output 2
17	/Inverter overload pre-alarm	50	FAN ON/OFF
18	Motor overload pre-alarm	51	/FAN ON/OFF
19	/Motor overload pre-alarm	52	Executing JOG
20	Overheat pre-alarm	53	/Executing JOG
21	/Overheat pre-alarm	54	Terminal block operation command mode
22	Overvoltage pre-alarm	55	/Terminal block operation command mode
23	/Overvoltage pre-alarm	56	Cumulative timer alarm
24	Undervoltage alarm	57	/Cumulative timer alarm
25	/Undervoltage alarm	58	Communication error alarm
26	Undercurrent alarm	59	/Communication error alarm
27	/Undercurrent alarm	60	F/R
28	Overtorque alarm	61	/F/R
29	/Overtorque alarm	62	Operation readiness completion signal (echo back)
30	Braking resistor overload pre-alarm	63	/Operation readiness completion signal
31	/Braking resistor overload pre-alarm		
32	Executing emergency stop		

Note) When the expansion terminal block PCB (optional) with 3 relay output is used, do not connect any other devices to the standard RCH or LOW terminals.

★ The function in the portion of  is displayed in software version 120.

The alarm and pre-alarm output signals always output the current inverter status, so that when the inverter returns to its normal status, so will the output signals.

Cr.5t (Terminal Selection Parameters)

010 ~ 013 Output terminal selections ②

Open collector output detection level

"ON" : open collector transistor ON

"OFF" : open collector transistor OFF

Setting value	Function	Detection level
14	Overcurrent pre-alarm	"ON" during overcurrent stall protection operation "ON" when the output current reaches the setting value level of SEL1 in Cr.Pr , or SEL2 in Cr.F2 when using fundamental parameters #2. (Same level as the blinking C alarm on the operating panel LED)
16	Inverter overload pre-alarm	"ON" when the cumulative trip amount of OL In (inverter overload trip) is 50% or more of the trip level.
18	Motor overload pre-alarm	"ON" when the cumulative trip amount or OL M (motor overload trip) is 50% or more of the trip level.
30	Overheat pre-alarm	"ON" when heatsink temperature is 84°C or higher Once "ON", turns "OFF" again when temperature drops to 80°C or less
22	Overvoltage pre-alarm	"ON" during overvoltage limit operation (OP stall) of DC main circuit voltage. 200V system: approx. 370Vdc 400V system: approx. 740Vdc (Same level as the blinking F alarm on the operating panel LED)
24	Undervoltage alarm	"ON" when main circuit DC voltage is below the following levels: 200V system: approx. 200Vdc 400V system: approx. 380Vdc
26	Undercurrent alarm	"ON" when output current is lower than the setting value of LLFC in Cr.Pr and continues for longer than the time set in LLPE .
28	Overtorque alarm	"ON" when the torque current exceeds the setting value of OTL in Cr.Pr .
30	Braking resistor overload pre-alarm	"ON" when the OLr cumulative trip amount is 50% or more of the trip level.

★ The checking conditions for the following alarm outputs differ from each other as indicated:

Undervoltage alarm : Checked while running.

Undercurrent alarm : Checked during run command.

Overtorque alarm : Constantly checked.

Note) During reset, all status alarms will enter the OFF state regardless of the operating conditions.


Cr.5t (Terminal Selection Parameter)

LF	brCH	Low speed, acceleration/deceleration complete, speed reach output signals
HrCH	LrCH	

Related parameters

LF	Low-speed signal output frequency	HrCH	Speed reach HI frequency
brCH	Acc/dec complete detection band	LrCH	Speed reach LO frequency
0t0	~ 0t3	Output terminal selections	

A signal is output when the output frequency exceeds the set low-speed detection frequency **LF**. This can be used as a magnetic brake open/ close signal, etc.

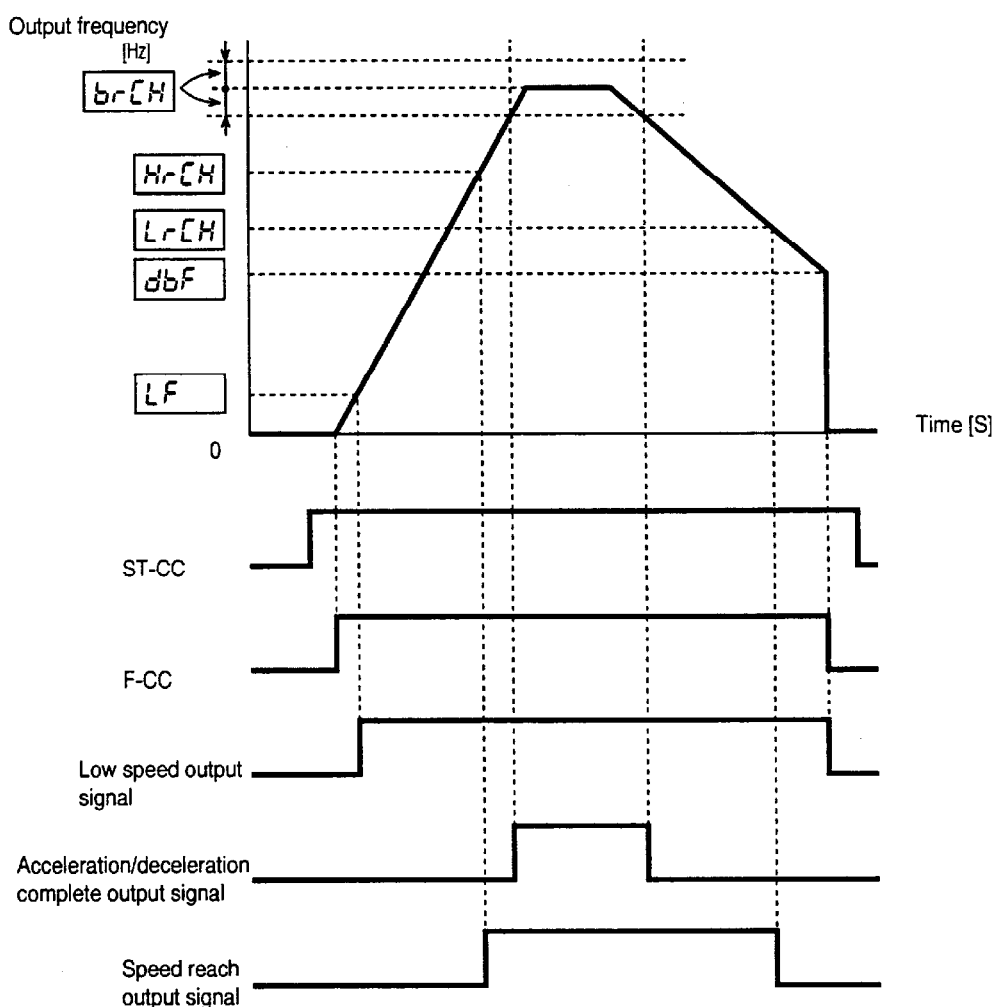

- ★ The speed reach signal is also output when a preset speed is reached.
- ★ The low speed signal will turn OFF when DC injection braking (refer to Cr.Pr dbF) is applied during a decelerated stop.

Note) The speed reach signal is output when the frequency is greater than **HrCH**, and turned off when it is less than **LrCH**.

Cr.Sk (Terminal Selection Parameter)

1kF	1k5F	Input/output terminal response time selections
0t0d	0t0h	

Related parameters

1kF		Input terminals (R, S1, S2, S3, S4, S5, S6, S7) response time selection
1k5F	~	1k7F Input terminals (F, RES, ST) response time selections
0t0d	~	0t3d Output terminals (RCH, LOW, FL, OUT) delay times
0t0h	~	0t3h Output terminals (RCH, LOW, FL, OUT) hold times

If noise effects or input contact point chattering results in undesirable or incorrect operation, increase the terminal response time selections. As the setting value is increased, the response time will also increase proportionally.

- ★ When set to **1**, the response time will be the shortest, and when set to **100**, the response time will be the max. (approx. 200mS).
- ★ The output terminals can be set separately for the delay time when turning ON, and the output hold time when turning OFF.

When the acceleration/deceleration time is 0.1 sec. or less and an analog frequency input is used, chattering may occur in the acceleration/deceleration complete signal or low speed detection signal. Set the output terminal delay times (filter functions) **0t0d** **0t1d** **0t2d** **0t3d** as necessary.

Cr.5t (Terminal Selection Parameters)

Cr.5t FCHG Commercial power/INV switching

Related parameters


- Cr.5t CCHG** Commercial/inverter switching output
- Cr.5t FCHG** Commercial/inverter switching frequency
- Cr.5t Oe0** **Cr.5t Oe1** Output terminal selections
- Cr.Pr Ar.5t** Auto-restart (motor speed search)

These parameters allow the inverter to change from commercial power operation to inverter operation, and to restart without having to stop the motor when restoring power after a momentary outage (in the coast-stop state.)

By setting the commercial power/INV switching frequency (**FCHG**), the inverter will accelerate, and then automatically switch the motor to the commercial power source. Energy savings and quieter operation can be realized when the motor is run directly from commercial power.

Cr.5t CCHG setting	Function
0	OFF
1	Automatic switching upon trip
2	Switching at commercial/inverter switching frequency setting
3	Switching at commercial/inverter switching frequency setting, automatic switching upon trip

An example of the commercial power/inverter switching wiring is shown below.

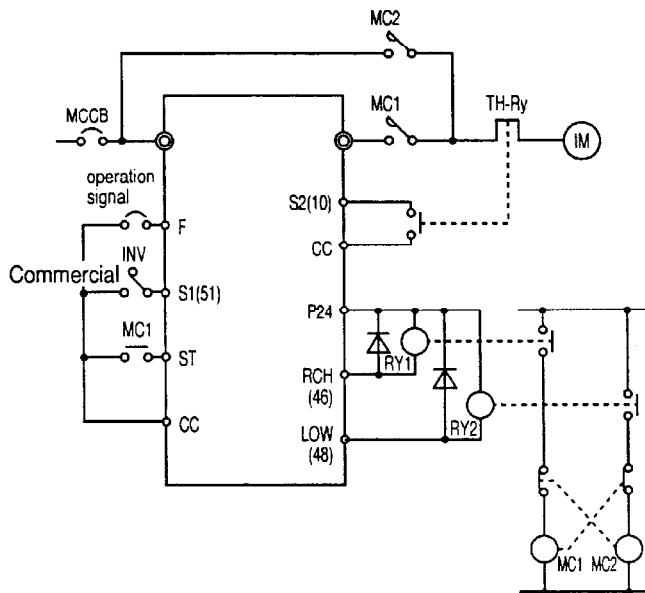

- Cr.5t Ie1** set to 10 Emergency stop
- Cr.5t Ie2** set to 51 Commercial power/ INV switching signal
- Cr.5t Oe0** set to 46 Commercial power/INV switching output 1
- Cr.5t Oe1** set to 48 Commercial power/INV switching output 2

- ★ Short circuit between ST and CC when using only the auto-restart function.
- ★ Select motor speed search (**Ar.5t** in **Cr.Pr**) on ST make/break (commercial power switching)

Gr-5t (Terminal Selection Parameters)

DEFP Output terminal pulse frequency selection

Selects the No. of pulses in proportion to the output frequency from the output terminal FP.

DEFP setting value	Function
0	48f
1	96f
2	360f

Note) When 96f is selected, the pulse output will be an alternating dual-cycle pulse train, so the counting instrument must read an adequate average frequency.

48f and 360f are single pulse trains, so the frequency measurement device can perform high speed reading of the output pulses.

★ By using the pulse output terminal (FP) and the pulse inputs of expansion terminal block PCBs (optional) installed on other inverters, multiple inverters can be proportionally controlled and operated.

The FP output signal may be unstable when power is turned ON, during a fault reset, or when **Gr-Us E5P** is set.

Inrr RR input special function selection

The option ROM is required for the RR input special function selection.

However, option ROM is not required in software version 120.

Parameter data can be externally adjusted using the RR input terminal.

Inrr setting value	Function
0	Standard
1	FH (max. frequency)
2	TACC/TDEC (acceleration/deceleration time) multiplication factor
3	VB (torque boost) multiplication factor
4	Current limit adjustment multiplication factor

Set to **1** **FH** adjustment...The frequency reference from the RR input terminal can be used as the **FH** data.

★ Note that **FH** cannot be changed while running, so the data will be updated only when the inverter is stopped.

The **FH** setting range is from 30 to 400Hz, so a setting of less than 30Hz will be treated as **FH** =30Hz.

Set to **2** TACC/TDEC multiplication factor...The acceleration/deceleration times parameter values can be multiplied from 1.0 times to 10.0 times with the RR terminal analog input.

Set to **3** **vb** multiplication factor...The voltage boost **vb** parameter values can be multiplied from 0.00 times (0%) to 1.00 times (100%) with the RR terminal analog input.

Set to **4** **SEL** multiplication factor...The current limit adjustment **SEL** parameter values can be multiplied from 0% to 100% with the RR terminal analog input.

Gr.SC (Special Control Parameters)

Frun **FHYS** Run frequency control


Related parameters

Frun Run frequency

FHYS Run frequency hysteresis

The inverter run/stop can be controlled with just the reference frequency signal. By setting the run frequency **Frun** and the run frequency hysteresis **FHYS**, the inverter will start running when the reference frequency signal is higher than point B in the following diagram, and will stop when less than point A.

- ★ For example, when using the inverter for HVAC applications, etc., and automatically operating from a room temperature signal, the inverter can be stopped when the reference frequency signal drops below 30Hz.

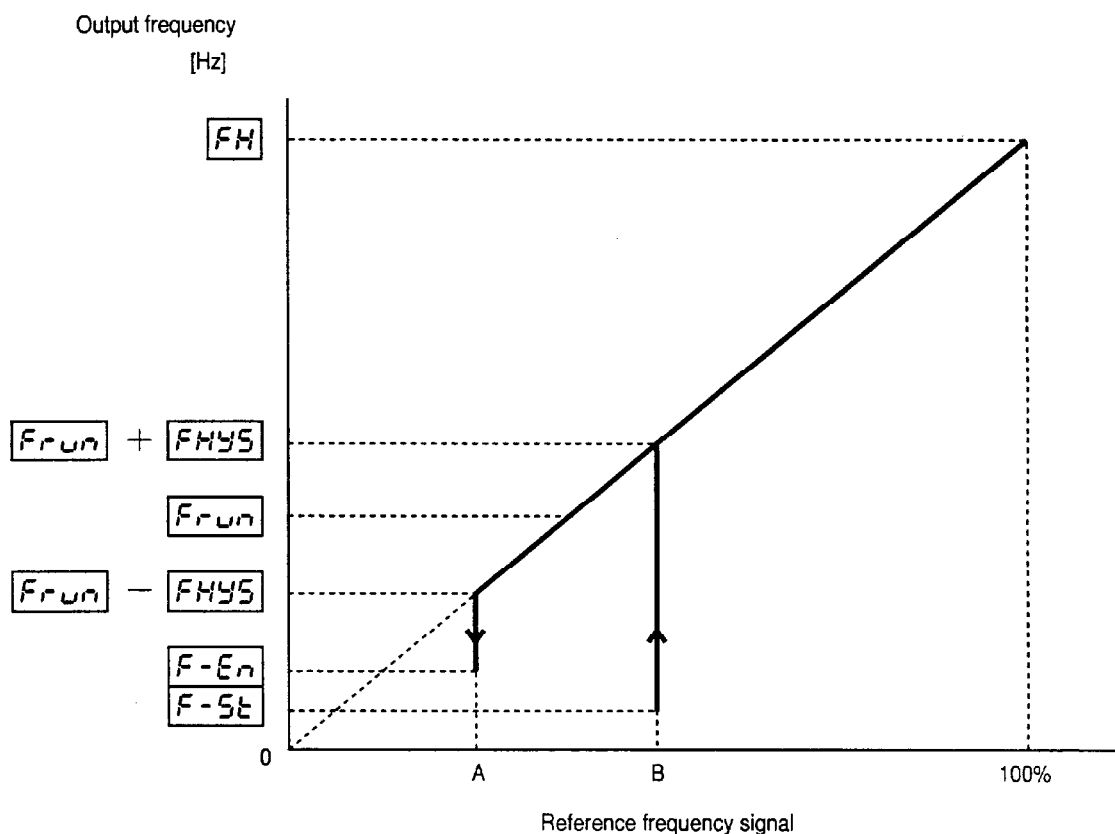

- ★ During acceleration, the inverter will start with start-up frequency **F-St** in Gr.SC when the reference frequency signals is higher than point B. During deceleration, the inverter will stop at end frequency **F-En** in Gr.SC when the reference frequency signal drops below point A.

Gr.5C (Special Control Parameters)

F-5t Start-up frequency

F-En End frequency

Related parameters

F-5t Start-up frequency


F-En End frequency

These settings are used when the starting torque response delays influence the acceleration/deceleration times. Normal settings of these parameters are from 0.5 to 2Hz, and should be kept less than 5Hz.

Overcurrent can be avoided by keeping the frequency less than the motor rated slip amount.

During start-up ...The **F-5t** frequency setting is instantaneously output.

During stopping ...The output frequency is instantaneously changed to 0Hz when the **F-En** frequency setting is reached.

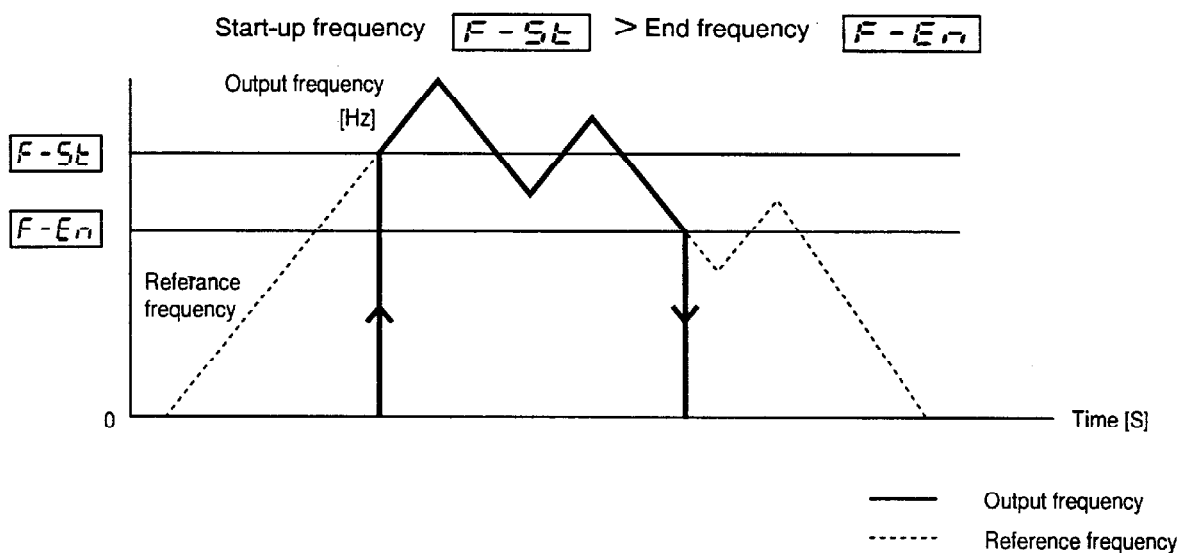

Start-up frequency **F-5t** < End frequency **F-En**

★ Avoid this setting as chattering will occur.

0r.5r (Special Control Parameters)


FJ.n Jump frequencies

Related parameters

FJ.n Jump frequency selection **FJ1** ~ **FJ3** Jump frequencies
bFJ1 ~ **bFJ3** Jump bands

To avoid operating at frequencies where the mechanical system's characteristic vibrations may cause resonance, jump the resonant frequencies.

During jumping, there is a +/- hysteresis band associated with the jump frequency.

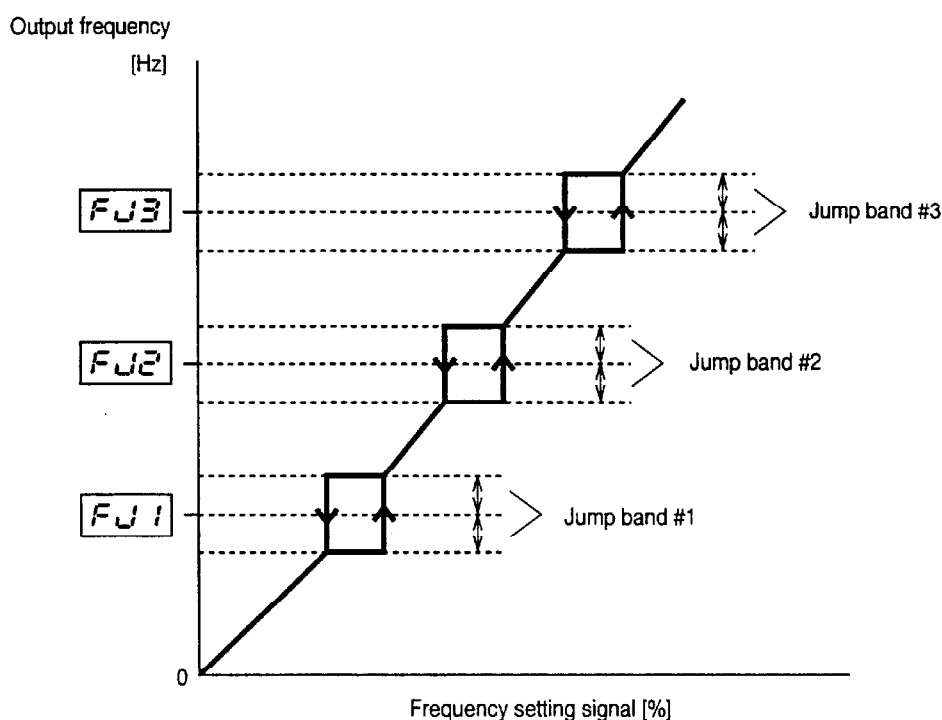

- ★ During acceleration/deceleration, the output frequency will not instantaneously jump from one hysteresis point to the next once the reference frequency has passed the latter point, but will accelerate/decelerate through the jump region.

U-50 (Special Control Parameters)

CF PWM carrier frequency


The motor's resonant acoustic noise can be changed by changing the PWM carrier frequency. If resonance occurs between the motor and the load machine or motor fan cover, change the PWM carrier frequency.

The adjustment range for PWM carrier frequency is based on the following table.

Inverter capacity	Adjustment range
15kW and smaller	0.5~17kHz
18.5kW and larger	0.5~15kHz
200V units : 75kW and larger 400V units : 110kW and larger	0.5~5kHz

- ★ At low-speed and very high-speed operation, the carrier frequency will be automatically adjusted to meet motor drive requirements.
- ★ If the carrier frequency is set higher than the default setting value, the overload trip level will automatically be reduced, which may result in more frequent overload trips.
- ★ 15kW and smaller units: if the standard 15kHz settings is changed to 17kHz, the overload trip level will be reduced 4% for 200V units and 6% for 400V units.
18.5kW and larger units: if the standard 12kHz setting is changed to 15kHz, the overload trip level will be reduced 7% for 200V units and 11% for 400V units.
75kW and larger units: if the standard 2.2kHz setting is changed to 5kHz, the overload trip level will be reduced 28% for 200V units.
110kW and larger units: if the standard 2.2kHz setting is changed to 5kHz, the overload trip level will be reduced 39% for 400V units.

15kW and smaller for 400V units.

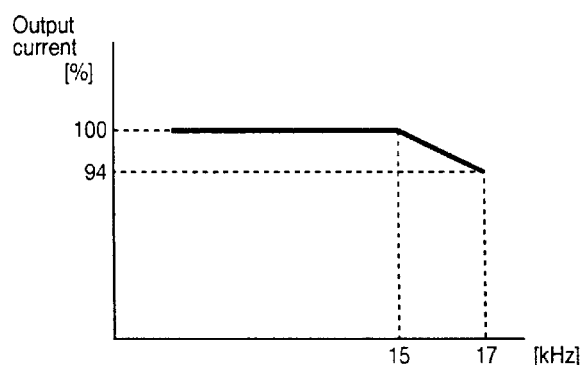

PWM carrier frequency

Cr.SF (Frequency Setting Parameters)

Cr.n Cr.n Preset speed operation ①

Related parameters

<input type="text" value="Cr.n"/>	Preset speed selection	<input type="text" value="Sr01"/> ~ <input type="text" value="Sr15"/>	Operating frequency settings
<input type="text" value="Cr.n"/>	Mode selection	<input type="text" value="Sr01"/> ~ <input type="text" value="Sr0F"/>	Operating mode settings

By changing external contact signal inputs, a max. of 15 preset speeds can be selected. (Refer to Cr.St for terminal allocation.)

Each speed (frequency) can be set between 0 and 400Hz.

★ Note that the preset speeds cannot be set higher than the value of the max frequency , so the value of must also be changed if a higher preset speed is desired.

Basic setting method

1. Select the desired No. of speeds for preset speed operation. : 0 : disabled
1 ~ 15 : Speeds 1 to 15

2. Select the operating mode. : 0 : Deactivated
1 : Activated
 : 0 : Acc/dec #1, V/F #1, forward run
+ 1 : Reverse run selection
+ 2 : Acc/dec #2 selection
+ 4 : V/F #2 selection

★ Data setting of parameters indicated as using the "+" mark is as follows:

Example) (+ 1) + (+ 2) = 3

Both reverse run and Acc/Dec #2 will be in effect when 3 is selected.

3. Set the operating frequencies for the applicable speeds between the lower limit and upper limit frequencies.

~

4. Allocate the terminals for preset speed operation.

(Refer to Cr.St (*: 0 to 10).)

Terminal signal	Preset speed No.															
	Normal frequency command	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
SS1	—	○	—	○	—	○	—	○	—	○	—	○	—	○	—	○
SS2	—	—	○	○	—	—	○	○	—	—	○	○	—	—	○	○
SS3	—	—	—	—	○	○	○	○	—	—	—	—	○	○	○	○
SS4	—	—	—	—	—	—	—	—	○	○	○	○	○	○	○	○

(— = terminal-CC open, ○ = terminal-CC closed)


Cr.SF (Frequency Setting Parameters)

Cr.n

Cr.n

Preset speed operation ②

Example of 7-speed run

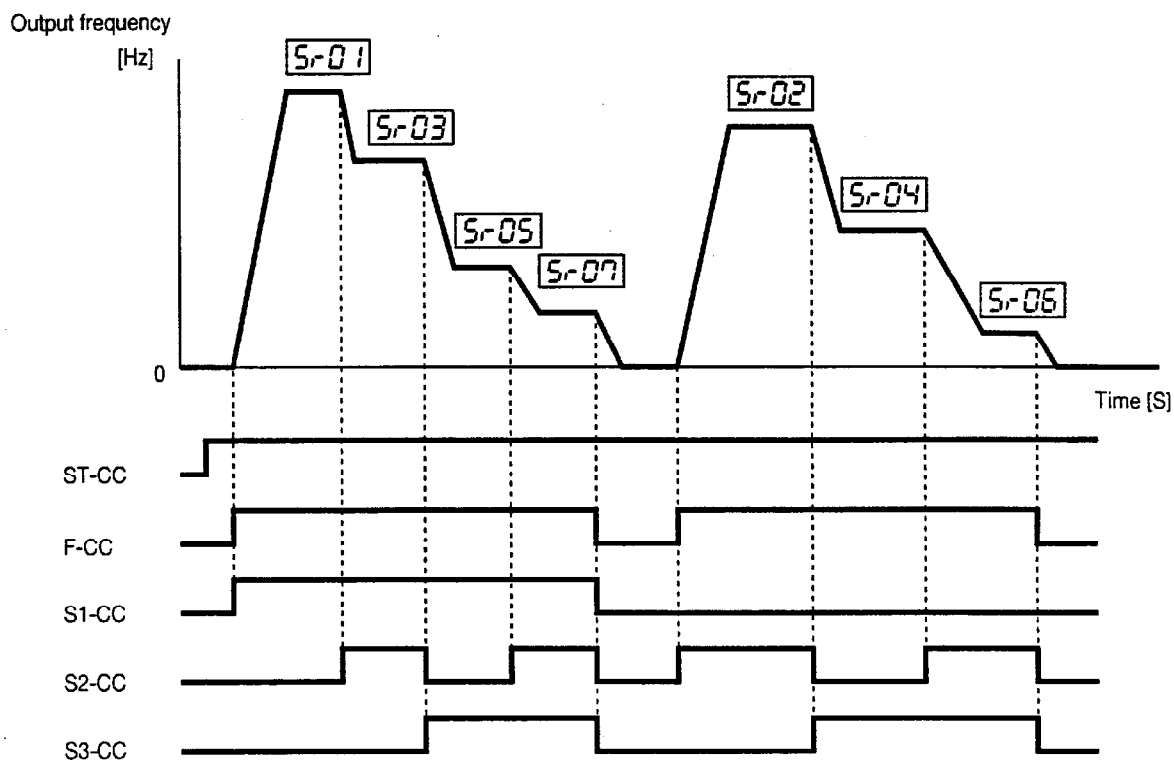

The above example assumes that the following settings are allocated to the terminals:

Cr.St **160** (S1) set to **1** (SS1)

161 (S2) set to **2** (SS2)

162 (S3) set to **3** (SS3)

★ If a selected preset speed number (selected by SS1~SS4) is larger than the setting value of **Cr.n**, 0Hz will be output.

0r.5F (Frequency Setting Parameters)

FC1 **FC2** Frequency priority selections

Related parameters

FC1 **FC2** Frequency priority selections **inf** Analog input filter

Two types of reference frequency signals input from the terminal block can be automatically selected.

FC 1, 2 setting value	Function
1	RR
2	IV
3	RX
4	PG (pulse input setting)
5	BIN (binary setting or up/down frequency setting)

FC1 selection input: Frequency priority selection #1

FC2 selection input: Frequency priority selection #2

★ If a signal is input into the selected #1 frequency priority input, that value will be used as the actual frequency reference. Even if a signal is input into the selected #2 frequency priority input, the #1 input has priority. However, if the #1 frequency priority input signal becomes 0, the #2 frequency priority input will be used as the actual frequency reference.

The standard default settings are **FC1**: RR and **FC2**: IV, so to use the RX, PG or BIN inputs, change the **FC1** or **FC2** setting values to 3 ~ 5 .

By setting the analog input filter parameter **inf**, a built-in filter constant can be configured to remove noise in the input terminal voltage- and current-source frequency command signals. If stable operation is not possible due to noise, increase the filter time constant. The response will decrease, however, as the setting value is increased.

Cr.SF (Frequency Setting Parameters)

JOG JSTEP Jogging operation


Related parameters

JOG Jog run frequency

JSTEP Jog stop control

A jog run can be started and stopped with the F, R terminal signals by setting the jog run frequency **JOG**. (Refer to the selection on Cr.St **It*** for allocating the input terminals.)

★ Short circuit JOG-CC before starting a jog run.

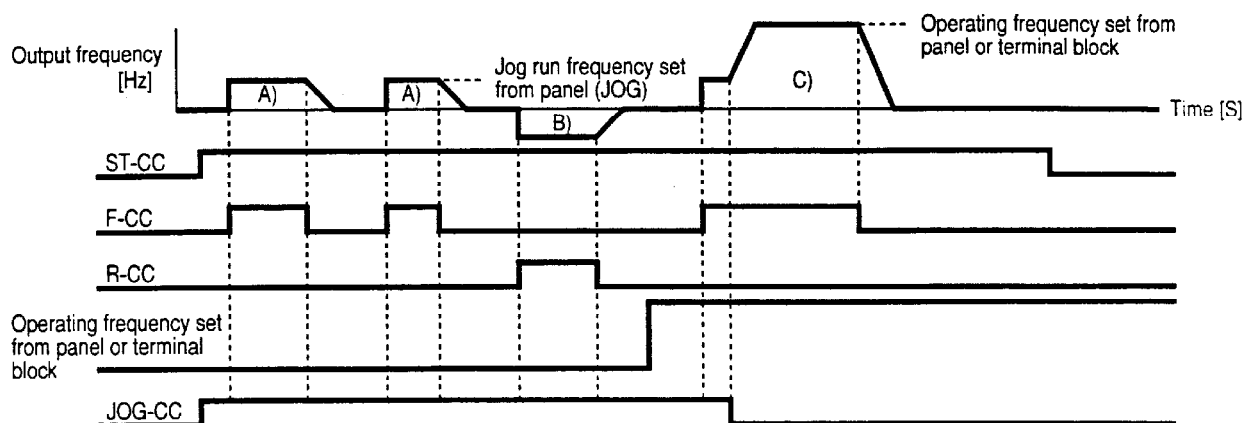

A) Jog forward run

B) Jog reverse run

C) Runs at the operating frequency set from the panel or terminal block when JOG-CC is opened.

★ Jogging will not occur if JOG-CC is shorted while running.

★ When using JOG run and preset speed run modes simultaneously, the preset speed run mode will have priority. (For example, if the preset speed run mode is set for reverse run, the preset speed is selected by SS1-SS4, and then a JOG operation is performed, the motor will jog in reverse.)

Select the jog stop method with **JSTEP**.

Set the jog run frequency to a value other than 0 to execute a jog run.

JSTEP setting	Function
0	Decelerated stop (Decelerated stop according to the dec1 parameter.)
1	Coast-stop
2	DC injection braking stop (Stop according to DC braking parameters set by dbF dbC dbt)

The jog run acceleration time is set to zero, so setting the JOG run frequency to 5Hz or less is recommended. If set higher, overcurrent trips may occur, or the motor may not rotate smoothly.

Note) During a jog operation, the LOW and RCH signals will not be output, and PID control will not be enabled.

0r.5F (Frequency Setting Parameters)

rr in Frequency setting input signal characteristics


Related parameters

- rr in RR input selection
- P1 RR reference point #1
- P2 RR reference point #2
- F-P1 Point #1 output frequency
- F-P2 Point #2 output frequency

If rr in is set to 1, the characteristics of the RR terminal frequency setting signal and output frequency can be set.


(Example 1)

RR input frequency setting signal characteristics

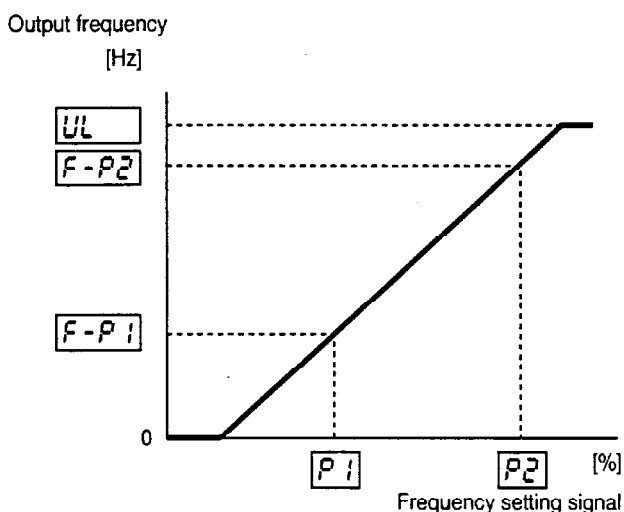

(Example 2)


RR input frequency gain setting signal characteristics

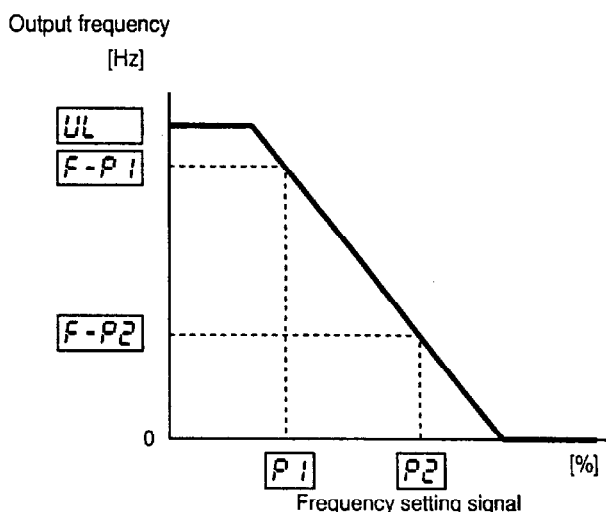

- ★ Points P1 and P2 must be set at least 10% apart.
- If points P1 and P2 are the same, Err. 1 will be displayed.

The P3 ~ P4 and F-P3 ~ F-P4 parameters can be set in the same manner for the IV, RX, PG and BIN inputs.

- ★ The RX, PG and BIN inputs can also be configured for both forward or reverse operation.

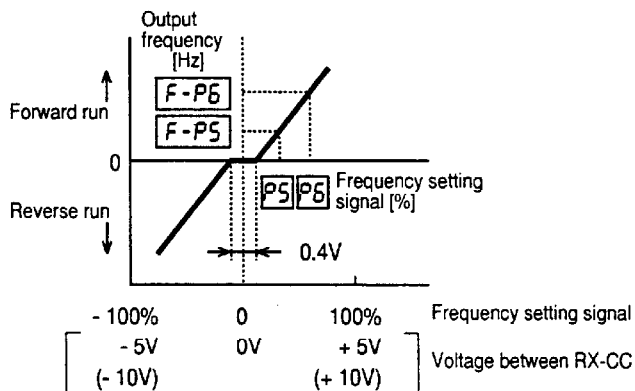

Even if the frequency setting signal is at 100%, there may be some slight deviation from the set frequency due to error.

The RX-CC analog input signal has a dead band of approx. 0.4V about the 0V point.

Pr.Pr (Protection Parameters)

EH-1 **OLF** Electronic thermal protection ①

OLT


Related parameters

EH-1 Motor overload protection level

OLT Motor 150% overload time limit

OLF OL reduction start-up frequency

The motor overload protection level **EH-1** can be adjusted according to the motor rating and characteristics.

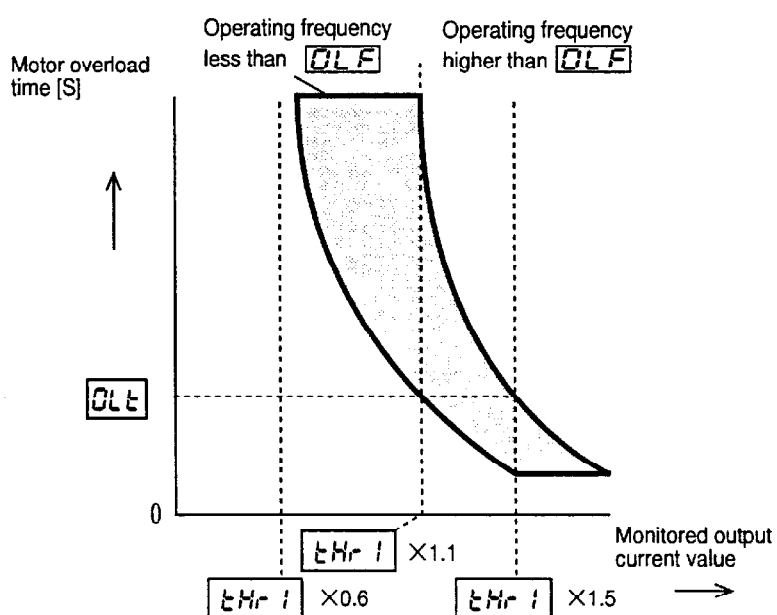

Motor overload start-up level

When operating a motor at low frequencies, the motor's cooling ability decreases. Therefore, the OL reduction start-up frequency **OLF** can be used to lower the OL operation start-up level.


This should be set according to the motor characteristics.

The following settings are recommended:

30Hz for a standard motor

6Hz for a VF motor

By setting **OLT**, the time before an OL trip will occur when the motor is operated at 150% load can be adjusted between 10 and 2400 seconds.

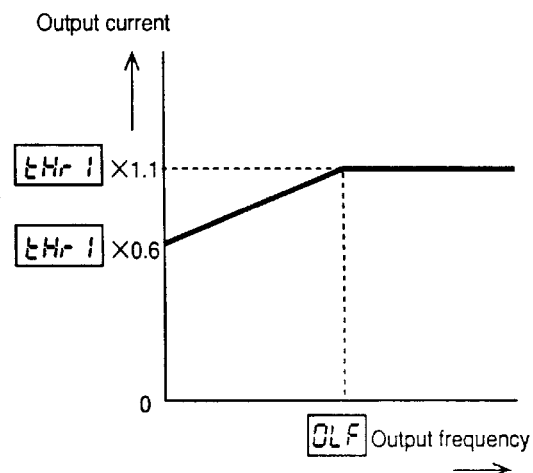

Cr.Pf (Protection Parameters)

OLn Electronic thermal protection ②

Related parameters

OLn OL selection

SEL1 Stall protection level

SECI Stall protection

The OL selection parameter **OLn** can be set as follows.

OLn setting value	Function
0	Standard
+ 1	Soft-stall ON
+ 2	Motor overload (OLnE) trip OFF

Note) When **3** is selected, both the + 1 and + 2 functions are enabled.

★ The motor overload trip can be enabled/disabled with **OLn**, but the inverter overload trip is always enabled.


Soft-stall function:

When the inverter detects an overload, the output frequency will automatically be lowered before the motor overload trips (**OLnE**). The load current will stabilize at the reduced frequency, and operation will continue without tripping.

This function is applicable to variable torque loads such as fans, pumps and blowers, which exhibit the characteristic that when the operating speed decreases, the load current also decreases.

★ Do not use soft-stall on constant torque loads (loads with a constant load current regardless of speed).

Inverter overload protection curve (For 75kW and smaller)

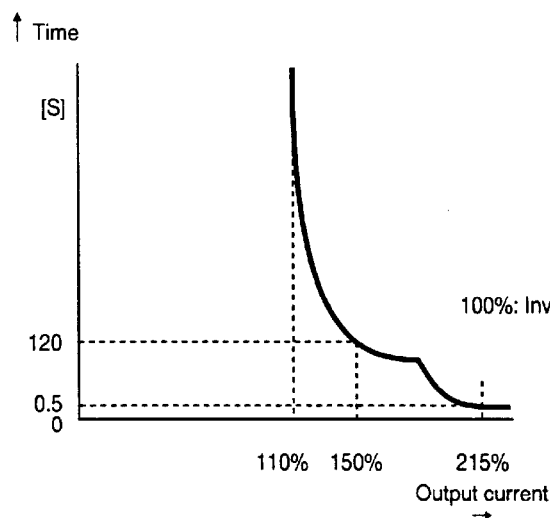

: This protection curve cannot be changed or turned off with parameter settings. This is built-in to protect the inverter unit. If the inverter overload trip (**OLIn**) activates, lower **SEL1** in **Cr.Pf** (stall protection level (current limit level adjustment)), and increase the acceleration time (**ACC1** or **ACC2**) to decrease the chances of this occurring.

Cr.Fr (Protection Parameters)

dbf

dbSL

DC injection braking settings ①

db In

Related parameters

dbf

DC injection starting frequency

dbSL

Forward/reverse DC injection priority control

dbC

DC injection current


db In

Motor shaft stationary control

dbt

DC injection time

By setting the DC injection current, DC injection time, and DC injection starting frequency, the stopping precision for positioning, etc. can be adjusted to match the load.

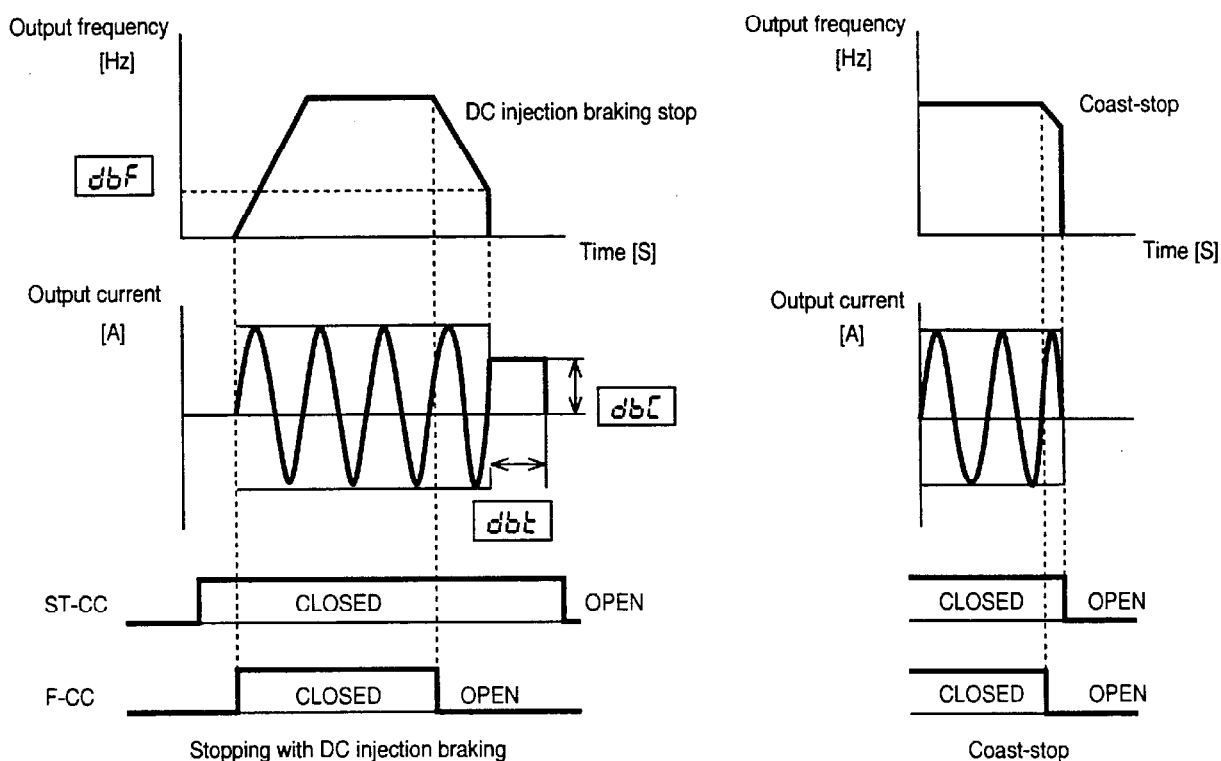

★ DC injection braking is a function that forcibly stops the motor, so do not set **dbC** or **dbt** higher than necessary, as the motor may overheat.


★ The inverter's overload protection sensitivity is increased during DC injection braking, so if **dbC** is set to approx. 90% or higher, the electronic thermal overload protection may activate depending on the **dbt** setting.

(The overload protection will activate in approx. 3 sec. when **dbC** is set to 100%.)

DC injection braking will start when the inverter stop command is issued and the output frequency is less than dbF .

<< Explanation of normal DC injection braking >>

$dbSL$ 0 : Normal

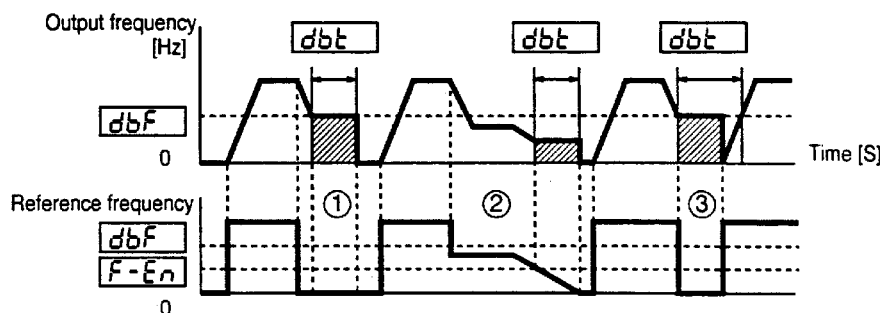

- ① When dbF , $F-En$ > reference frequency : DC injection braking is executed.
 ② When dbF > reference frequency > $F-En$: Motor runs at the commanded frequency.
 When dbF , $F-En$ > reference frequency : DC injection braking is executed.


Note 1) The inverter stop command includes when the reference frequency becomes 0Hz, or when the output frequency becomes less than $F-En$, in addition to the run/stop command.

- ③ When a run command is issued during DC injection braking : DC injection braking is terminated, and the motor starts running.

<< Explanation of DC injection braking priority >>

$dbSL$ 1 : Priority

$dbSL$ 0 : Normal

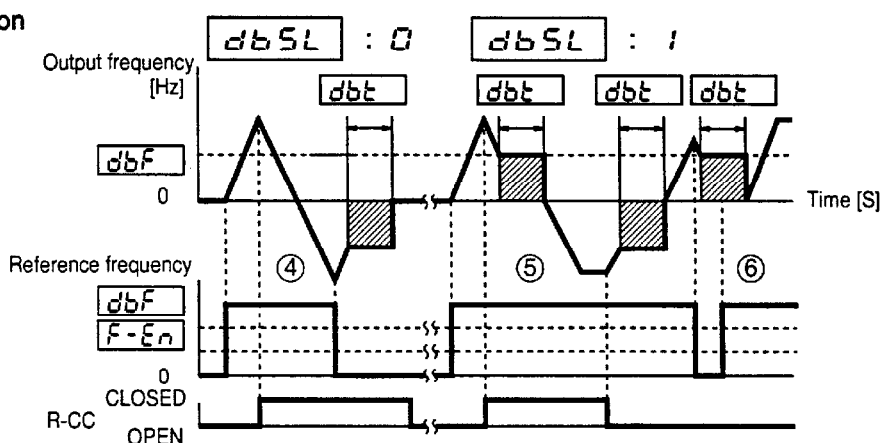

- ④ During normal forward/reverse run ($dbSL$ set to 0), DC injection braking is not executed, as the command is not regarded as an inverter stop command.
 ⑤ When a reverse run (forward run) command is issued during a forward run (reverse run): DC injection braking starts when dbF > reference frequency during deceleration.
 ⑥ When a run command is issued during DC injection braking: DC injection braking has priority.

Cr.Pr (Protection Parameters)


dbF **dbSL** DC injection braking settings ②

dbIn

dbIn Motor shaft stationary control

This function is effective when the motor shaft has stopped and is not to be rotated, or when preheating the motor.

When **dbIn** is set to 1 to activate motor shaft stationary control, DB can be continued at half the **dbC** setting value after normal DB operation. This condition can be maintained as long as ST-CC is not opened, emergency stop is not engaged, or the power is not turned OFF. To stop this function, disengage the operating command by one of the methods previously mentioned, and DB will stop.

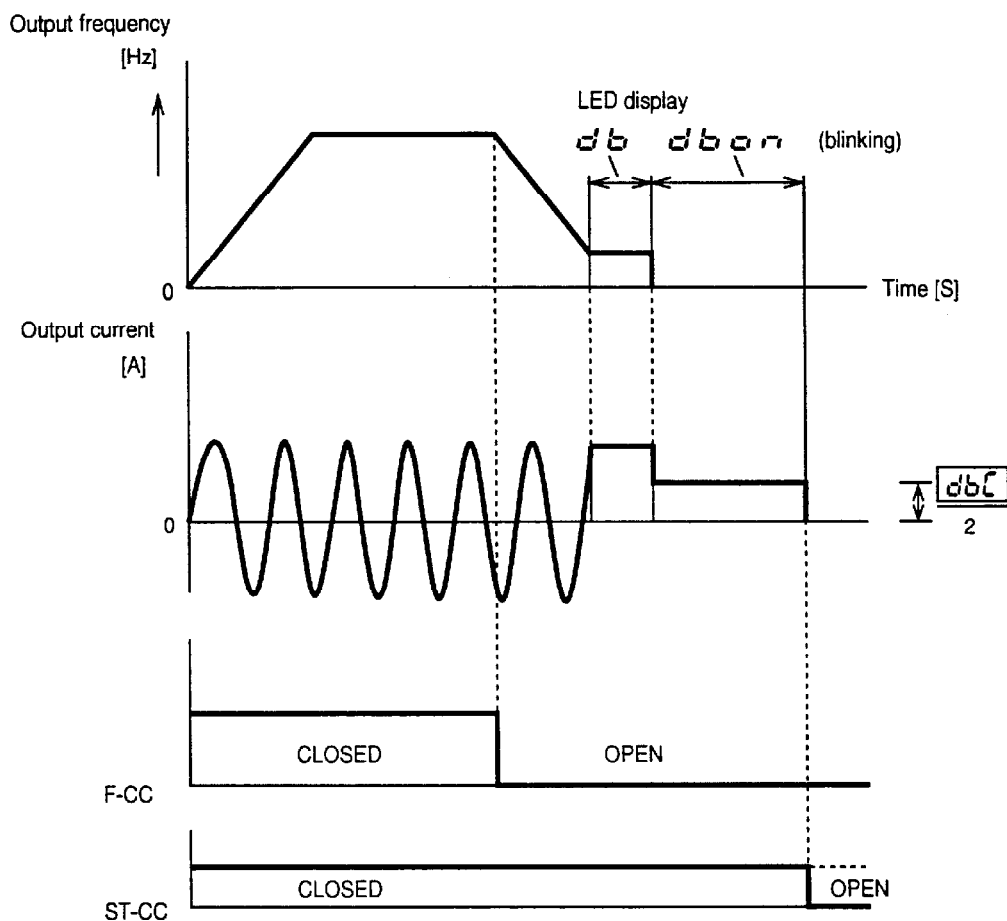

- ★ Approximately the same control is possible with the external contact input DC injection braking ON/OFF selection. (Refer to **Cr.St** **It*** (*: 0 to 10).) DC injection braking will activate if the output frequency is less than **dbF** and ST-CC is shorted, and will continue regardless of the **dbt** setting. However, if **dbC** is set to 60% or higher, depending on the DC injection time, the inverter's electronic thermal overload protection may active (when using a standard motor).

Cr.Pr (Protection Parameters)

Pb	Pbr	Dynamic braking operation
PbCP	OPSS	

Related parameters

Pb	Dynamic braking selection	PbCP	DBR capacity
Pbr	DBR resistor value	OPSS	Overvoltage stall protection

Dynamic braking can be selected to prevent an overvoltage trip during sudden deceleration or a decelerated stop.

Pb	setting value	Function
	0	No DBR
	1	Dynamic braking without overload detection
	2	Dynamic braking with overload detection

OPSS	setting value	Function
	0	ON
	1	OFF

- ★ Overvoltage stall protection automatically controls the deceleration rate to prevent overvoltage tripping when the voltage in the DC section of the inverter rises during deceleration. Note that this may cause the deceleration time to be longer than the set time.
- ★ The resistor can become extremely hot (approx. 150°C) when dynamic braking is frequently operated, so take this into consideration when selecting the installation site.

When **Pb** is set to 2, and the standard resistor is not used (refer to Appendix Table 3 on page 132), the following settings are required for braking resistor overload protection.

Pbr	1.0~1000Ω
PbCP	0.01~600kW

- ★ Select a dynamic braking resistor exceeding the min. allowable resistance value. (Refer to page 95.)

When using a nonstandard braking resistor with no temperature fuse, install a magnetic contactor (MC) or a non-fuse breaker (MCCB) with shunt release on the inverter's power supply input, so that the power circuit can be opened by the inverter's built-in fault detection relay (FL) or an overload detection device in series with the braking resistor.

Cr.Pf (Protection Parameters)

ESTP Edbt Emergency stop

Related parameters

ESTP Emergency stop selection **Edbt** Emergency stop DC injection time

Emergency stop is not allocated to a terminal with the standard default settings, so if activation from the terminal block is desired, select emergency stop for a random terminal with **Cr.St** **1E*** (*: 0 ~ 10). Emergency stop (setting value 10) will be performed according to setting of **ESTP**, the inverter will trip (**E** will blink), and the FL relay will operate.

ESTP setting value	Function
0	Coast-stop
1	Decelerated stop
2	DC injection stop

- ★ When **ESTP** is set to 2, set the emergency stop DC injection time **Edbt** and DC injection current **dbt**.
- ★ If a controlled emergency stop is desired, keep ST-CC shorted. If ST-CC is opened, the inverter output will be 0Hz, and the motor will coast-stop.

rtrt rtt Retry function

Related parameters

rtrt Retry selection **rtt** Retry time setting

Retry is a function that automatically resets and restarts the inverter when a fault occurs. Set the No. of retry times when a fault occurs with **rtrt**.

rtrt setting value	Function
0	No retry function
1 ~ 10	1 to 10 times

Set the time to wait before restarting after an inverter fault with **rtt**.

When a fault occurs, the inverter will automatically start running after the retry wait time set in **rtt**, so when using this function, make sure that workers are not exposed to danger from equipment suddenly starting.

When retry **rtrt** is selected, the motor speed search function will automatically operate during retry, so a smooth start will be possible.

U_r-P_r (Protection Parameters)

U_{U_r}

U_{U_r}t

Regeneration power ride-through control

Related parameters

U_{U_r}

Regeneration power ride-through control

U_{U_r}t

Ride-through time

This function allows operation to continue using regenerated energy from the motor when a momentary power failure occurs.


Continuation may not be possible depending on the machine's inertia or load state, so when selecting this function, always perform a confirmation test. If an overvoltage trip (OP) occurs when this function is operating or continuation is not possible for long periods of time, lengthen the acceleration/deceleration times. Automatic restarting is possible without fault stopping when this function is used with the retry function.

U _{U_r} setting value	Function
0	Regeneration power ride-through control OFF
1	Regeneration power ride-through control ON

★ The ride-through time U_{U_r}t can be set between 0.0 and 25.0 seconds.

Since this function can keep only the inverter operational during an extended momentary power failure, the applicability will depend on the remainder of the load system equipment.

Note that when using the standard control power connections, the inverter will be able to maintain control power and operate for only approx. 100msec during a momentary power failure. However, for 30kW and smaller units, control power can be maintained for a longer period of time by using the main circuit DC terminals PA and PC as shown below.

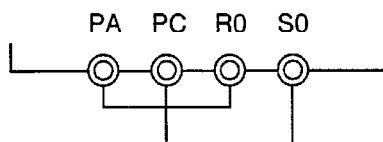

Remove the shorting bars between R0-R/L1 and S0-S/L2, or the inverter may be damaged.

Never use the above wiring for 37kW or larger units, as the inverter may be damaged.

P_r-S_t

Auto-restart

★ Set the auto-restart parameter P_r-S_t to use auto-restart.

P _r -S _t setting value	Function
0	OFF
1	On momentary power failure
2	On ST make/break
3	Both 1 and 2

P_r-S_t set to 1 ... Activates when power is restored after a main circuit and control power circuit undervoltage is detected.

P_r-S_t set to 2 ... Activates when ST-CC is opened and then closed again. (For commercial/inverter power switching)

★ Depending upon the inverter capacity, a wait time of 200ms to 1500ms is automatically set when restarting after a gate block or CPU reset to reduce the motor's residual voltage.

Cr.P1 (Protection Parameters)

SEC1	UPSL	Trip function selections
LLP	OESL	
OEL	ErCL	

Related parameters

SEC1	Stall protection	SEL1	Stall protection level
UPSL	Undervoltage trip selection	UPE	Undervoltage detection time
LLP	Low current detection selection	LLPE	Low current detection time
LLPC	Low current detection level	ErCL	Fault trip saving
OESL	Overtorque trip selection	OEL	Overtorque trip level

The stall protection, undervoltage trip, low current detection and overtorque trip functions can be selectively enabled/disabled.

Parameter	Standard setting	Function	When set to 1
SEC1	0	Stall protection ON.	Stall protection OFF.
UPSL	0	Undervoltage trip disabled.	Undervoltage trip enabled.
LLP	0	Low current trip disabled.	Low current trip enabled.
OESL	0	Overtorque trip disabled.	Overtorque trip enabled.

★ By setting the fault trip saving function **ErCL**, when a trip occurs, whether or not the trip will be maintained or cleared when the inverter is powered OFF can be selected.

A low current condition is detected when the inverter output current is less than the low current detection level **LLPC** for a duration exceeding the low current detection time **LLPE**.

OCLS Output short circuit detection selection

This parameter allows the selection of the method for detecting an output short circuit, dependent upon the motor and usage conditions.

OCLS set to 0 : Standard...Detection is executed upon start-up.

OCLS set to 1 : For high-speed motor use...Because a high-speed motor's inductance is small, the detection method is altered to prevent nuisance trips.

OCLS set to 2 : For positioning...Detection is performed during initialization after power is turned ON.

This is used to improve positioning accuracy during JOG, because the positioning will deviate with the output short-circuit check pulses.

OCLS set to 3 : For high-speed motor positioning

★ This function only changes the method for evaluating an overcurrent trip. Overcurrent protection will still always be in effect.


Cr.Fr (Protection Parameters)

Er.CL Fault trip saving

Dependent upon the setting of this parameter, trip causes can be displayed after power is cycled off and on.

Er.CL setting value	Function
0	Trip cause cleared when powered OFF
1	Trip cause retained when powered OFF

When **Er.CL** is set to **1**:

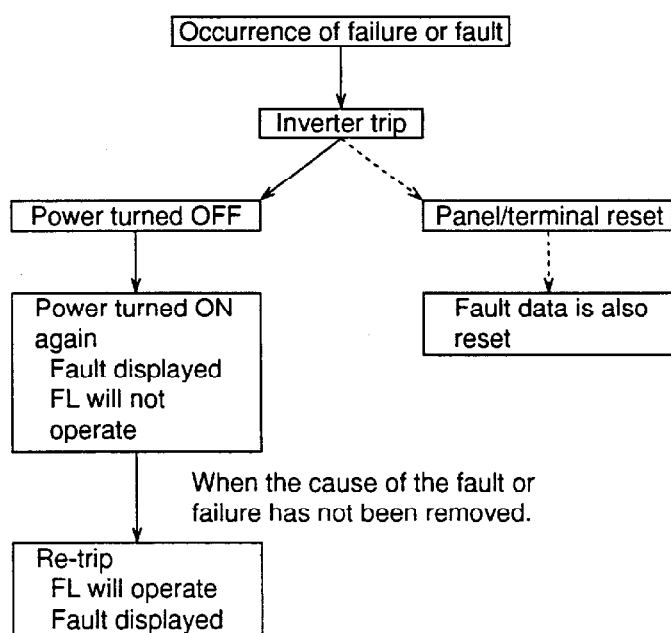

Note) The information in the trip status monitor (load current, input/output voltage, etc., at time of trip) will not be maintained when power is turned on again.

Cr.Pt (Pattern Run Parameters)

PSEL **PtN** Pattern run ①

Related parameters

PSEL	Pattern run selection	PtN	Pattern run mode
Pt10 ~ Pt47	Pattern group speed selections	PtL1 ~ PtL4	Pattern group number of cycles
SLN1 ~ SLNF	Drive continuation modes	SLE1 ~ SLEF	Speed drive times
Cr.St		It0 ~ It10	Input terminal function selections

One pattern while in panel operation mode and four patterns while in terminal operation mode can be automatically executed according to the 15 preset speeds, drive times and acceleration/deceleration times. For further information on preset speed operating frequencies and run modes, refer to **Cr.SF** **SrN**.

Basic operation setting method

1. Activate pattern run selection. **PSEL** : 0 : OFF
1 : ON
2. Set all the applicable preset speeds and run modes. **Sr01** ~ **Sr15**
SrN1 ~ **SrNF**
3. Set the drive times and continuation modes as required for each preset speed set in step 2.
Speed drive times **SLE1** ~ **SLEF**
Speed drive continuation modes **SLN1** ~ **SLNF**
4. Set the order of each speed configured in steps 2 and 3.
 - 1) Select the pattern run/stop method with the pattern run mode.
PtN : 0 : When the inverter is stopped, the run pattern is reset.
1 : Upon continuation after a stop, the pattern switches after the current pattern is finished. **Pt10** ~ **Pt17**
Pt20 ~ **Pt27**
Pt30 ~ **Pt37**
Pt40 ~ **Pt47**
 - 2) In each pattern group, select the preset speeds to be output for each pattern.
 - 3) Allocate the pattern run selection functions #1, #2, #3 and #4 with the input terminal selections **Cr.St** **It*** (*: 0 ~ 10) according to the desired pattern groups. If **S** (continue until next step command) was set in **SLN1** ~ **SLNF** in step 3, assign the pattern run step trigger signal to **It***. The run/stop method can also be selected by allocating the pattern run continuation signal.


During pattern run, the following pattern run status elements can be monitored at the beginning of status monitor mode (refer to page 40).

Pattern group, pattern number	Pt10	1 : Indicates the pattern group No. 0 : Indicates the pattern No.
No. of repetitions remaining in the pattern group	n123	Indicates 123 repetitions remaining
Preset speed	Sr.1	Indicates preset speed #1 is being used.
Remaining pattern time	1234 - - - -	The current pattern will end in 1234 sec. When infinite looping or until next step command is selected.


Gr.Ft (Pattern Run Parameters)

PSEL **PLN** Pattern run ②

SLN set to 4

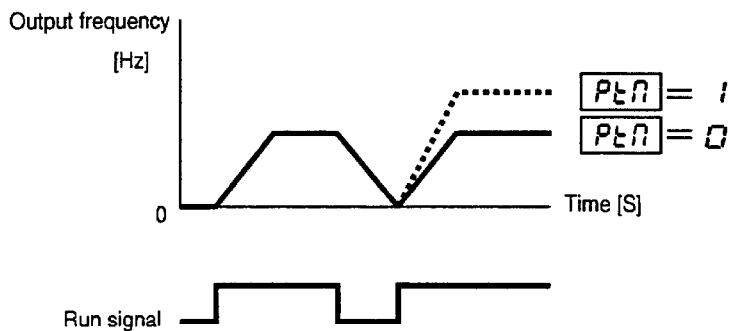

SLN set to 5

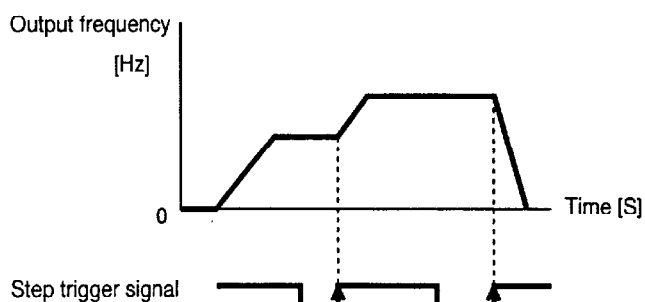


★ Allocate the pattern run step trigger signal to an input terminal with the input terminal selection **Gr.St** **It***.

★ The pattern run group may need to be selected from the terminal block.

If panel command mode is active, group #1 will always be selected.

(To use a group other than group #1, allocate the pattern run selection functions #1, #2, #3 or #4 with the input terminal selections **Gr.St** **It*** (*: 0 ~ 10), and operate from the terminal block.)

★ If all pattern run input terminals are OFF or if the pattern run is completed, normal operation will be performed.

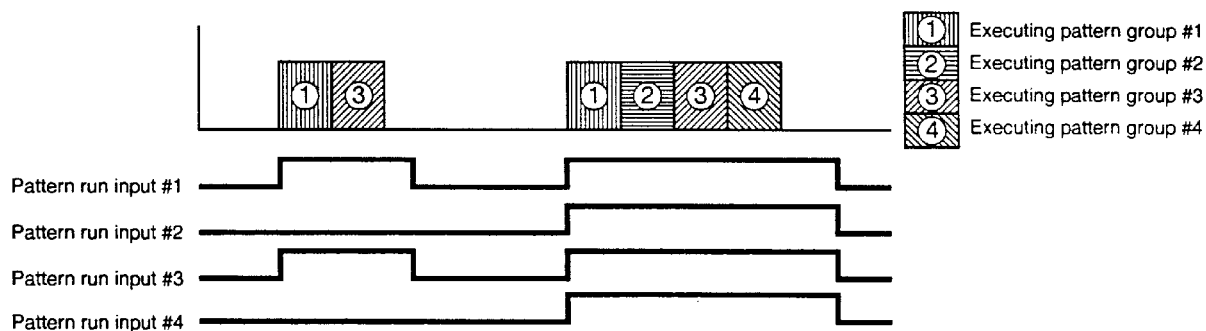

If several contacts are simultaneously activated, the smallest pattern group No. will be executed first, and the following groups will be automatically executed in sequence.

It may take approx. 0.06 sec. to search for a pattern.

U-Util (Utility Parameters)

PNOd PASS Panel operation permission

Related parameters

PNOd Panel operation mode selection

PASS Pass number

Various levels of key operations can be prohibited to prevent accidental or unwanted operations.

PNOd setting value	Function
0	Prohibit all key operations
+ 1	Can perform reset
+ 2	Can perform monitor operations
+ 4	Can perform emergency stop
+ 8	Can perform run/stop operations
+ 16	Can perform parameter read operations
+ 32	Can perform parameter change operations
63	Standard mode (all operations possible)

★ Data setting of parameters indicated as using the "+" mark is performed as follows:

Example) Set (+ 1) + (+ 2) = 3 and both + 1 and + 2 become valid.

Canceling the "prohibit all key operations" mode

1. Simultaneously press the following four keys.

PANEL/REMOTE **▲** **PRG** **ENTER**

After these keys have been pressed, 0 will be displayed on the LED display.

2. Input the pass number by selecting it with the **▲** **▼** keys. (Note)
3. Press **ENTER**.

This will cancel the "prohibit all key operations" mode.

Note) The pass number can be set between 0 and 99 with the **PASS** parameter. Set this number before setting **PNOd**. The default value is 0.

The **PNOd** setting is validated after power has been cycled OFF and ON or after a fault reset and subsequent system initialization.

★ If "can perform parameter change operations" is selected, "can perform parameter read operations" must also be selected in order to access and change parameter settings.

Cr.Ut (Utility Parameters)



Industrial application parameters selection

This parameter is used to configure various industrial application parameters (Cr.01 ~ Cr.06).

APL setting value	Function
0	Dose nothing
1	Pump application
2	Fan application
3	Conveyor application
4	Hoist application
5	Textiles application
6	Machine tools application

LED display method

Previous setting value Current setting value

- ★ The system is initialized after an industrial application parameter is selected.

Note)

If Cr.01 to Cr.06 are only unblinded via the blind function, the industrial application parameter values will not be initialized (written).

- ★ Refer to the industrial application parameter tables starting on page 133.



Standard setting mode selection

All parameter values can be automatically changed to standard values at one time by selecting one of the following settings:

EYP setting value	Function
0	Dose nothing
1	50Hz standard settings
2	60Hz standard settings
3	Return to factory settings
4	Trip clear
5	Save user-set parameters
6	Type 5 reset
7	Initialize inverter typeform

LED display method

Previous setting value Current setting value

- ★ **EYP 7** is used to clear an **EYP** error that may occur when the control PCB is installed in a different inverter unit, and to reset the typeform to that of the new inverter. If an inverter typeform error occurs when the control PCB has not been changed, do not execute a **EYP 7**, but contact your service representative for repairs.
- ★ **EYP 5** will save the current parameter settings. Even if parameters are changed, each parameter can be reset to previously-saved values by executing a **EYP 6**. This can be used for retaining individualized user settings.

Cr.Ut APL and **EYP** cannot be changed while running, so always set them after the motor has stopped.

Cr.Lt (Utility Parameters)

CNOd

Command/frequency mode selections

FNOd

Related parameters

CNOd Command mode selection

FNOd Frequency setting mode selection

CNOd and **FNOd** select the terminal, panel and option inputs.

CNOd, FNOd setting value	Function
0	Only RS232C input valid
1	Terminal input valid
2	Panel input valid
3	Option board input valid
4	Panel/terminal changeover possible

Note)

RS232C input is always valid.

★ The priority when set to 4 is as follows:

1. RS232C communication
2. Panel (select with PANEL/REMOTE key)
3. Terminal block

The following three types of contact terminal inputs are always valid regardless of the **CNOd** and **FNOd** settings.

(Refer to page 60 Cr.St **It*** (*: 0 ~ 10).)

Setting value	Function
6	RES (fault reset)
7	ST (gate ON/OFF)
10	Emergency stop

★ **CNOd** and **FNOd** can be changed while running, but the new settings will not become valid until the motor has stopped once (0.00Hz). (Always stop once after changing **CNOd** or **FNOd**.)

Gr.Ut (Utility Parameters)

NO7 1 ~ NO7 4 Status monitor display selections

The 4 programmable status monitor items can be selected from the following 16 types.

Note that No. 14 corresponds to an option ROM function. However, option ROM is not required in software version 120.

NO7 setting value	Display item	Display	Units
1	Post-compensation output frequency	: 60.0	Hz/variable setting
2	Frequency setting value	: 60.0	Hz/variable setting
3	Output current	:C 0	A/%
4	Input voltage	:Y 0	V/%
5	Output voltage	:P 0	V/%
6	Torque current	:9 0	A/%
7	Excitation current	:E 0	A/%
8	PID feedback value	:d 0	Hz/variable setting
9	Motor overload ratio	:L 0	%
10	INV overload ratio	:G 0	%
11	DBR overload ratio	:r 0	%
12	Input power	:h 0	kW
13	Output power	:H 0	kW
14	RR input	:U 0	%
15	Peak output current	:c	A/%
16	Peak input voltage	:u	V/%

★ Refer to Gr.Ut **[dSP*]** for details on the units display selection.

★ The function in the portion of **[]** is displayed in software version 120.

bLnd Blind function selection

Related parameters

[bLnd] Blind function selection

[bLF2] ~ [bLNt] Group unblind selections

Displaying of parameter groups other than Gr.F, Ut and U can be selectively configured by these parameters.

bLnd setting value	Function
0	Blind
1	Selective unblinding

★ By setting **[bLnd]** to 1, the various parameters **[bLF2] ~ [bLNt]** will be displayed. Set the parameter corresponding to the desired parameter group (**[bLF2]** for Gr.F) to 1 to cancel its blind function.

Gr-ULt (Utility Parameters)

dSP* Units settings

Related parameters

dSP2	Frequency units multiplication factor	dSPC	Current units selection
dSPF	Frequency display resolution	dSPU	Voltage units selection
dSPt	ACC/DEC time units selection		

Each configurable monitor and parameter display units can be selected by these parameters.

< Frequency units multiplication factor >

dSP2 setting	0 (OFF) 0.0 1~200
---------------------	----------------------

By setting **dSP2**, the motor speed or load equipment speed can be displayed for all parameters normally displayed in frequency units.

★ When **dSP2** is set to a value other than 0, the LED display will be the normal display value × **dSP2**.

< Frequency display resolution >

dSPF setting value	Resolution	LED display
0	1Hz	: 60.
1	0.1Hz	: 60.0
2	0.01Hz	: 60.00

< ACC/DEC time units selection >

dSPt setting value	Resolution	LED display
0	0.1sec.	: 10.0
1	0.01sec.	: 10.00

< Current units selection >

dSPC setting value	Function	Panel units LED lit
0	%	%
1	A	None

Note) The values of the monitor items that display current and the values of the following parameters will change according to the setting value.


Electronic thermal protection level #1, #2	EHr-1	EHr-2	DC injection current	dbC
Stall protection level #1, #2	StL-1	StL-2	Overtorque trip level	ObL
Low current detection level	LLPC			

< Voltage units selection >

dSPU setting value	Function	Panel units LED lit
0	%	%
1	V	None

Note) Only the voltage monitor values will change according to this setting. The values of parameters that are set in voltage units will always be displayed in V.

G-A1 (AM/FM Adjustment Parameters)

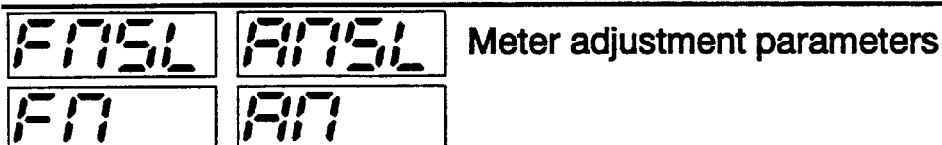

Related parameters

FNSL FM terminal function selection

ANSL AM terminal function selection

FN Frequency meter adjustment

AN Current meter adjustment

A frequency meter or current meter can be connected to the unit and configured according to the **FNSL** and **ANSL** settings.

★ The output signal from the FM (AM) terminal is a 0-1mA_{dc}, 0-7.5V_{dc} analog signal.

Use a 1mA_{dc} full-scale ammeter or 7.5V_{dc}-1mA full-scale voltmeter.

The meter's zero point should be adjusted with the meter's adjusting screw. Calibrate the scale with **FN** or **AN**.

★ The max. scale of the ammeter should be at least 2.5 times the inverter's rated output current.

FNSL ANSL	setting value	Function	Adjustment level Note 3)
	0	Pre-compensation reference frequency	(a)
	1	Post-compensation output frequency	(a)
	2	Frequency setting value	(a)
	3	Output current	(c)
	4	DC voltage Note 1)	(c)
	5	Output voltage	(c)
	6	Torque current	(c)
	7	Excitation current	(c)
	8	PID feedback value	(a)
	9	Motor overload ratio	(b)
	10	Inverter overload ratio	(b)
	11	DBR overload ratio	(b)
	12	Input power	(c)
	13	Output power	(c)
	14	Fixed output for meter adjustment Note 2)	—
	15	Peak output current	(c)
	16	Peak input voltage	(c)

The function in the portion of is displayed in software version 120.

Note 1) If **FNSL** (or **ANSL**) is set to 4 (DC voltage), a DC voltage that is less than approx. 50% of the rated voltage cannot be measured. Also, if main circuit power is OFF (NOFF displayed), an approx. 50% bias amount will be constantly output.

Note 2) Meter adjustment such as current, voltage and electric power with the inverter stop.

Note 3) Shows adjustment levels when adjusted through 14 (fixed output for meter adjustment)

(a) Output voltage of 100% at the maximum frequency (FH).

(b) Output voltage of 100% at the panel display of 100%.

(c) Output voltage of 75% at the panel display of 100%.

9. Device Specifications

9.1. Model and Standard Specifications

200V Series

Item		Standard specifications																	
Voltage class		200V class																	
Applicable motor (kW)		0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	
Type		VFA5-																	
Model		2004P	2007P	2016P	2022P	2037P	2065P	2075P	2110P	2150P	2185P	2220P	2300P	2370P	2450P	2550P	2750P	2900P	
Capacity (kVA)		1.0	2.0	3.0	4.0	6.5	9.5	13	19	25	28	34	46	55	69	84	110	133	
Rated output current (A)		3.0	5.0	7.5	10.0	16.5	25	33	49	66	73	88	120	144	180	220	288	350	
Rated output voltage		3-phase 200 to 230V (The max. output voltage is the same as the input source voltage.)																	
Overload current rating		2 minutes at 150%, 0.5 seconds at 215%																	
Dynamic braking		Dynamic braking circuitry installed																	
Electrical braking		Optional																	
Built-in dynamic braking resistor		Max. braking 100% max, 150% allowable duty cycle 3% ED																	
Main circuit: Note 1)		Optional external resistor																	
Voltage/frequency		3-phase 200V~220V-50Hz, 200~230V-60Hz																	
Control circuit: Note 1)		Single-phase 200V~220V-50Hz, 200~230V-60Hz																	
Tolerance		Voltage: ±10%, Frequency ±5%																	
Protective method		Sealed structure (JEM1030) IP20: Note 7)																	
Cooling method		Open structure (JEM1030) IP00																	
Color		Forced-air cooling																	
Approx. weight (kg)		Front cover: dark gray, Main cover: N1.5																	
		3.4	3.4	3.5	3.5	3.7	5.8	5.8	11.5	12	12	23	23	38	55	56	88	150	
		Front cover, Main cover: N3.0																	

400V Series

Item		Standard specifications																			
Voltage class		400V class																			
Applicable motor (kW)		0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	110	132	160	220	280
Type		VFA5-																			
Model		4007P	4015P	4022P	4037P	4055P	4073P	4110P	4150P	4185P	4220P	4300P	4370P	4450P	4550P	4750P	4110KP	4132KP	4160KP	4220KP	4280KP
Capacity (kVA)		2.0	3.0	4.0	6.5	9.5	13	19	25	28	34	46	55	69	84	110	160	194	236	320	412
Rated output current (A)		2.5	4.0	5.0	8.5	13	17	25	33	37	44	60	72	90	110	144	210	255	310	420	540
Rated output voltage		3-phase 380 to 460V (The max. output voltage is the same as the input source voltage.)																			
Overload current rating		2 minutes at 150%, 0.5 seconds at 215%																			
Dynamic braking		Dynamic braking circuitry installed																			
Electrical braking		Optional																			
Built-in dynamic braking resistor		Max. braking 150% allowable duty cycle 3% ED			100% max. 3% ED			Optional external resistor													
Main circuit: Note 1)		3-phase 380V~440V-50Hz, 380~460V-60Hz																			
Voltage/frequency		Single-phase 380V~440V-50Hz, 380~460V-60Hz																			
Control circuit: Note 1)		Voltage: ±10%, Frequency ±5%																			
Tolerance		Sealed structure (JEM1030) IP20: Note 7)																			
Protective method		Open structure (JEM1030) IP00																			
Cooling method		Forced-air cooling																			
Color		Front cover: dark gray, Main cover: N1.5																			
Approx. weight (kg)		3.4	3.5	3.5	3.7	5.8	5.8	11	11	11	24	24	38	39	51	60	88	93	150	200	250

■ General specifications

Control specifications	Control method	Sinusoidal PWM control
	Output voltage regulation	Main circuit voltage feedback control. (Automatic regulation, "fixed" and "control off" selections possible)
	Output frequency range	0.01 to 400Hz, set to 0.01 to 80Hz by default, max. frequency adjustable from 30 to 400Hz: Note 2)
	Frequency setting resolution	0.01Hz: operation panel input (60Hz base), 0.1Hz: analog input (60Hz base, 12-bit/0 to 10Vdc) 0.01Hz: communication input (50Hz base)
	Frequency precision	±0.2% of the max. output frequency (25°C ±10°C): analog input, ±0.01 (25°C ±10°C): digital input
	Voltage/frequency characteristics	Constant V/f, variable torque, automatic torque boost, voltage vector control and automatic energy-saving control/maximum voltage frequency adjustment (25 to 400Hz), torque boost adjustment (0 to 30%), start-up frequency adjustment (0 to 10Hz), end frequency adjustment (0 to 30Hz)
	Frequency setting signals	3kΩ potentiometer (1 to 10kΩ potentiometer connection also possible) 0 to 10Vdc (Input impedance Z _{in} : 33kΩ), 0 to 10Vdc (Z _{in} : 67kΩ), 0 to ±5Vdc (Z _{in} : 34kΩ) 4 to 20mA (Z _{in} : 500Ω)
	Terminal block reference frequency inputs	2 sources can be set from a total of five types, including analog input (RR, IV, RX), pulse input and binary input.
	Frequency jump	Can be set in three places, jump frequency and band setting
	Upper/lower limit frequencies	Upper limit frequency: 0 to max. frequency, Lower limit frequency: 0 to upper limit frequency
	PWM carrier frequency selection	Adjustable between 0.5 and 17kHz (refer to page 71)
	PID control	Proportional gain, integral gain, anti-hunting gain, lag-time constant adjustments
	Operating specifications	Acceleration/deceleration times
DC injection braking		Braking starting frequency adjustment (0 to 120Hz), braking current adjustment (0 to 100%), braking time adjustment (0 to 10 sec.), emergency stop braking function, motor shaft stationary control function
Forward/reverse run		Forward run when F-CC "closed", reverse run when R-CC "closed", reverse run when both "closed", coast-stop when ST-CC "opened". Emergency stop from panel or terminal block.
Jog run		Jog run from panel with JOG mode selection. Terminal block operation possible with parameter settings.
Preset speed operation: Note 6)		Set frequency + 15 preset speeds possible with open/closed combinations of SS1, SS2, SS3, SS4 and CC.
Retry		When a protective function activates, after main circuit devices are checked, running restarts. Settable to a max. of 10 times. Wait time adjustment (0 to 10sec.).
Soft stall		Automatic load reduction control during overload. (Default setting: OFF)
Cooling fan ON/OFF		Fan is automatically stopped when not necessary to ensure extended lifetime.
Panel key operation ON/OFF control		Prohibit functions such as reset only or monitor only, etc., can be selected. All key operations can also be prohibited. A cancel protection function using a password (number) is also built-in.
Regeneration power ride-through control		Operation is continued even during momentary power failure using regenerative energy from the motor. (Default setting: OFF)
Auto-restart		A coasting motor can be smoothly restarted. (Default setting: OFF)
Simple pattern run		4 groups of 8 patterns each can be set to the 15 preset speed values. A max. of 32 different patterns can be run. Terminal block control/repetitive run possible.

Protection	Protective functions		Stall prevention, current limit, overcurrent, overvoltage, load-side short circuit, load-side ground fault, undervoltage, momentary power failure (15ms and longer), regeneration power ride-through control, electronic thermal overload protection, armature overcurrent during start-up, load-side overcurrent during start-up, dynamic braking resistor overcurrent/overload, heatsink overheat, emergency stop, <open output phase>: Note3)
	Electronic thermal protection characteristics		Standard motor/constant-torque VF motor switching, electronic thermal stall prevention operation level adjustment
	Reset		Reset when 1a contact point is "closed", or reset by panel. Tripped state retention and clear settings.
Display	4-digit, 7-segment LED	Output frequency/stop display	Displays 0.0 to 400Hz and OFF status. While running, displays stall prevention, overvoltage limit, overload, power-source undervoltage, DC circuit undervoltage, and executing retry. Parameters: setting error, upper limit, lower limit
		Fault causes	Overcurrent, overvoltage, heatsink overheat, load-side short circuit, load-side ground fault, inverter overload, armature overcurrent during start-up, load-side overcurrent during start-up, (dynamic braking unit overcurrent/overload), (emergency stop), EEPROM error, RAM error, ROM error, communication error, (undervoltage), (low current), (overtorque), (open output phase), (motor overload). Items in parentheses can be selected/deselected.
	Monitor functions		Terminal input/output status, forward/reverse, frequency setting value, output current, DC current, output voltage, output power, torque current, cumulative run time, past faults, overload ratio, post-compensation output frequency
	Selectable units display		Can select frequency display to match motor speed, line speed, etc. Selection of display of current in amperes/%, voltage in volts/%.
	Edit function		Automatic editing of parameters differing from standard values. Allows for easy searching of changed parameters.
	Blind function		Select to not display unneeded parameter groups.
	User settings initialization		Saving of user parameter values for initialization resetting possible. Parameters can be easily reset to user default setting values.
	LED		Charge indicator
Output signals	Fault detection signal : Note 4)		1c contact output (ac250V-2A-cos ϕ = 1, ac250V-1A-cos ϕ = 0.4, DC30V-1A)
	Low speed/speed reach signal outputs : Note 4)		Open-collector outputs (Max. 24Vdc, Max.50mA, output impedance: 33 Ω)
	Upper/lower limit frequency signal outputs : Note 4)		Open-collector outputs (Max. 24Vdc, Max. 50mA, output impedance: 33 Ω)
	Frequency meter/ammeter outputs : Note 5)		1mAdc full-scale ammeter or 7.5Vdc-1mA voltmeter
	Pulse-train frequency output		Open-collector output (Max. 24Vdc, Max. 50mA)
Communication functions			RS232C equipped as standard (Connector: modular 6P), RS485, TOSLINE-F10, TOSLINE-S20 are optional.
Service conditions	Service environment		Indoor, altitude 1000m or less, not subject to direct sunlight or corrosive/explosive gases
	Ambient temperature		-10 to +40°C (Max. 50°C possible when cover is removed: notes 8 and 9)
	Storage temperature		-25 to +65°C
	Relative humidity		20 to 90% (no condensation allowed)
	Vibration		5.9m/s ² {0.6G} or less (10 to 55Hz) (according to JIS C0911)

Note 1) In standard configuration on 30kW and smaller units, the control power inputs are connected to the main circuit power source. These can be easily separated if necessary.

Note 2) 800Hz is possible with special modifications, but a de-rating of the output current rating is necessary.

Note 3) Optional.

Note 4) Programmable ON/OFF output terminal signals. Can be allocated from 62 types of signals.

Note 5) Programmable analog output terminal. Can be allocated from 14 types of signals.


Note 6) The 11 contact input terminals (of which three are optional) are programmable contact input terminals, and can be allocated from 52 types of signals.


Note 7) Three holes can be opened for input main circuit wiring, output main circuit wiring, and control circuit wiring, but the openings must be securely covered after wiring.

Note 8) When the cover is removed, always install the unit in a panel so that charged sections are not exposed. 22kW and larger units can handle -10 to 50°C without removal of the cover.


Note 9) 22kW and larger units have a large opening instead of a wiring cover, and there is no space for bending externally-connected cables inside the unit. Use the optional wire opening cover when the unit is not installed in a panel.

9.2 External Dimensions

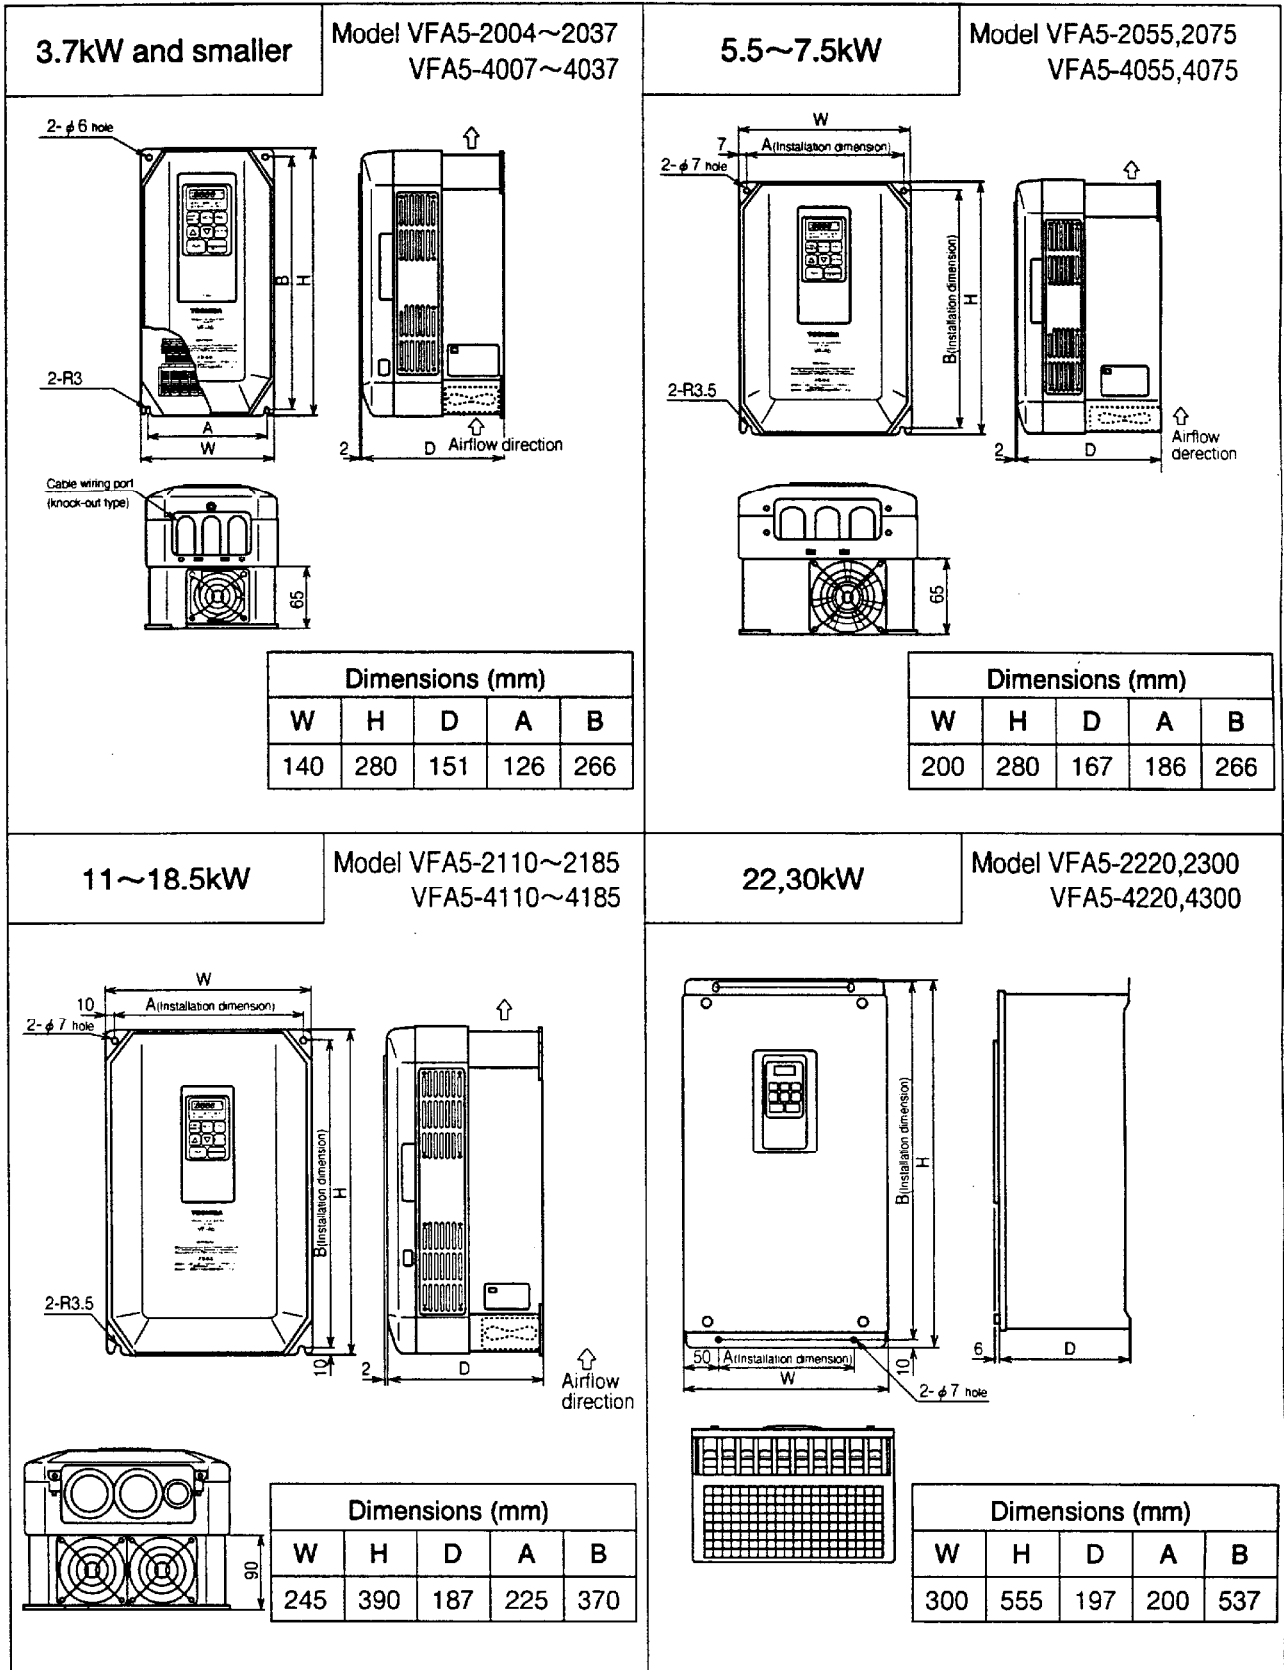


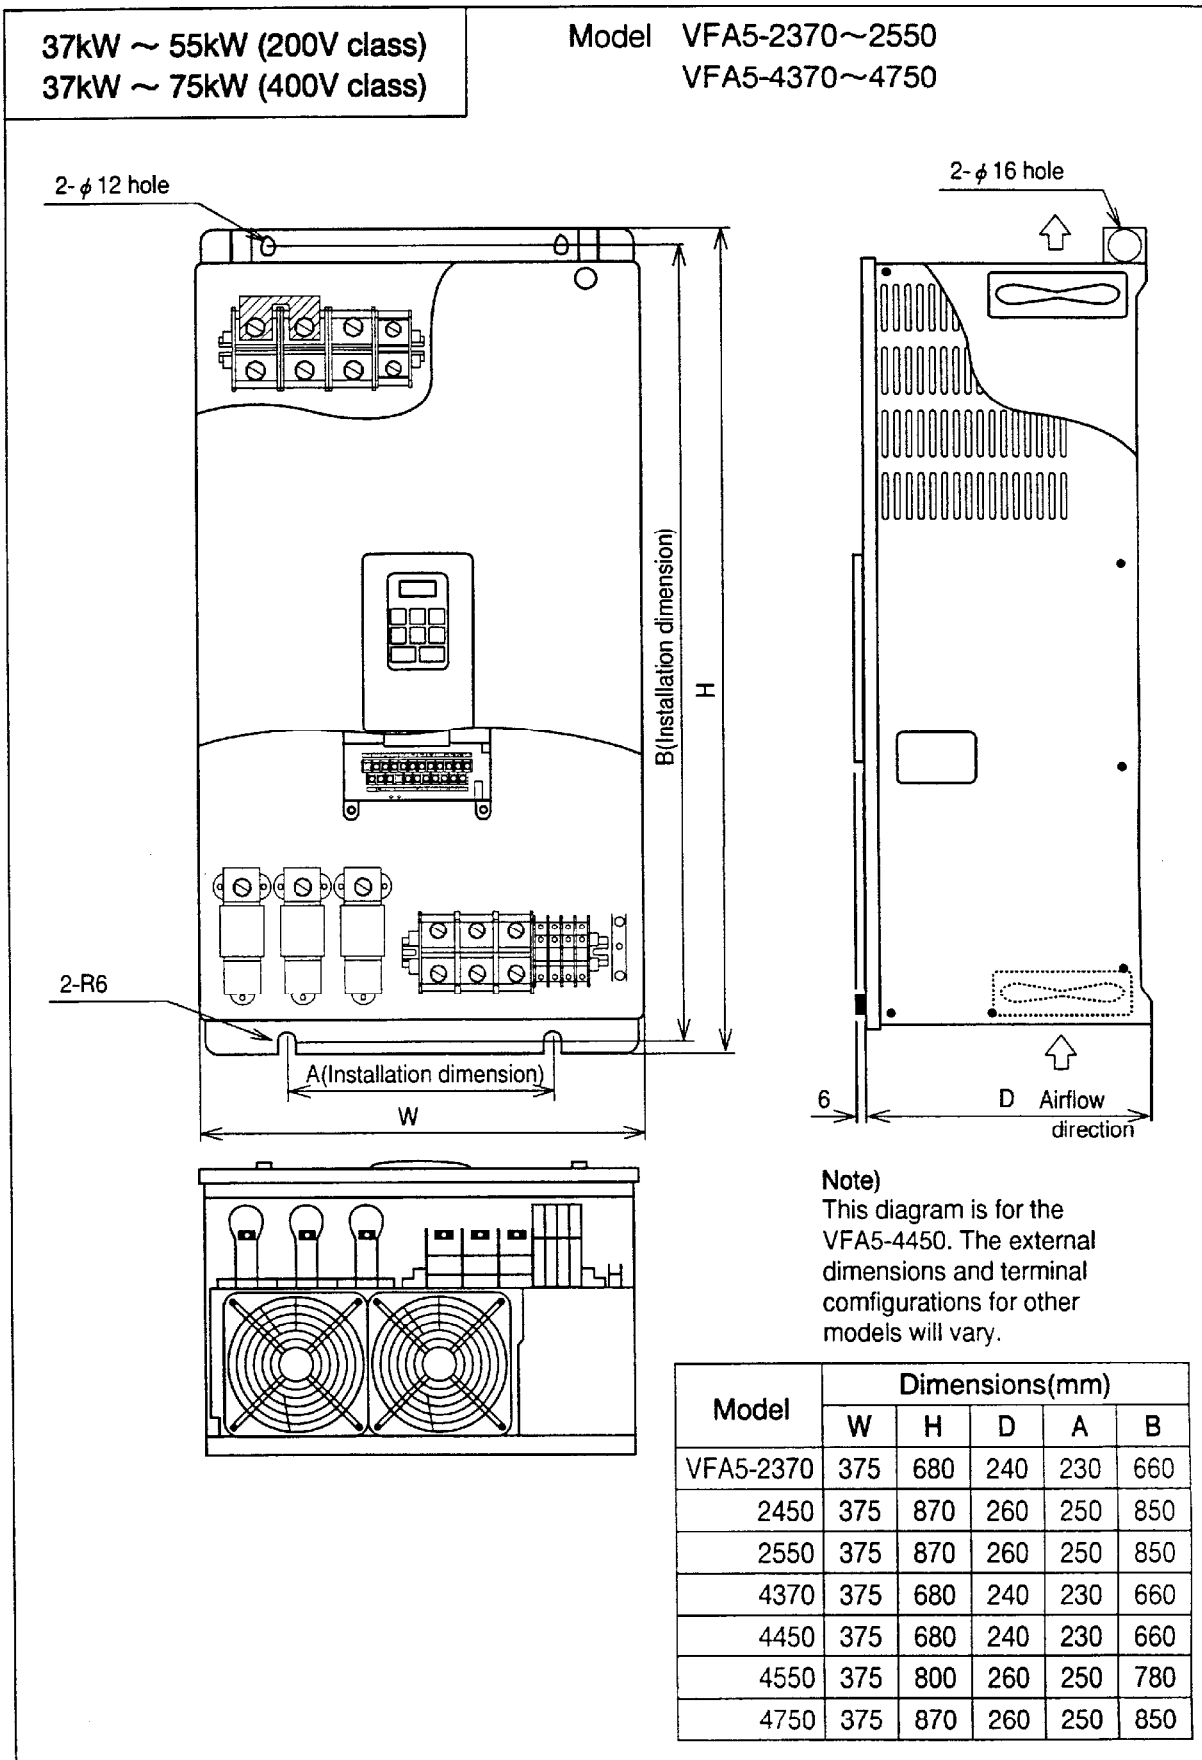



75kW , 90kW (200V class)
 110kW ~ 280kW (400V class)

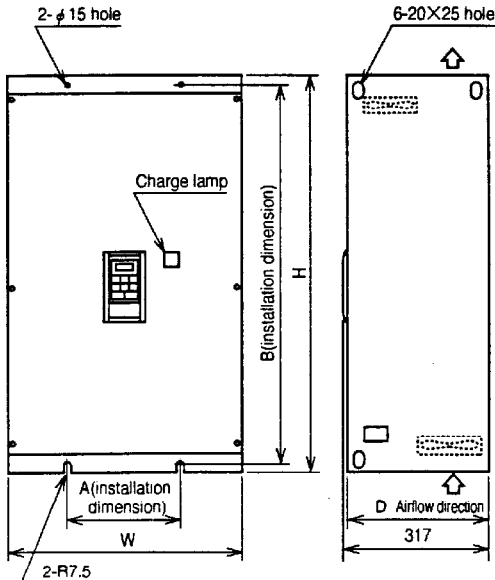



Model	Dimensions(mm)					Outline drawing
	W	H	D	A	B	
VFA5-2750P	520	880	312	250	850	A
VFA5-2900P	660	1050	360	300	1020	B
VFA5-4110KP	520	880	312	250	850	A
VFA5-4132KP						B
VFA5-4160KP	660	1050	360	300	1020	B
VFA5-4220KP	800					C
VFA5-4280KP	880					

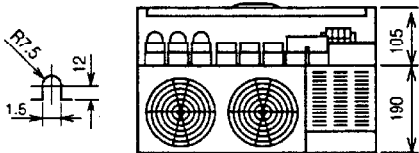

Outline drawing (A)

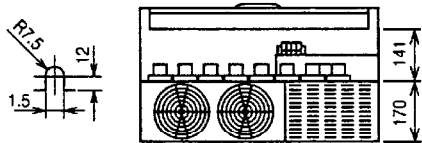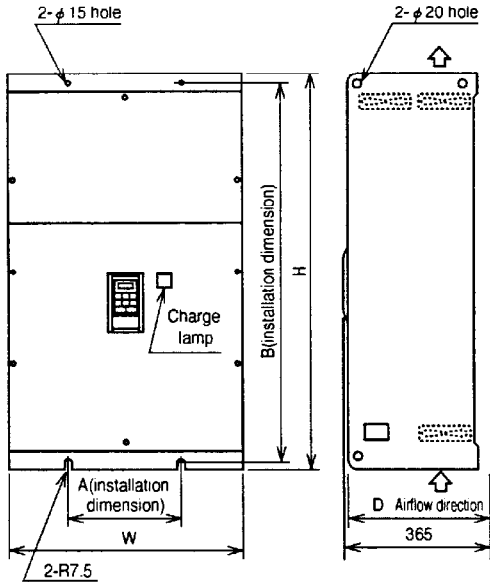


Outline drawing (B)

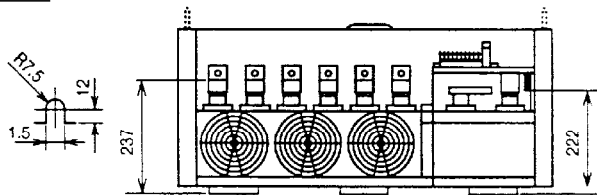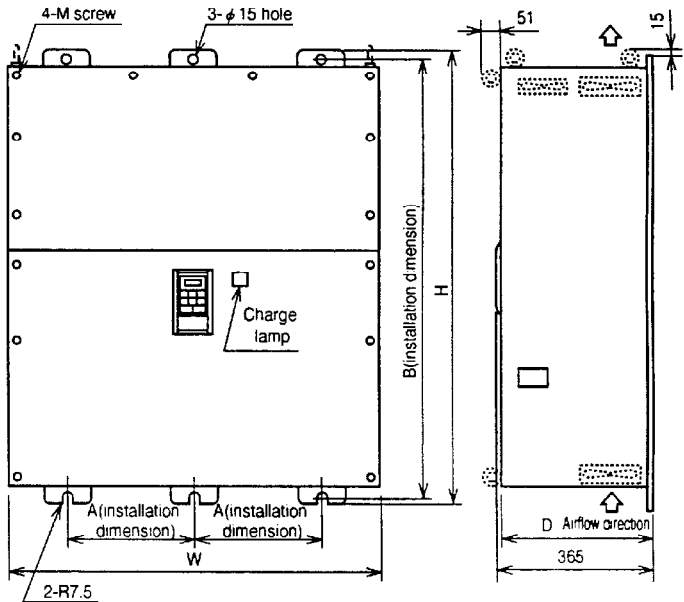


Outline drawing (C)

External installation of operating panel


● Panel dimensions

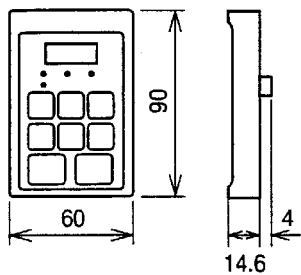

● Installation plate dimensions

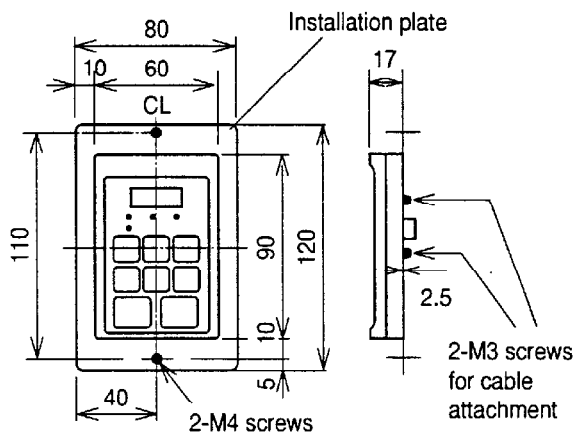

● Panel opening dimensions

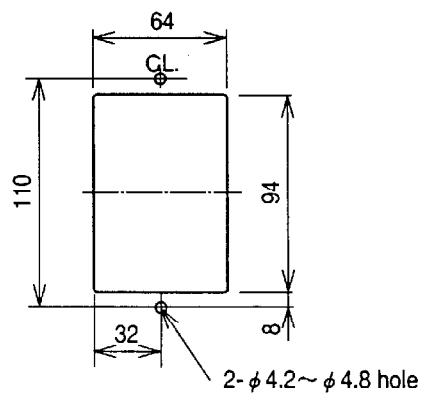

10. Options

Standalone and installable options are available for this units. Select according to your application.

10.1 Standalone Options

Name	Model	Functions and purpose
Input AC reactor	PFL 2012S~2600S PFL4012S~4800S	Input power-factor improvement Input high-harmonic reduction
Low-impedance AC reactor	PFL 2012Z~2300Z PFL4015Z~4150Z	External surge suppression (These units are always necessary when connecting to a power source with a very large capacity or which contains distortion or surges from thyristor drives, etc.)
DC reactor	DCL 2055~2900 DCL4110~4280K	
Radio noise reduction filter	HF3005A-Z~HF3240A-Z HF3010C-Z~HF3200C-Z	Effective for preventing radio noise interference to audio equipment used near the inverter.
Braking resistor	PBR3 DGP600W	Resistor for consumption of energy during dynamic braking. (Refer to table below.) The optional dynamic braking drive circuit (GTR7) is required for 22kW and larger units.
Operation box for remote operation	CBV-7B2	Unit with built-in frequency meter, frequency selector and ON/OFF pushbutton.
	CBV-CE	Unit with RUN/STOP switch to start and stop the inverter.
Parameter writer	PWA5-003	For reading, editing, copying and writing inverter parameters.
Application control unit	AP series	When used in combination with the VF-A5, the AP series performs various application control functions.
RS232C communication cable	R2A5-0J5	For J3100 DB9 : 5m
	R2A5-0P5	For PC98 DB25 : 5m

★Braking resistor value... Do not connect a braking resistor with a resistance less than the min. allowable resistance.

Inverter capacity (kW)	200V class		400V class	
	Standard option resistance	Min. allowable resistance	Standard option resistance	Min. allowable resistance
0.4	70 Ω (built-in)	35 Ω	—	—
0.75	70 Ω (built-in)	35 Ω	150 Ω (built-in)	125 Ω
1.5	70 Ω (built-in)	35 Ω	150 Ω (built-in)	125 Ω
2.2	70 Ω (built-in)	35 Ω	150 Ω (built-in)	125 Ω
3.7	40 Ω (built-in)	20 Ω	150 Ω (built-in)	125 Ω
5.5	20 Ω	16.7 Ω	80 Ω	60 Ω
7.5	15 Ω	15 Ω	80 Ω	60 Ω
11	10 Ω	10 Ω	40 Ω	20 Ω
15	7.5 Ω	7.5 Ω	30 Ω	20 Ω
18.5	7.5 Ω	5 Ω	30 Ω	20 Ω
22	3.3 Ω	3.3 Ω	13.3 Ω	13.3 Ω
30	3.3 Ω	3.3 Ω	13.3 Ω	13.3 Ω
37	2 Ω	2 Ω	8 Ω	6.7 Ω
45	2 Ω	1.7 Ω	8 Ω	6.7 Ω
55	2 Ω	1.7 Ω	8 Ω	5 Ω
75	1.7 Ω	1.3 Ω	8 Ω	3.3 Ω
90	1.7 Ω	1 Ω	—	—
110	—	—	3.7 Ω	2.5 Ω
132	—	—	3.7 Ω	2.5 Ω
160	—	—	3.7 Ω	1.3 Ω
220	—	—	1.9 Ω	1 Ω
280	—	—	1.4 Ω	1 Ω

10.2 Installable Options

	Option name	Function and purpose	Model	Remarks (Note 1)
Input/output expansion	12-bit Binary Input	12-bit binary input	VF5X-4526A	A
	Expansion terminal block PCB	Expansion terminal block PCB 1A	VF5X-4514A	(Note 2) B
		Expansion terminal block PCB 1B	VF5X-4514B	
		Expansion terminal block PCB 1C	VF5X-4514C	
		Expansion terminal block PCB 1D	VF5X-4514D	
		Expansion terminal block PCB 2A	VF5X-4515A	B
		Expansion terminal block PCB 2B	VF5X-4515B	
Expansion terminal block PCB 2C	VF5X-4515C			
Communication	RS-485 PCB	Allows use of RS-485 communication.	VF5X-4524A	A
	TOSLINE-F10 interface PCB	Allows use of TOSLINE-F10 communication.	VF5X-1254A	C
	TOSLINE-S20 interface PCB	Allows use of TOSLINE-S20 communication.	VF5X-1255A	C

Note 1) Simultaneous use of installable options:

Only simultaneous use of one option from the A group and B group is possible.

Example: VF5X-4526A and VF5X-4515A: Simultaneous use possible

VF5X-4515B and VF5X-1254A: Simultaneous use not possible

The C group options must be used independently.

Note 2) VF5X-4514 and Control terminal IV cannot be used simultaneously.

It is advised to adopt the combination with VF5X-4515 when the control terminal IV is used.

The functions of each expansion terminal block PCB are as shown below:

	S5-7 terminals	Ry output	PG input	TG input	4-20mA output
Expansion terminal block PCB 1A	Available	1C	Selectable	Selectable	1 circuit
Expansion terminal block PCB 1B	Available	1C	Selectable	Selectable	Not available
Expansion terminal block PCB 1C	Available	1C	Available	Not available	Not available
Expansion terminal block PCB 1D	Available	1C	Available	Not available	1 circuit
Expansion terminal block PCB 2A	Selectable	3C	Selectable	Not available	2 circuits
Expansion terminal block PCB 2B	Selectable	3C	Selectable	Not available	Not available
Expansion terminal block PCB 2C	Available	3C	Not available	Not available	Not available

Note) S5-7 terminals : Contact input terminals S5, S6, S7

Ry output : No. of relay contact outputs

PG input : Pulse generator input terminals (PG, P12)

TG input : Tachometer input circuit (absolute value circuit + gain adjustment)

4-20 mA output : Circuit to convert FM/AM output signals to 4-20mA current signals.

11. Error Displays and Troubleshooting

Inverter trip causes and remedies are shown in Table 11-1, and the causes and remedies of other problems are shown in Table 11-2. If part replacement is necessary, or when the problem cannot be remedied with the listed procedures, contact your nearest Toshiba branch or sales office.

11.1 Inverter Trip Causes and Remedies

Trip cause displays, alarm displays, display details, and applicable remedies are listed below.

Table 11-1 Fault displays, details, and remedies

Display	Details	Presumed causes	Remedies	Reference page
OC1 OC1P	Overcurrent during acceleration (DC section)	<ul style="list-style-type: none"> The acceleration time [ACC] is too short. The V/f selection is incorrect. Start was attempted on a rotating motor after a momentary power failure, etc. Is a special (low impedance) motor being used? 	Increase the acceleration time [ACC].	53
			Check the V/f pattern setting.	50
			Use auto-restart or regeneration power ride-through control.	84
			Try inserting an AC reactor on the output.	103
			Try increasing the carrier frequency.	71
OC2 OC2P	Overcurrent during deceleration (DC section)	<ul style="list-style-type: none"> The deceleration time [DEC] is too short. 	Increase the deceleration time [DEC].	53
OC3 OC3P	Overcurrent during constant speed run (DC section)	<ul style="list-style-type: none"> The load changed suddenly. The load is faulty. 	Reduce the load fluctuations. Check the load equipment.	5
Note)	There are causes other than those listed above for OC1P, OC2P and OC3P.	<ul style="list-style-type: none"> A main circuit power transistor is faulty. The overheating protection has functioned. (5.5~30kW) The control power supply undervoltage protection has functioned. (5.5~30kW) 	Refer to OCA. Refer to OH. Refer to UP1, POFF, NPOFF.	105 106 107
OCL	Overcurrent (overcurrent on load-side during start-up)	<ul style="list-style-type: none"> The output main circuit wiring or motor insulation is faulty. The motor impedance is too small. 	Check the condition of the wiring and insulation.	9
			Change the setting of the output short circuit detection selection [OCLS].	85
OCA1	U-phase armature short circuit	<ul style="list-style-type: none"> The main circuit U-phase power transistor is faulty. 	Check the main circuit U-phase power transistor. The transistor element must be replaced.	21
OCA2	V-phase armature short circuit	<ul style="list-style-type: none"> The main circuit V-phase power transistor is faulty. 	Check the main circuit V-phase power transistor. The transistor element must be replaced.	21
OCA3	W-phase armature short circuit	<ul style="list-style-type: none"> The main circuit W-phase power transistor is faulty. 	Check the main circuit W-phase power transistor. The transistor element must be replaced.	21
OP1	Overvoltage during acceleration	<ul style="list-style-type: none"> The input voltage fluctuated abnormally. <ol style="list-style-type: none"> The power source capacity is 500kVA or more. Power-factor improvement capacitors went on-line/off-line. A device using thyristors is connected to the same power line. Start was attempted on a rotating motor after a momentary power failure, etc. 	Try inserting an input AC reactor.	13
			Use auto-restart or regeneration power ride-through control.	84
OP2	Overvoltage during deceleration	<ul style="list-style-type: none"> The deceleration time [DEC] is too short. (The amount of regenerated power is too large.) The DBR resistance value [Pbr] is too large. The dynamic braking function [PB] is OFF. OP stall [OPSS] is OFF. The input voltage fluctuated abnormally. <ol style="list-style-type: none"> The power source capacity is 500kVA or more. Power-factor improvement capacitors went on-line/off-line. A device using thyristors is connected to the same power line. 	Increase the deceleration time [DEC].	53
			Install a dynamic braking resistor.	103
			Decrease the dynamic braking resistance value [Pbr]. Select the dynamic braking function [PB].	82
			Select OP stall [OPSS]. Try inserting an input AC reactor.	13

Table 11-1 Fault displays, details, and remedies

Display	Details	Presumed causes	Remedies	Reference page
OP3	Overvoltage during constant speed run	<ul style="list-style-type: none"> The input voltage fluctuated abnormally. <ol style="list-style-type: none"> The power source capacity is 500kVA or more. Power-factor improvement capacitors went on-line/off-line. A device using thyristors is connected to the same power line. The motor is rotating at a frequency higher than the inverter output frequency due to a force on the load, and is in a regenerative state. <ol style="list-style-type: none"> There are multiple mechanically-coupled motors. The load undergoes piston-type cyclic movement. 	Try inserting an input AC reactor.	13
			<ul style="list-style-type: none"> Change the load so that a regenerative state is not entered. Install a dynamic braking resistor. 	17
OL In	Inverter overload	<ul style="list-style-type: none"> Sudden motor acceleration was attempted. The DC injection current (time) is set too high (long). Start was attempted on a rotating motor after momentary power failure, etc. The load is too large. 	Increase the acceleration time [ACC] .	53
			Decrease the DC injection current [dBC] and DC injection time [dBE] .	79,80,81
			Use auto-restart or regeneration power ride-through control.	84
			Increase the inverter rating.	95,96
OL NE	Motor overload	<ul style="list-style-type: none"> V/f is incorrect. The motor is constrained. Continuous running at low speeds. Motor is being operated in the overload area. 	Check the V/f pattern setting.	50
			Check the load equipment.	5
			Adjust [OLF] according to the motor's overload handling characteristics at low speeds.	77
OCr	Dynamic braking resistor overcurrent trip	The dynamic braking circuit transistor is faulty.	Repair is required.	—
OLr	Dynamic braking resistor overload trip	<ul style="list-style-type: none"> The motor decelerated suddenly. The DC injection current is too high. 	Increase the deceleration time [DEC] .	53
			Decrease the DC injection current [dBC] and DC injection time [dBE] .	79,80,81
OH	Overheat	<ul style="list-style-type: none"> The cooling fan is not working. The fan ventilation inlet is blocked. Another heat-generating device is located nearby. The thermistor in the unit is dislocated. 	Check the cooling fan.	—
			Check the inverter installation space. Do not place heat-generating devices near the inverter. Check the main circuit PCB CN6.	2
EFU	DC fuse cut	The DC fuse is cut.	Replacement of the fuse is required.	—
E	Emergency stop	Motor was stopped during automatic run or remote operation with the panel.	Reset.	48, 49
EEP1	EEPROM fault	An error occurred during writing of data to the EEPROM.	Cycle power to the unit OFF/ON. If the error persists, repair is required.	49
EEP2	Initial read fault	Fault in the internal data.	Repair is required.	—
E-r-2	RAM fault	Fault in the microcontroller RAM.	Repair is required.	—
E-r-3	ROM fault	Fault in the microcontroller ROM.	Repair is required.	—
E-r-4	CPU fault	Fault in the microcontroller CPU.	Repair is required.	—
E-r-5	Communication interruption error	A fault occurred during communication operation.	Check the communication device and wiring, etc.	—
E-r-5	Gate array fault	Fault in the main gate array.	Repair is required.	—
E-r-7	Output current detection device fault	Fault in the output current detection device.	Repair is required.	—
E-r-8	Option PCB fault	Fault in an option PCB.	Check the option PCB connections, etc.	—
E-r-9	Optional ROM drop-off error	Optional ROM is not mounted correctly. (Only for the software version 120)	Remount the optional ROM, then enter 3 on [ESP] of CR-UE to clear the data.	—
*UC	Low current run condition trip	The output current dropped to the low current detection level while running.	Check that it is adjusted to the detection level suitable for the system: [LPC] . If the setting has no abnormality, repair is required.	—

Table 11-1 Fault displays, details, and remedies

Display	Details	Presumed causes	Remedies	Reference page
*UP1	Undervoltage trip (main circuit)	<ul style="list-style-type: none"> Input voltage (main circuit) is insufficient while running. Momentary power failure exceeding the undervoltage detection time [UP1] occurred. 	<p>Check the input voltage.</p> <p>Set the regeneration power ride-through control [UV1], auto-restart [R-SE], and undervoltage detection time [UP1].</p>	— 84,85
*OT	Overtorque trip	<ul style="list-style-type: none"> Load torque reached overtorque detection level while running. 	Decrease load fluctuations.	5
EF1 EF2	Ground fault trip	<ul style="list-style-type: none"> Ground fault in output cable or motor. 	Check the grounding wires, etc.	10,11
ETn	Auto-tuning error	<ul style="list-style-type: none"> Is a motor that is 2 or more ranks smaller than the inverter capacity being used? Are extremely small inverter output cables being used? Is the motor rotating? Is a device other than a 3-phase induction motor connected? 		95,96
ETSP	Inverter typeform error	<ul style="list-style-type: none"> Has the control PCB been replaced? (Or the main circuit/drive PCB) 	<p>If replaced, ...Check the inverter typeform with Gr-ut [F07], and compare with the typeform table on page 132. If the typeform is the same, set Gr-ut [ESP] to 7 to clear the error.</p> <p>If not replaced, ...Repair is required.</p>	90,132

The trip validity can be selected via parameters for items marked with * .

Table 11-1 Fault displays, details, and remedies

Informational messages (messages that do not indicate trips).

Display	Details	Presumed causes	Remedies	Reference page
OFF	ST terminal not activated	<ul style="list-style-type: none"> The ST-CC connection is open. 	Close ST-CC.	15
POFF	Control circuit undervoltage	<ul style="list-style-type: none"> The voltage between the control power terminals R0 and S0 is insufficient. 	Measure the control power voltage. Unit repair is required if correct.	15
NOFF	Main circuit undervoltage	<ul style="list-style-type: none"> The voltage between the main circuit power terminals R, S and T is insufficient. 	Measure the main circuit power voltage. Unit repair is required if correct.	15
RETRY	Displayed during retry	<ul style="list-style-type: none"> Retry is being executed. 	If the inverter starts again after a few seconds, there is no problem.	83
ERR1	Frequency point setting fault alarm	<ul style="list-style-type: none"> The settings of frequency reference points [P1] and [P2] are too close. 	Set [P1] and [P2] further apart.	76
CLR	"Clear acceptance possible" display	<ul style="list-style-type: none"> This display will appear if [RESET] is pressed after a trip display. 	Press [RESET] again, and the unit will be reset.	49
EOFF	"Emergency stop acceptance possible" display	<ul style="list-style-type: none"> Stop has been executed from the panel during automatic or remote operation. 	The motor will emergency stop if [STOP] is pressed again. To cancel, press another key.	48,49
CTRL	"Operating panel coast-stop acceptance possible" display	<ul style="list-style-type: none"> The inverter is in the coast-stop input standby state. 	Stop with the [STOP] key or press another key to cancel.	48
H1 LO	Setting value limit warnings Error display and data are alternately displayed twice	<ul style="list-style-type: none"> A setting value limit has been reached. 	Check that the desired setting value is correct.	—
db dbon	DC injection braking display	<ul style="list-style-type: none"> DC injection braking is being executed. Motor shaft stationary control is being executed. 	<p>If the display goes out after a few seconds, there is no problem. (Note)</p> <p>If the display goes out with the stop command, there is no problem.</p>	79,80,81
ERR	Password No. error	<ul style="list-style-type: none"> The password No. entered is incorrect. 	Input the correct password No.	89
E1	Too many digits attempted to be displayed	<ul style="list-style-type: none"> The No. of digits attempted to be displayed on the panel, such as for frequency, exceeds four digits. 	Decrease the [252] (frequency multiplication factor) setting.	93

Note) If the DC injection braking ON/OFF function is selected with an input terminal selection, open that terminal and CC. If the "db" display goes out, there is no problem.

<i>L</i>	Overload alarm	Same as <i>OL In</i> and <i>OLNt</i>
<i>P</i>	Overvoltage alarm	Same as <i>OP 1 ~ OP 3</i>
<i>C</i>	Overcurrent alarm	Same as <i>OC 1 ~ OC 3</i>
<i>H</i>	Overheat alarm	Same as <i>OH</i>


If multiple alarms from the above set occur simultaneously the display will behave as follows:

LC
PC
CH
LPC
:
:
LPCH

L , *P* , *C* , *H* will be sequentially displayed from the left.

11.2 Other Fault Troubleshooting

Perform the following checks if other faults occur.

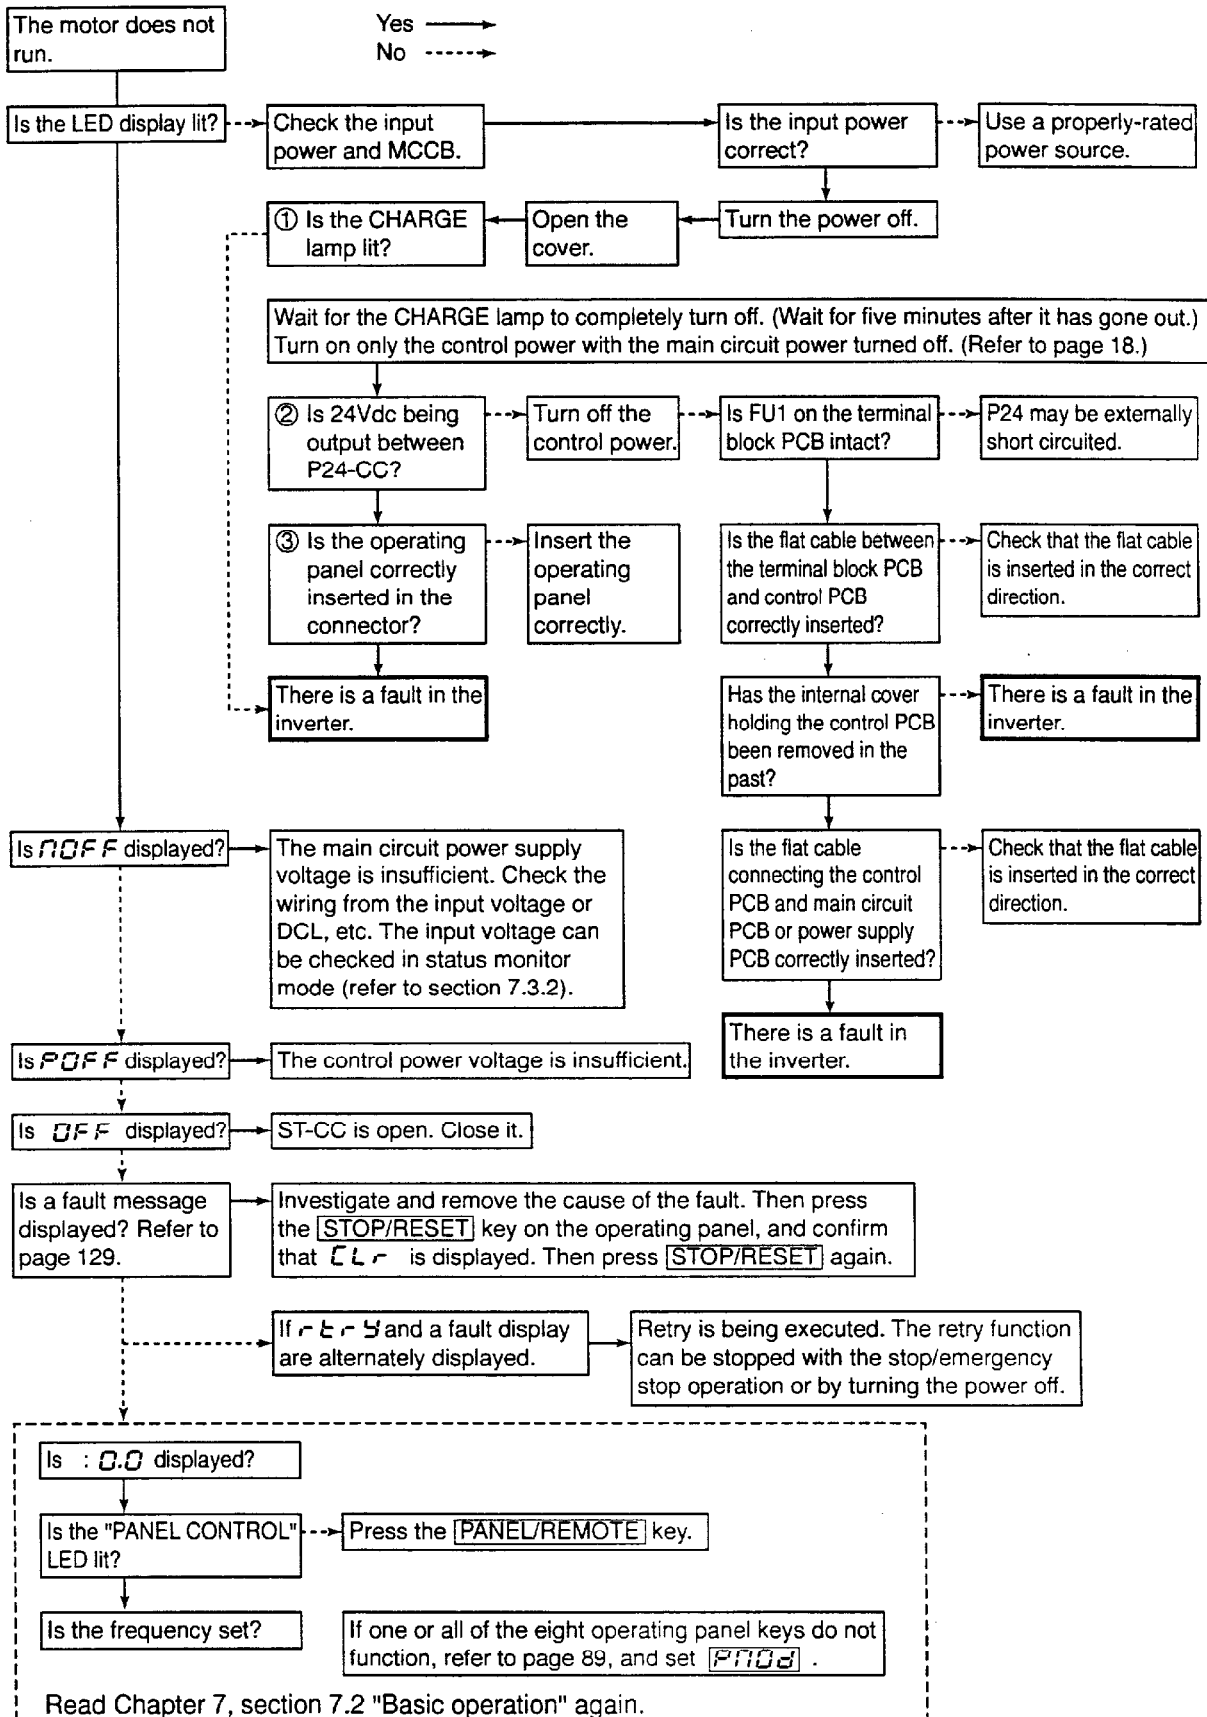

12. Maintenance and Inspection

12.1 Preventive Maintenance and Periodic Inspection

Preventive maintenance is required to operate this inverter in its optimal condition, and to ensure a long unit lifetime.

Perform a periodic inspection once every three to six months, depending on operating conditions. Before starting inspections, always turn off all power supplies to the unit. Wait at least five minutes after the "CHARGE" lamp has gone out, and then confirm that the capacitors have fully discharged by using a tester, etc., that can measure high-voltage DC. (Measure the voltage between PA and PC on the inverter's main circuit terminal block.)

[Inspection points]

1. Check that the wiring terminal screws are not loose. Tighten if necessary.
2. Check that there are no defects in the wire terminal crimp points. Visually check that the crimp points are not scarred by overheating.
3. Visually check the wiring and cables for damage.
4. Clean off any dust and dirt with a vacuum cleaner. Place special emphasis on cleaning the ventilation ports and PCBs. Always keep these areas clean, as adherence of dust and dirt can cause unforeseen failures.
5. If use of the inverter is discontinued for a long period of time, turn the power on at least once every two years and confirm that it still functions properly.
To confirm functionality, disconnect the motor and energize the inverter for five hours or more before attempting to run a motor with it.
Do not directly connect a commercial power source to the inverter, but gradually raise the input voltage using a Variac, etc.
6. When performing an insulation test, use a 500V megger, and test only the main circuit terminals.

Never perform an insulation test on the other terminals or the control circuit terminals on the PCB.

- ★ When performing an insulation test on the motor, disconnect the output terminals U, V and W from the motor.

7. Hi-pot tests


Do not perform hi-pot tests on the inverter as they may damage the unit's internal components.

8. Voltage and temperature checks.

Regular measurements of the inverter's input and output voltages with a tester is effective for detecting problems before they become critical. The output voltage reading may differ depending on the type of tester or voltmeter being used. It is for this reason that a record should be kept of your inverter's daily or weekly output voltages, in order to identify deviations from the normal values.

Measure the voltages on the input side between terminals R-S, S-T and T-R.

Measure the voltages on the output side between terminals U-V, V-W and W-U.

[Recommended voltmeters] Input side: Moving-iron voltmeter ()

Output side: Rectifying voltmeter ()

Regular measurements of the ambient temperatures of the inverter at start-up, while running, and at shutdown is also an effective method for finding problems before they can become critical.

12.2 Component Replacement

The inverter is composed of various electronic components including semiconductor elements. Periodic inspection of the following components is necessary, as their characteristics will change over time due to their structure or material. This may cause inverter performance to decrease and may lead to more serious failures.

1) Cooling fan

The lifetime of the cooling fan (used to cool heat-generating components such as the main circuit semiconductor elements) is approx. 30,000 hours (approx. 2 to 3 years of continuous operation). If abnormal noise or vibration is detected during a periodic inspection and the fan is determined to be the cause, it must be replaced.

2) Smoothing capacitor

Large-capacity aluminum electrolytic capacitors are used for smoothing in the main circuit DC section. The characteristics of these capacitors will deteriorate over time due to ripple current, etc. The time period involved is largely dependent upon the ambient temperature and the operating conditions, but when operated under normal conditions, replacement is required approx. every 5 years. (On 3.7kW and smaller units, the smoothing capacitors are located on the PCB, so the PCB must also be replaced.)

Capacitor appearance inspection and evaluation standards:

- a) Is any fluid leaking?
- b) Is the knob (safety valve) protruding or expanded?
- c) Measure the capacitance and leakage current.

★ A time guideline for the replacement period of these components can be established by checking the cumulative run time monitor.

Table 12-1 Standard component replacement periods

Part name	Standard replacement period
Cooling fan	2 to 3 years (Approx. 30,000 hours)
Smoothing capacitors	5 years

13. Storage

Observe the following points when the inverter is not used immediately after purchase or when not used for a long period of time.

1. Avoid storing the unit in places that are hot or humid, or that contain large quantities of dust or metallic dust. Store the unit in a well-ventilated location.
2. For inverters that have a black anti-static cover, do not remove this cover during storage. Always remove this cover before applying power for the first time after the storage period.
3. When not using the inverter for an extended period of time, turn the power on at least once every two years to restore the main circuit electrolytic capacitor characteristics. Also verify that the inverter functions normally.

Do not directly connect a commercial power source to the inverter, but gradually raise the input voltage using a variac, etc. (The power must be applied for five hours or more before running a motor.)

The large-capacity electrolytic capacitors used in this inverter will deteriorate over time if left deenergized.

14. Warranty

Failures and damages that occur during the warranty period will be repaired free of charge.

The warranty period of this unit is 12 months from the date of delivery.

The following items will be charged for even if they occur during the warranty period.

- 1) Failures and damages caused by misuse, inappropriate repairs or modifications.
- 2) Damage caused by dropping or transportation after delivery.
- 3) Failures and damages due to natural causes such as fire, salt damage, gas damage, earthquakes, wind or water damage, lightning, erroneous voltages, etc.
- 4) Damage caused by use of the inverter other than as an inverter.

If there are other predetermined warranty conditions, those will have priority.

★ Please perform adequate maintenance and inspection procedures.

Appendix

Appendix Table 1. Parameter list

Parameter groups	Gr. <input type="checkbox"/>	<ul style="list-style-type: none"> : User parameters : Fundamental parameters #1 (V/F, accel/decel etc.) : Fundamental parameters #2 (V/F, accel/decel etc.) : Panel control parameters : Terminal selection parameters : Special control parameters : Frequency setting parameters : Protection parameters : Pattern run parameters : Feedback parameters : Communication parameters : Industrial application parameters (pump) : Industrial application parameters (fan) : Industrial application parameters (conveyer) : Industrial application parameters (hoist) : Industrial application parameters (textiles) : Industrial application parameters (machine tools) : AM/FM adjustment parameters : Utility parameters : Motor parameters
------------------	------------------------------	--

Shaded parameters are hidden via the blind function.

<< Skip Function >>

Parameters with a * to the right of their title are displayed only when the indicated setting is selected.

Parameters with ** are displayed only when the indicated setting of the parameter with a * is selected.

Through the setting for mark + in (+1), plural functions can be used by accumulating and selecting.

Example: (+1) + (+2) = 3

Enter 3, and the both functions of 1 and 2 can be used.

Gr.U (User Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
(User-changed parameters)	XX	XX (depends on the adjustment range for each parameter)	XX	XX	34
<ul style="list-style-type: none"> Displays the parameters that differ from the standard setting values, excluding Gr.AN and Gr.Ut tYP. When a parameter value is once again set to the standard setting value, the parameter is removed from this group. 					

Gr.F (Fundamental Parameters #1)

Function	Title	Adjustment range	Resolution	Default	Page
Maximum frequency	FH	30~400	0.01/0.1 Hz	80.0	50
Maximum voltage frequency	UL1	25~400	0.01/0.1 Hz	60.0	50
Maximum voltage frequency voltage selection	ULSL	0: Input voltage level (no output voltage control) 1: Automatic setting (output voltage control) 2: Stationary setting (output voltage control)		1	50
Maximum voltage	ULU1	0~600V (Note 1)	1V	200V system: 200V 400V system: 400V	50
Reverse operation disable selection	dISR	0: Reverse operation allowed 1: Reverse operation not allowed	—	0	56
Upper limit frequency	UL	0~max. frequency (FH)	0.01/0.1 Hz	80.0	56
Lower limit frequency	LL	0~upper limit frequency	0.01/0.1 Hz	0.0	56
V/F pattern	Ft	1: Constant torque 2: Variable torque 3: Automatic torque boost 4: 3 with automatic energy saving 5: Vector control 6: 5 with automatic energy saving	—	1	51,52
1*2 Voltage boost #1	ub1	0~30	0.1%	Depends on inverter rating	51
Acceleration time #1	ACC1	0.1~6000/0.01~600.0	0.1/0.01 S	Depends on inverter rating	53
Deceleration time #1	DEC1	0.1~6000/0.01~600.0	0.1/0.01 S	Depends on inverter rating	53
Acc/dec pattern #1	SCU1	0: Linear 1: Self-adjusting 2: S-Pattern #1 3: S-Pattern #2	—	0	54
Acc/dec pattern adjustment amounts	SCL SCH	0~50 0~50	1%	25 25	54

Note 1) 200V system: Internally limited to 255V

400V system: Internally limited to 510V

ULU1 and **ULU2** in **Gr.F2** are valid only when **ULSL** is set to "2".

Gr.F2 (Fundamental Parameters #2)

Function	Title	Adjustment range	Resolution	Default	Page
Maximum voltage frequency #2	UL2	25~400	0.01/0.1 Hz	60.0	59
Maximum voltage #2	ULU2	0~600 (Note 1)	1V 200V system: 200V 400V system: 400V		59
Voltage boost #2	UB2	0~30	0.1%	Depends on inverter rating	59
Electronic thermal protection level #2	ETR2	10~100%/A (Note 2)	1%/A	100.0	59
Stall protection #2	SECP	0: ON 1: OFF	—	0	59
0 Stall protection level #2 (current limit level adjustment)	SELP	10~215%/A (Note 2)	1%/A	150.0	59
Acceleration time #2 Deceleration time #2	ACC2 DEC2	0.1~6000/0.01~600.0 0.1~6000/0.01~600.0	0.1/0.01 S 0.1/0.01 S	Depends on inverter rating	53
Acc/dec pattern #2	SCU2	0: Linear 1: Self-adjusting 2: S-Pattern #1 3: S-Pattern #2	—	00	59
Acc/dec #1/#2 switching frequency	ADZF	0~max. frequency (FH)	0.1/0.01 Hz	0.0	57

Note 1) 200V system: Internally limited to 255V.

400V system: Internally limited to 510V.

ULU2 and ULU1 in Gr.F are valid only when ULSL in Gr.F is set to "2".

Note 2) Parameters with note "A" shown in the Adjustment Range and Resolution columns will be displayed in either percent or Amps depending on the setting of dSPC in Gr.UE.

Gr.F1 (Panel Control Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Forward/reverse	Fr	0: Reverse 1: Forward	—	1	—
Stop pattern selection	SEPP	0: Decelerated stop 1: Coast stop	—	0	—
Fundamental parameter switching	PEP	1: Fundamental parameters #1 (V/F#1) 2: Fundamental parameters #2 (V/F#2)		1	59
Acc/dec #1/#2 selection	AD2	1: Acc/dec #1 2: Acc/dec #2	—	1	57
Panel reset selection	PrES	0: All possible 1: OL only (fault ignore #1) 2: OL, OC1, OC2, OC3 only (fault ignore #2)		0	58
Panel feedback control ·PID ·Speed Feedback ·Drooping	PFbC	0: ON (valid when panel operation is selected) 1: OFF (invalid when panel operation is selected)	—	0	58

F-51 (Special Control Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Start-up frequency	<i>F-St</i>	0.0~10	0.1/0.01 Hz	0.1	69
End frequency	<i>F-En</i>	0.0~30	0.1/0.01 Hz	0.1	69
Run frequency	<i>F-run</i>	0.0~max. frequency (FH)	0.1/0.01 Hz	0.0	68
Run frequency hysteresis	<i>FHYS</i>	0.0~30	0.1/0.01 Hz	0.0	68
Jump frequency selection	<i>FJ.n</i>	0: Function OFF 1: Function ON	—	0	70
1	Jump frequency #1	<i>FJ1</i> *	0~max. frequency (FH)	0.1/0.01 Hz	0.0
	Jump frequency band #1	<i>bFJ1</i> *	0~30	0.1/0.01 Hz	0.0
	Jump frequency #2	<i>FJ2</i> *	0~max. frequency (FH)	0.1/0.01 Hz	0.0
	Jump frequency band #2	<i>bFJ2</i> *	0~30	0.1/0.01 Hz	0.0
	Jump frequency #3	<i>FJ3</i> *	0~max. frequency (FH)	0.1/0.01 Hz	0.0
	Jump frequency band #3	<i>bFJ3</i> *	0~30	0.1/0.01 Hz	0.0
PWM carrier frequency	<i>CF</i>	0.5~17kHz (15kW and smaller) (Note 1) 0.5~15kHz (18.5kW and larger) 0.5~5kHz (200V system: 75kW and larger) (400V system: 110kW and larger)	0.1 kHz	Depends on inverter rating	71

Note 1) The lower limit value on vector control mode is internally limited at 2.3kHz.

Cr-5t (Terminal Selection Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Input terminal selection	<i>It</i>	0: Standard terminal functions 1: Individual selection	—	0	60,61
1 Input terminal 0 (R) Input terminal 1 (S1) Input terminal 2 (S2) Input terminal 3 (S3) Input terminal 4 (S4) Input terminal 5 (F) Input terminal 6 (RES) Input terminal 7 (ST) Input terminal 8 (S5) Input terminal 9 (S6) Input terminal 10 (S7) Input terminal 11 (potential terminal)	<i>It 0</i> <i>It 1</i> <i>It 2</i> <i>It 3</i> <i>It 4</i> <i>It 5</i> <i>It 6</i> <i>It 7</i> <i>It 8</i> <i>It 9</i> <i>It 10</i> <i>It 11</i>	0~54 <i>It 1 1</i> for 0~42 only Terminal No. : terminal symbol	0: R 1: S1 2: S2 3: S3 4: S4 5: F 6: RES 7: ST 8: S5 9: S6 10: S7 11: Potential terminal	0 1 2 3 4 5 6 7 8 9 10 33	60,61
Input terminal (0~4, 8~10) response time selection (filtering function)	<i>It F</i>	1: Quickest response 1~100	1	6	65
Input terminal 5 (F) response time selection	<i>It 5F</i>	Same as <i>It F</i>	1	6	65
Input terminal 6 (RES) response time selection	<i>It 6F</i>	Same as <i>It F</i>	1	6	65
Input terminal 7 (ST) response time selection	<i>It 7F</i>	Same as <i>It F</i>	1	6	65
Output terminal 0 (RCH) function selection	<i>0t 0</i>	0~63	1	6	62,63,65
Output terminal 0 (RCH) delay time	<i>0t 0d</i>	1~100	1	1	
Output terminal 0 (RCH) hold time	<i>0t 0h</i>	1~100	1	1	
Output terminal 1 (LOW) function selection	<i>0t 1</i>	0~63	1	4	62,63,65
Output terminal 1 (LOW) delay time	<i>0t 1d</i>	0~100	1	1	
Output terminal 1 (LOW) hold time	<i>0t 1h</i>	0~100	1	1	
Output terminal 2 (FL) function selection	<i>0t 2</i>	0~63	1	10	62,63,65
Output terminal 2 (FL) delay time	<i>0t 2d</i>	0~100	1	1	
Output terminal 2 (FL) hold time	<i>0t 2h</i>	0~100	1	1	
Output terminal 3 (OUT) function selection	<i>0t 3</i>	0~63	1	8	62,63,65
Output terminal 3 (OUT) delay time	<i>0t 3d</i>	0~100	1	1	
Output terminal 3 (OUT) hold time	<i>0t 3h</i>	0~100	1	1	
Low-speed signal output frequency	<i>LF</i>	0~max. frequency (FH)	0.1/0.01 Hz	0.0	64
Acc/dec complete detection band	<i>b-CH</i>	0~max. frequency (FH)	0.1/0.01 Hz	2.5	64
Speed reach HI frequency	<i>H-CH</i>	0~max. frequency (FH)	0.1/0.01 Hz	0.0	64
Speed reach LO frequency	<i>L-CH</i>	0~max. frequency (FH)	0.1/0.01 Hz	0.0	64
Commercial power/inverter switching output	<i>CCHC</i>	0: OFF 1: Automatic switching upon trip 2: Switching at commercial power switching frequency setting 3: Switching at commercial power switching frequency setting, automatic switching upon trip	—	0	66
2-3 Commercial power/inverter switching frequency	<i>FCHC</i>	0~max. frequency (FH)	0.1/0.01 Hz	60.0 Hz	66
Output terminal pulse frequency selection	<i>0t FP</i>	0: 48f 1: 96f 2: 360f	—	0	67

Function	Title	Adjustment range	Resolution	Default	Page
RR input special function selection	<i>inrr</i>	0: Standard 1: FH 2: TACC/TDEC multiplication factor 3: VB multiplication factor 4: CL multiplication factor	—	0	67

Note) The option ROM is required for the RR input special function selection (*inrr*).

However, option ROM is not required in software version 120.

01.5F (Frequency Setting Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Frequency priority selection #1	<i>FC1</i>	1: RR 2: IV 3: RX 4: PG (pulse input setting from option PCB) 5: BIN (binary setting or up/down setting)		1	74
Frequency priority selection #2	<i>FC2</i>	Same as above		2	74
Analog input filter	<i>inF</i>	0~3 0: No filter 3: Maximum filter	—	0	74
1 RR input selection	<i>rr in</i>	0: Standard 1: Adjustable	—	0	76
1 RR reference point #1	<i>P1</i>	0~100	1%	0	76
RR point #1 frequency	<i>F-P1</i>	0~FH	0.1/0.01 Hz	0.0	
RR reference point #2	<i>P2</i>	0~100	1%	100	
RR point #2 frequency	<i>F-P2</i>	0~FH	0.1/0.01 Hz	80.0	
2 IV input selection	<i>iv in</i>	0: Standard 1: Adjustable	—	0	76
1 IV reference point #1	<i>P3</i>	0~100	1%	20	76
IV point #1 frequency	<i>F-P3</i>	0~FH	0.1/0.01 Hz	0.0	
IV reference point #2	<i>P4</i>	0~100	1%	100	
IV point #2 frequency	<i>F-P4</i>	0~FH	0.1/0.01 Hz	80.0	
3 RX input selection	<i>re in</i>	0: Standard 1: Adjustable	—	0	76
1 RX reference point #1	<i>P5</i>	-100~100	1%	0	76
RX point #1 frequency	<i>F-P5</i>	-FH~FH	0.1/0.02 Hz	0.0	
RX reference point #2	<i>P6</i>	-100~100	1%	100	
RX point #2 frequency	<i>F-P6</i>	-FH~FH	0.1/0.02 Hz	80.0	
4 PG input selection	<i>pg in</i>	0: Standard 1: Adjustable	—	0	76
1 PG reference point #1	<i>P7</i>	-100~100	1%	0	76
PG point #1 frequency	<i>F-P7</i>	-FH~FH	0.1/0.02 Hz	0.0	
PG reference point #2	<i>P8</i>	-100~100	1%	100	
PG point #2 frequency	<i>F-P8</i>	-FH~FH	0.1/0.02 Hz	80.0	
5 BIN (binary or up/down setting) selection	<i>bin in</i>	0: Standard 1: Adjustable	—	0	76
1 BIN reference point #1	<i>P9</i>	0~100	1%	0	76
BIN point #1 frequency	<i>F-P9</i>	-FH~FH	0.1/0.02 Hz	0.0	
BIN reference point #2	<i>PA</i>	0~100	1%	100	
BIN point #2 frequency	<i>F-PA</i>	-FH~FH	0.1/0.02 Hz	80.0	
Jog run frequency	<i>JOG</i>	0.0~20	0.1/0.01 Hz	0.0	75
Other than 0: Jog stop control	<i>JS&P</i>	0: Decelerated stop 1: Coast-stop 2: DC injection braking stop	—	0	75

Function	Title	Adjustment range	Resolution	Default	Page
Preset speed selection	<i>Sr.n</i>	0: disabled 1~15: speeds (1~15)	—	0	72,73
Other than 0:	<i>Sr.n</i>	0: Deactivated 1: Activated	—	0	
1st speed	<i>Sr-01</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0	
1st speed run mode	<i>Sr-n1</i>	0: Acc/dec #1, V/F #1, forward run +1: Reverse run +2: Acc/dec #2 +4: V/F #2	(*)	0	
2 or higher	2nd speed	<i>Sr-02</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	2nd speed run mode	<i>Sr-n2</i>	Same as <i>Sr-n1</i>	—	0
3 or higher	3rd speed	<i>Sr-03</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	3rd speed run mode	<i>Sr-n3</i>	Same as <i>Sr-n1</i>	—	0
4 or higher	4th speed	<i>Sr-04</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	4th speed run mode	<i>Sr-n4</i>	Same as <i>Sr-n1</i>	—	0
5 or higher	5th speed	<i>Sr-05</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	5th speed run mode	<i>Sr-n5</i>	Same as <i>Sr-n1</i>	—	0
6 or higher	6th speed	<i>Sr-06</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	6th speed run mode	<i>Sr-n6</i>	Same as <i>Sr-n1</i>	—	0
7 or higher	7th speed	<i>Sr-07</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	7th speed run mode	<i>Sr-n7</i>	Same as <i>Sr-n1</i>	—	0
8 or higher	8th speed	<i>Sr-08</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	8th speed run mode	<i>Sr-n8</i>	Same as <i>Sr-n1</i>	—	0
9 or higher	9th speed	<i>Sr-09</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	9th speed run mode	<i>Sr-n9</i>	Same as <i>Sr-n1</i>	—	0
10 or higher	10th speed (A)	<i>Sr-10</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	10th speed run mode	<i>Sr-nA</i>	Same as <i>Sr-n1</i>	—	0
11 or higher	11th speed (B)	<i>Sr-11</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	11th speed run mode	<i>Sr-nb</i>	Same as <i>Sr-n1</i>	—	0
12 or higher	12th speed (C)	<i>Sr-12</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	12th speed run mode	<i>Sr-nC</i>	Same as <i>Sr-n1</i>	—	0
13 or higher	13th speed (D)	<i>Sr-13</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	13th speed run mode	<i>Sr-nD</i>	Same as <i>Sr-n1</i>	—	0
14 or higher	14th speed (E)	<i>Sr-14</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	14th speed run mode	<i>Sr-nE</i>	Same as <i>Sr-n1</i>	—	0
15	15th speed (F)	<i>Sr-15</i>	Lower limit frequency~upper limit frequency	0.1/0.01 Hz	0.0
	15th speed run mode	<i>Sr-nF</i>	Same as <i>Sr-n1</i>	—	0

Cr.P1 (Protection Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Dynamic braking selection (DBR)	Pb	0: No DBR 1: With DBR, no OLr detection 2: With DBR, and OLr detection	—	Depends on inverter rating	82
2 DBR resistor value	Pbr	1.0~1000	0.1Ω		
DBR capacity	PbCP	0.01~600	0.01kW		
Overvoltage stall protection	OPSS	0: ON 1: OFF	—	0	82
DC injection starting frequency	dbf	0~120	0.1/0.01 Hz	0.0	79,80,81
Other DC injection current than 0	dbc	0~100%/A (Note 1)	1%/A	0	
DC injection time	dbt	0.0~10.0	0.1 sec.	0.0	
Forward/reverse DC injection priority control	dbSL	0: OFF 1: ON	—	0	80
Motor shaft stationary control	db in	0: OFF 1: ON	—	0	81
Emergency stop selection	ESTP	0: Coast-stop 1: Decelerated stop 2: DC injection stop	—	0	83
2 ESTOP DC injection time	Edbt	0.0~10.0	0.1 sec.	0.1	
Retry selection	retry	0: no retry function 1~10: 1~10 time	—	0	83
Other Retry time setting than 0	ret	0.0~10.0	0.1 sec.	1.0	
Regeneration power ride-through control	UUC	0: OFF 1: ON	—	0	84
1 Ride-through time	UUCt	0.0~25.0	0.1 sec.	2.0	
Auto-restart (motor speed search)	ArSt	0: OFF +1: On momentary power failure +2: On ST make/break (commercial power switching)	(+1)	0	84
Motor overload protection level	OLr 1	10~100%/A (Note 1)	1%/A	100	77
OL reduction start-up frequency	OLF	0~30	0.1/0.01 Hz	30.0	77
Motor 150% overload time limit	OLt	10~2400	10 sec.	600	77
OL selection	OLn	0: standard +1: soft-stall ON +2: OLMt trip OFF	(+1)	0	78
Stall protection	StC 1	0: ON 1: OFF	—	0	78
0 Stall protection level (current limit level adjustment)	StL 1	10~215%/A (Note 1)	1%/A	150	

Note 1) Parameters with note "A" shown in the Adjustment Range and Resolution columns will be displayed in either percent or Amps depending on the setting of **dSPC** in **Cr.Ut**.

Function	Title	Adjustment range	Resolution	Default	Page
Undervoltage trip selection	<i>UPSL</i>	0: Trip disabled 1: Trip (during run)	—	0	85
Undervoltage detection time	<i>UPE</i>	0~10	0.01sec.	0.03	85
Low current detection selection (output fault detection)	<i>LLP</i>	0: Trip disabled 1: Trip on detection	—	0	85
Low current detection level	<i>LLPC</i>	0~100%/A (Note 1)	1%/A	0	85
Low current detection time	<i>LLPE</i>	0~255	1sec.	0	85
Output short-circuit detection selection (OCL)	<i>OCLS</i>	0: Standard +1: High-speed motor use +2: Positioning use (during JOG)	(+1)	0	85
Overtorque trip selection	<i>OESL</i>	0: Trip disabled 1: Trip enabled	—	0	85
Overtorque trip level	<i>OEL</i>	0~200%/A (Note 1)	1%/A	150	85
Fault trip saving	<i>ErCL</i>	0: Cleared when powered OFF 1: Date retained when powered OFF	—	0	86
Cooling fan control selection	<i>FRn</i>	0: Automatic (temperature detection) 1: Always ON	—	0	—
Cumulative run timer alarm setting	<i>OUT</i>	0.00~999.9 (1=100 hours)	0.02 (two hours)	175.0	40

Note1) Parameters with note "A" shown in the Adjustment Range and Resolution columns will be displayed in either percent or Amps depending on the setting of *dSPC* in *Cr-UE*.

Cr-ME (Motor Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Number of motor poles	<i>ME.P</i>	2, 4, 6, 8, 10, 12, 14, 16,	2	4	52
Motor rated capacity	<i>ME.C</i>	0.1~999.9	0.1kW	Depends on inverter rating	
Motor type	<i>ME.t</i>	0: Toshiba standard motor 1: Toshiba VF motor 2: Other	—	0	
2	Rated voltage	<i>ME.v</i>	90~600	5V	200/400
	Rated frequency	<i>ME.F</i>	0~400	2Hz	60
	Rated RPM	<i>ME.r</i>	0~9999	1RPM	1710
	Auto-tuning	<i>ME.tn</i>	0: Auto-tuning disabled 1: Auto-tuning enabled	—	0
Load moment of inertia	<i>ME.IH</i>	0: Small 1: Medium 2: Large 3: Very large	—	1	

Pr-PL (Pattern Run Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Pattern run selection	<i>PSEL</i>	0: OFF 1: ON	—	0	87, 88
1 Pattern run mode	<i>PER</i>	0: When the inverter is stopped, run pattern is reset. 1: Upon continuation after a stop, pattern switches after current pattern is finished.	—	0	
Pattern group #1 speed selections	<i>PE 1.0</i>	0: Skip	—	1	
	<i>PE 1.1</i>		—	2	
	<i>PE 1.2</i>	1~15: preset speeds 1~15	—	3	
	<i>PE 1.3</i>		—	4	
	<i>PE 1.4</i>		—	5	
	<i>PE 1.5</i>		—	6	
	<i>PE 1.6</i>		—	7	
	<i>PE 1.7</i>		—	8	
Pattern group #1 number of cycles	<i>PEL 1</i>	1~254, 255 = ∞	—	1	
Pattern group #2 speed selections	<i>PE 2.0</i>	0: Skip	—	9	
	<i>PE 2.1</i>		—	10	
	<i>PE 2.2</i>	1~15: preset speeds 1~15	—	11	
	<i>PE 2.3</i>		—	12	
	<i>PE 2.4</i>		—	13	
	<i>PE 2.5</i>		—	14	
	<i>PE 2.6</i>		—	15	
	<i>PE 2.7</i>		—	0	
Pattern group #2 number of cycles	<i>PEL 2</i>	1~254, 255 = ∞	—	1	
Pattern group #3 speed selections	<i>PE 3.0</i>	0: Skip	—	1	
	<i>PE 3.1</i>		—	2	
	<i>PE 3.2</i>	1~15: preset speeds 1~15	—	3	
	<i>PE 3.3</i>		—	4	
	<i>PE 3.4</i>		—	5	
	<i>PE 3.5</i>		—	6	
	<i>PE 3.6</i>		—	7	
	<i>PE 3.7</i>		—	8	
Pattern group #3 number of cycles	<i>PEL 3</i>	1~254, 255 = ∞	—	1	
Pattern group #4 speed selections	<i>PE 4.0</i>	0: Skip	—	9	
	<i>PE 4.1</i>		—	10	
	<i>PE 4.2</i>	1~15: preset speeds 1~15	—	11	
	<i>PE 4.3</i>		—	12	
	<i>PE 4.4</i>		—	13	
	<i>PE 4.5</i>		—	14	
	<i>PE 4.6</i>		—	15	
	<i>PE 4.7</i>		—	0	
Pattern group #4 number of cycles	<i>PEL 4</i>	1~254, 255 = ∞	—	1	

Function	Title	Adjustment range	Resolution	Default	Page
Speed #1 drive continuation mode	<i>SLN1</i> *	0: Count in seconds from time of activation 1: Count in minutes from time of activation 2: Count in seconds from time set speed is reached 3: Count in minutes from time set speed is reached 4: Non-stop (continue until STOP command) 5: Continue until next step command		0	87,88
Less than 4 Speed #1 drive time	<i>SLE1</i> **	0~8000	1 sec./min.	0	
Speed #2 drive continuation mode	<i>SLN2</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #2 drive time	<i>SLE2</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #3 drive continuation mode	<i>SLN3</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #3 drive time	<i>SLE3</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #4 drive continuation mode	<i>SLN4</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #4 drive time	<i>SLE4</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #5 drive continuation mode	<i>SLN5</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #5 drive time	<i>SLE5</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #6 drive continuation mode	<i>SLN6</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #6 drive time	<i>SLE6</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #7 drive continuation mode	<i>SLN7</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #7 drive time	<i>SLE7</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #8 drive continuation mode	<i>SLN8</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #8 drive time	<i>SLE8</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #9 drive continuation mode	<i>SLN9</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #9 drive time	<i>SLE9</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #A drive continuation mode	<i>SLNA</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #A drive time	<i>SLEA</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #B drive continuation mode	<i>SLNB</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #B drive time	<i>SLEB</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #C drive continuation mode	<i>SLNC</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #C drive time	<i>SLEC</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #D drive continuation mode	<i>SLND</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #D drive time	<i>SLED</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #E drive continuation mode	<i>SLNE</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #E drive time	<i>SLEE</i> **	Same as <i>SLE1</i>	1 sec./min.	0	
Speed #F drive continuation mode	<i>SLNF</i> *	Same as <i>SLN1</i>		0	
Less than 4 Speed #F drive time	<i>SLEF</i> **	Same as <i>SLE1</i>	1 sec./min.	0	

Cr.Fb (Feedback Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Feedback control selection	<i>FbP1</i>	0: No feedback control 1: PID control 2: Speed feedback control	—	0	—
1-2 Feedback input signal selection	<i>Fbin</i>	1: RR input 2: IV input 3: RX input 4: PG feedback (option board) 5: RS232C input 6: Communication/12-bit bin. opt. 7: BIN input	—	2	—
Proportional gain	<i>CP</i>	0.01~2.55	0.01	0.30	—
Integral gain	<i>CI</i>	0.01~360.0	0.01S	5.00	—
Anti-hunting gain	<i>CA</i>	0.0~25.5	0.1S	0.0	—
Lag time constant	<i>CFS</i>	0~255	1	80	—
1 PID lower limit frequency	<i>PILL</i>	0~FH	0.01/0.1 Hz	0.0	—
PID variation limit selection	<i>PUL</i>	0: No PID variation limit 1: PID variation limited	—	0	—
1 PID variation upper limit	<i>PULL</i>	0~50%	1%	50	—
PID variation lower limit	<i>PULL</i>	0~50%	1%	50	—
PG input-number of pulses (Note1)	<i>PG</i>	1~9999	1	500	—
PG input-number of phases	<i>PGPH</i>	1: Single-phase input 2: Two-phase input	—	2	—
Drooping control (Note 2)	<i>drPC</i>	0: OFF 1: ON	—	0	—
1 Drooping control amount (Note 2)	<i>drPt</i>	0.0~10.0%	0.1%	0.0	—
Override control	<i>Ord1</i>	0: OFF 1: FCRR 2: FCIV 3: FCRX 4: FCPG 5: FCPNL 6: FCOPT 7: FCMLT	—	0	—
7 Override change amount setting	<i>Ord2</i>	0: Reference 1: KRR 2: KIV 3: KRX 4: KBIN	—	0	—
Override change amount	<i>Ord3</i>	-100.0~100.0%	0.1%	0.0	—

Note 1) When using PG feedback, the frequency command = (pulse input frequency)/ *PG* .

When using PG feedback, always set *Cr.Pt* : number of motor poles, and set PG input-number of pulses to the number of pulses per rotation.

Note 2) The option ROM is required for the Drooping control (*drPC* , *drPt*).

However, option ROM is not required in software version 120.

The function in the portion of _____ is displayed in software version 120.

Gr. Er (Communication Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
RS232C baud rate	brt2	0: 2400 baud 1: 4800 baud 2: 9600 baud	—	2	—
Number of data bits	SN78	0: 7 bits 1: 8 bits	—	0	—
Parity	SNED	0: Even parity 1: Odd parity	—	0	—
Inverter number	Ino	0~255	—	0	—
Communication selection	OPt	0: OFF 1: RS485 2: TOSLINE-F10M 3: TOSLINE-S20 4: 12 bit binary input 5: 3-digit BCD input (0.1Hz units) 6: 3-digit BCD input (1Hz units)	—	0	—
1 Master/slave selection	nSt	0: Slave 1: Master (frequency command) 2: Master (output frequency)	—	0	—
RS485 baud rate	brt4	0: Normal mode 1: High-speed mode	—	0	—
2 TOSLINE -F10M command input	n In	0~3 (*1) 0: OFF +1: Frequency command +2: Command input	—	0	—
TOSLINE-F10M monitor output	nOut	0~15 (*1) 0: OFF +1: Output frequency +2: Status +4: Output current +8: Output voltage	—	0	—
TOSLINE-F10M Communication error mode	nErr	0: Data cleared 1: Data retained	—	0	—
3 TOSLINE-S20 Reception address	InR	0~1023	—	0	—
TOSLINE-S20 Transmission address	OutR	0~1023	—	0	—
TOSLINE-S20 Command input	S In	0~31	—	0	—
TOSLINE-S20 Monitor output	SOut	0~31	—	0	—
TOSLINE-S20 Allowance of standard value for speed	F InS	0: No allowance 1: Allowance	—	0	—
1 Address of standard value for speed	F InR	0~1023	—	0	—
TOSLINE-S20 Mode for Transmission error	SErr	0: Command input data clear 1: Command input data hold	—	0	—
S20 Reset setting	Srt	0: Invalid 1: Reset	—	0	—
RS485/12-bit binary % input: bias and gain settings	Er In	0: OFF 1: ON	—	0	—
1 Point #1 setting signal	PL	0~100%	1%	0	—
Point #1 frequency	F-PL	0~FH	0.1/0.01 Hz	0.0	—
Point #2 setting signal	FH	0~100%	1%	100	—
Point #2 frequency	F-PH	0~FH	0.1/0.01Hz	FH	—

Note 1) • **Gr. Er** (communication parameter group) parameters can be changed during inverter operation, but the new settings will become valid only after the inverter has been reset.

- All **OPt** and **Er In** selections require optional PCBs and optional ROMs. However, option ROM is not required in software version 120.


(Utility Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
Industrial application parameters selection	<i>RPL</i>	0: Does nothing 1: Pump application 2: Fan application 3: Conveyor application 4: Hoist application 5: Textiles application 6: Machine tools application	—	0	90
Standard setting mode selection	<i>LYP</i>	0: Does nothing 1: 50Hz standard settings 2: 60Hz standard settings 3: Return to factory settings 4: Trip clear 5: Save user-set parameters 6: TYPE 5 reset 7: Initialize inverter typeform	—	0	90
Command mode selection	<i>CNOd</i>	0: Only RS232C input valid 1: Terminal input valid 2: Panel input valid 3: Communication option board input valid 4: Panel/terminal changeover possible	— Note) RS232C is always valid.	4	91
Frequency setting mode selection	<i>FNOd</i>	0: Only RS232C valid 1: Terminal input valid 2: Communication/12-bit binary option board input valid 4: Panel/terminal changeover possible	— Note) RS232C is always valid.	4	91
Panel operation mode selection	<i>PNOd</i>	0: Prohibit all key operations +1: Can perform reset +2: Can perform monitor operations +4: Can perform emergency stop +8: Can perform run/stop operations +16: Can perform parameter read operations +32: Can perform parameter change operations 63: Standard mode (can perform all operations)	(+1)	63	89
Pass number	<i>PASS</i>	0~99	—	0	89
CPU version	<i>UCPU</i>	—	—	Can be monitored only	—
ROM version	<i>URON</i>	—	—		—
EEPROM version	<i>UEEP</i>	—	—		—
Inverter typeform	<i>FORn</i>	2-digit HEX display	—		132
Status monitor display selections	<i>NO_n1</i>	1~16	—	2	92
	<i>NO_n2</i>	1~16	—	3	92
	<i>NO_n3</i>	1~16	—	4	92
	<i>NO_n4</i>	1~16	—	5	92
Frequency units multiplication factor	<i>dSP2</i>	0 (OFF), 0.01~200	0.01	0.00	93
Frequency display resolution	<i>dSPF</i>	0: 1 Hz 1: 0.1 Hz 2: 0.01 Hz	—	1	93
ACC/DEC time units selection	<i>dSPt</i>	0: 0.1 sec. 1: 0.01 sec.	—	0	93
Current units selection	<i>dSPC</i>	0: % 1: A	—	0	93
Voltage units selection	<i>dSPv</i>	0: % 1: V	—	1	93

Function	Title	Adjustment range	Resolution	Default	Page
Blind function selection	<i>bLnd</i>	0: Blind 1: Selective unblinding	—	0	55
1 Fundamental parameters #2	<i>bLF2</i>	0: Blind 1: Unblind	—	0	
Panel Control Parameters	<i>bLPn</i>	0: Blind 1: Unblind	—	0	
Terminal Selection Parameters	<i>bLSE</i>	0: Blind 1: Unblind	—	0	
Special Control Parameters	<i>bLSE</i>	0: Blind 1: Unblind	—	0	
Frequency Setting Parameters	<i>bLSF</i>	0: Blind 1: Unblind	—	0	
Protection Parameters	<i>bLPr</i>	0: Blind 1: Unblind	—	0	
Pattern Run Parameters	<i>bLPe</i>	0: Blind 1: Unblind	—	0	
Feedback Parameters	<i>bLFB</i>	0: Blind 1: Unblind	—	0	
Communication Parameters	<i>bLEr</i>	0: Blind 1: Unblind	—	0	
Industrial Application Parameters (Pump)	<i>bLO1</i>	0: Blind 1: Unblind	—	0	
Industrial Application Parameters (Fan)	<i>bLO2</i>	0: Blind 1: Unblind	—	0	
Industrial Application Parameters (Conveyor)	<i>bLO3</i>	0: Blind 1: Unblind	—	0	
Industrial Application Parameters (Hoist)	<i>bLO4</i>	0: Blind 1: Unblind	—	0	
Industrial Application Parameters (Textiles)	<i>bLO5</i>	0: Blind 1: Unblind	—	0	
Industrial Application Parameters (Machine Tools)	<i>bLO6</i>	0: Blind 1: Unblind	—	0	
AM/FM Adjustment Parameters	<i>bLAN</i>	0: Blind 1: Unblind	—	0	
Motor Parameters	<i>bLMe</i>	0: Blind 1: Unblind	—	0	

AN (AM/FM Adjustment Parameters)

Function	Title	Adjustment range	Resolution	Default	Page
FM terminal function selection	<i>FNSL</i>	0: Pre-compensation reference frequency 1: Post-compensation output frequency 2: Frequency setting value 3: Output current 4: DC voltage 5: Output voltage 6: Torque current 7: Excitation current 8: PID feedback value 9: Motor overload ratio 10: Inverter overload ratio 11: DBR overload ratio 12: Input power 13: Output power 14: Fixed output for meter adjustment 15: Peak output current 16: Peak input voltage	—	0	94
Frequency meter adjustment	<i>FN</i>	—	—	—	
AM terminal function selection	<i>ANSL</i>	Same as <i>FNSL</i> (0~16)	—	3	
Ammeter adjustment	<i>AN</i>	—	—	—	

Note) The function in the portion of *ANSL* is displayed in software version 120.

Appendix Table 2. List of trips

• Trips (registered as past faults)

<i>nErr</i>	No error (only during display of past faults)
<i>OC 1</i>	Overcurrent during acceleration
<i>OC 2</i>	Overcurrent during deceleration
<i>OC 3</i>	Overcurrent during constant speed run
<i>OC 1P</i>	Overcurrent in DC section during acceleration
<i>OC 2P</i>	Overcurrent in DC section during deceleration
<i>OC 3P</i>	Overcurrent in DC section during constant speed run
<i>OCL</i>	Short circuit (output terminal check) trip during starting
<i>OCA 1</i>	U-phase armature short circuit
<i>OCA 2</i>	V-phase armature short circuit
<i>OCA 3</i>	W-phase armature short circuit
<i>OP 1</i>	Overvoltage during acceleration
<i>OP 2</i>	Overvoltage during deceleration
<i>OP 3</i>	Overvoltage during constant speed run
<i>OL In</i>	Inverter overload trip
<i>OL M</i>	Motor overload trip
<i>OCr</i>	Dynamic braking resistor overcurrent trip
<i>OLr</i>	Dynamic braking resistor overload trip
<i>OH</i>	Overheat trip
<i>EFU</i>	DC fuse cut
<i>E</i>	Emergency stop
<i>EER 1</i>	EEPROM fault (error during write)
<i>EER 2</i>	Initial read error
<i>Err 2</i>	RAM fault
<i>Err 3</i>	ROM fault
<i>Err 4</i>	CPU fault
<i>Err 5</i>	Communication interruption error
<i>Err 6</i>	Gate array fault
<i>Err 7</i>	Output current detector error
<i>Err 8</i>	Option PCB error trip
<i>Err 9</i>	Optional ROM drop-off error
<i>UC</i>	Low current operating condition trip
<i>UP 1</i>	Undervoltage trip (main circuit)
<i>OT</i>	Overtorque trip
<i>EF 1</i>	Earth fault trip
<i>EF 2</i>	
<i>Et n</i>	Auto-tuning error
<i>Et 4P</i>	Inverter typeform error


• Messages (not caused by trips)

<i>OFF</i>	ST-CC open
<i>POFF</i>	Control circuit undervoltage
<i>NOFF</i>	Main circuit undervoltage
<i>rEr 3</i>	Displayed during retry
<i>Err 1</i>	Frequency point setting error alarm
<i>CLr</i>	Clear acceptance display
<i>EOFF</i>	Emergency stop acceptance display
<i>Ct rL</i>	Operating panel coast-stop operation possible
<i>H 1</i>	A setting value upper limit has been reached
<i>L 0</i>	A setting value lower limit has been reached
<i>db</i>	Display in the DC injection braking mode
<i>dbon</i>	
<i>Err</i>	Password No. error
<i>E 1</i>	No. of panel display digits exceeded


Appendix Figure 1. Input terminal information

The eleven input terminals correspond to the following bits.

A group (input terminals 1 to 5)

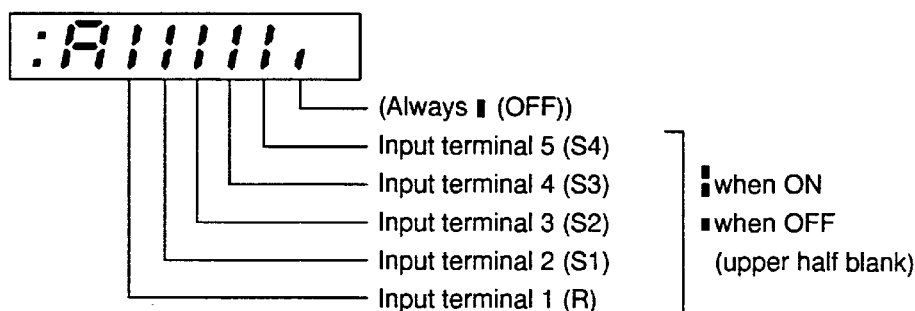


B group (input terminals 6 to 11)

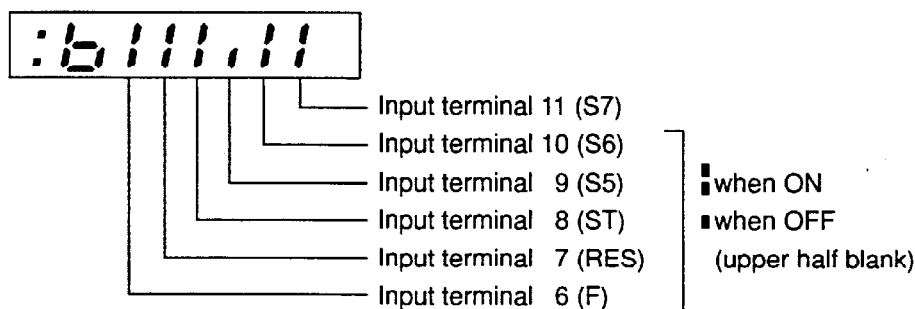

Appendix Figure 2. Output terminal information

(Including status display of cooling fan and main contactor for initial charging circuit)

The four output terminals correspond to the following bits. The operating statuses of the cooling fan and main contactor for the initial charging circuit are also displayed.

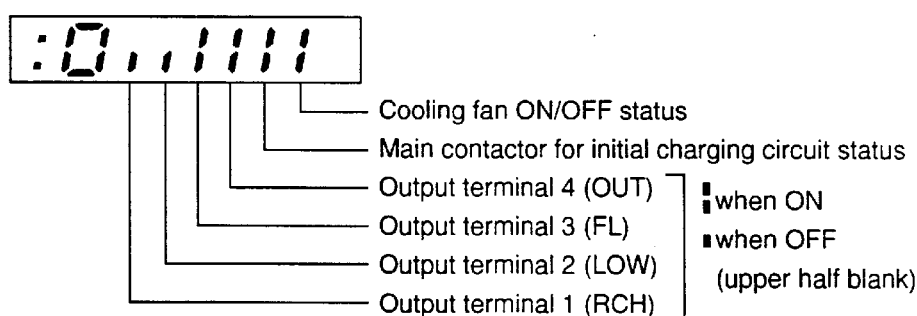

Note) Output terminal 4 (OUT): Option PCB

Appendix Figure 3. Character codes

Character codes (numbers)

0	1	2	3	4	5	6	7	8	9	-
0	1	2	3	4	5	6	7	8	9	-

Character codes (letters)

A a	B b	C c	D d	E e	F f	G g	H h	I i	J j	K k	L l	M m
A	b	Cc	d	E	F	G	Hh	i	J	-	L	n

N n	O o	P p	Q q	R r	S s	T t	U u	V v	W w	X x	Y y	Z z
n	Oo	P	q	r	S	t	U	v	-	-	y	-

Appendix Table 3. Standard default settings per inverter capacity

Inverter model	Inverter type/form display	Voltage boost	Maximum voltage	DBR control	DBR resistance value	DBR capacity	Motor capacity	Acceleration/ deceleration times	Carrier frequency
		<i>vb</i> %	<i>vLv1</i> <i>vLv2</i> (V)	<i>Pb</i> 0: OFF 2: ON	<i>Pbr</i> (Ω)	<i>PbCP</i> (kW)	<i>MC</i> (kW)	<i>ACC</i> <i>DEC</i> (s)	<i>CF</i> (kHz)
A5-2004	21	8	200	2	70	0.12	0.4	10	15
A5-2007	22	8	200	2	70	0.12	0.7	10	15
A5-2015	23	6	200	2	70	0.12	1.5	10	15
A5-2022	24	6	200	2	70	0.12	2.2	10	15
A5-2037	25	6	200	2	40	0.12	3.7	10	15
A5-2055	26	4	200	0	20	0.12	5.5	10	15
A5-2075	27	4	200	0	20	0.12	7.5	10	15
A5-2110	28	4	200	0	10	0.66	11	10	15
A5-2150	29	4	200	0	7.5	0.88	15	10	15
A5-2185	2A	3	200	0	7.5	0.88	18.5	60	12
A5-2220	2C	3	200	0	3.3	1.20	22	60	12
A5-2300	2d	3	200	0	3.3	1.20	30	60	12
A5-2370	30	3	200	0	2	2.00	37	60	12
A5-2450	31	3	200	0	2	2.00	45	60	12
A5-2550	32	3	200	0	2	2.00	55	60	12
A5-2750	38	2	200	0	1.7	3.40	75	60	2.2
A5-2900	39	2	200	0	1.7	3.40	90	60	2.2
A5-4007	42	8	400	2	150	0.12	0.7	10	15
A5-4015	43	6	400	2	150	0.12	1.5	10	15
A5-4022	44	6	400	2	150	0.12	2.2	10	15
A5-4037	45	6	400	2	150	0.12	3.7	10	15
A5-4055	46	4	400	0	80	0.12	5.5	10	15
A5-4075	47	4	400	0	80	0.12	7.5	10	15
A5-4110	48	4	400	0	40	0.66	11	10	15
A5-4150	49	4	400	0	30	0.88	15	10	15
A5-4185	4A	3	400	0	30	0.88	18.5	60	12
A5-4220	4C	3	400	0	13.3	1.20	22	60	12
A5-4300	4d	3	400	0	13.3	1.20	30	60	12
A5-4370	50	3	400	0	8	2.00	37	60	12
A5-4450	51	3	400	0	8	2.00	45	60	12
A5-4550	52	3	400	0	8	2.00	55	60	12
A5-4750	53	3	400	0	8	2.00	75	60	12
A5-4110K	5A	2	400	0	3.7	7.40	110	60	2.2
A5-4132K	5b	2	400	0	3.7	7.40	132	60	2.2
A5-4160K	5C	1.5	400	0	3.7	7.40	160	60	2.2
A5-4220K	5d	1.5	400	0	1.9	8.80	220	60	2.2
A5-4280K	5E	1	400	0	1.4	8.80	280	60	2.2

Appendix Table 4. Industrial Application Parameters

Industrial Application Parameters (Pump)

When *Gr.Ut RPL* is set to 1, *Gr.U*, *Gr.F*, *Gr.O1* and *Gr.Ut* will be available in settings monitor mode, and the initial setting values will change to those for a pump application.

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks	
<i>Gr.O1</i> Pump	Panel feedback control • PID • Speed Feedback • Drooping	<i>PFbC</i>	0: ON 1: OFF	—	0	Gr. Pn	
	Input terminal selection	<i>It</i>	0: Standard terminal functions 1: Individual selection	—	0	Gr. St	
	1	Input terminal 0 (R) Input terminal 1 (S1) Input terminal 2 (S2) Input terminal 3 (S3) Input terminal 4 (S4) Input terminal 5 (F) Input terminal 6 (RES) Input terminal 7 (ST) Input terminal 8 (S5) Input terminal 9 (S6) Input terminal 10 (S7) Input terminal 11 (potential terminal)	<i>It0</i> * <i>It1</i> * <i>It2</i> * <i>It3</i> * <i>It4</i> * <i>It5</i> * <i>It6</i> * <i>It7</i> * <i>It8</i> * <i>It9</i> * <i>It10</i> * <i>It11</i> *	0~54 Terminal No. : terminal symbol	0: R 1: S1 2: S2 3: S3 4: S4 5: F 6: RES 7: ST 8: S5 9: S6 10: S7 11: Potential terminal	0 1 2 3 4 5 6 7 8 9 10 33	
	Output terminal 0 (RCH) function selection	<i>Ot0</i>	0~63	—	46	Gr. St	
	Output terminal 1 (LOW) function selection	<i>Ot1</i>			48		
	Output terminal 2 (FL) function selection	<i>Ot2</i>			10		
	Commercial power/inverter switching output	<i>CCHC</i>	0: OFF 1: Automatic switching upon trip 2: Switching at commercial power switching frequency setting 3: Switching at commercial power switching frequency setting, automatic switching upon trip	—	0	Gr. St	
	2·3	Commercial power/inverter switching frequency	<i>FCHC</i> *	0~maximum frequency	0.1/0.01Hz	60.0	
		Jump frequency selection	<i>FJ.n</i>	0: Function OFF 1: Function ON	—	0	Gr. SC
	1	Jump frequency #1 Jump frequency band #1 Jump frequency #2 Jump frequency band #2 Jump frequency #3 Jump frequency band #3	<i>FJ1</i> * <i>bFJ1</i> * <i>FJ2</i> * <i>bFJ2</i> * <i>FJ3</i> * <i>bFJ3</i> *	0~maximum frequency 0~30 0~maximum frequency 0~30 0~maximum frequency 0~30	0.1/0.01Hz 0.1/0.01Hz 0.1/0.01Hz 0.1/0.01Hz 0.1/0.01Hz 0.1/0.01Hz	0.0 0.0 0.0 0.0 0.0 0.0	
		Frequency priority selection #1	<i>FC1</i>	1: RR 2: IV 3: RX 4: PG (pulse input setting) 5: BIN (binary or up/down key setting)		1	Gr. SF
		Frequency priority selection #2	<i>FC2</i>	Same as above		2	

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks
Gr.0 Pump	RR input selection	<i>rr in</i>	0: Standard 1: Adjustable	—	1	Gr.SF
	1 RR reference point #1 RR point #1 frequency RR reference point #2 RR point #2 frequency	<i>P1</i> <i>F-P1</i> <i>P2</i> <i>F-P2</i>	0~100 0~maximum frequency 0~100 0~maximum frequency	1% 0.1/0.01Hz 1% 0.1/0.01Hz	0 0.0 100 60.0	
	IV input selection	<i>iv in</i>	0: Standard 1: Adjustable	—	1	Gr.SF
	1 IV reference point #1 IV point #1 frequency IV reference point #2 IV point #2 frequency	<i>P3</i> <i>F-P3</i> <i>P4</i> <i>F-P4</i>	0~100 0~maximum frequency 0~100 0~maximum frequency	1% 0.1/0.01Hz 1% 0.1/0.01Hz	20 0.0 100 60.0	
	Preset speed selection	<i>sr n</i>	0: disabled 1~15: speeds (1~15)	—	0	Gr.SF
	Other than 0 Mode selection	<i>sr n</i>	0: deactivated 1: activated	—	0	
	1st speed	<i>sr 01</i>	Lower limit frequency~upper limit frequency	0.1/0.01Hz	0.0	
	1st speed run mode (Up to 15th speed omitted)	<i>sr n1</i>	0: Acc/dec #1, V/F #1, forward run +1: Reverse run +2: Acc/dec #2 +4: V/F #2		0	
	Emergency stop selection	<i>estp</i>	0: Coast-stop 1: Decelerated stop 2: DC injection stop	—	0	Gr.Pr
	2 ESTOP DC injection time	<i>edbt</i>	0~10	0.1 sec.	0.1	
	Retry selection	<i>rt r y</i>	0: no retry function 1~10: 1~10 times	—	0	Gr.Pr
	Other than 0 Retry time setting	<i>rt t</i>	0.0~10	0.1 sec.	1.0	
	Regeneration power ride-through control	<i>urc</i>	0: OFF 1: ON	—	1	Gr.Pr
	1 Ride-through time	<i>urct</i>	0.0~25	0.1 sec.	2.0	
	Auto-restart (Motor speed search)	<i>ar st</i>	0: OFF 1: On momentary power failure 2: On ST make/break (commercial power switching) 3: Both 1 and 2		3	Gr.Pr
	Motor overload protection level	<i>ol r l</i>	10~100%/A	1%/A	100	Gr.Pr
	OL reduction start-up frequency	<i>ol f</i>	0~30	0.1/0.01Hz	30.0	Gr.Pr
	OL selection	<i>ol n</i>	0: Standard +1: Soft-stall ON +2: OLMt trip OFF	—	0	Gr.Pr
	Stall protection	<i>st c 1</i>	0: ON 1: OFF	—	0	Gr.Pr
	0 Stall protecton level (current limit level adjustment)	<i>st l 1</i>	10~215%/A	1%/A	150	
Low current detection selection (output fault detection)	<i>ll p</i>	0: Trip disabled 1: Trip on detection	—	0	Gr.Pr	
Low current detection level	<i>ll pc</i>	0~100%/A	1%/A	0	Gr.Pr	
Low current detection time	<i>ll pt</i>	0~255	1 sec.	0	Gr.Pr	

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks	
Gr. 01 Pump	Feedback control selection	<i>FbP1</i>	0: No feedback control 1: PID control 2: Speed feedback control	—	0	Gr. Fb	
	1-2 Feedback input signal selection	<i>FbIn</i>	1: RR input 2: IV input 3: RX input 4: PG feedback (option board) 5: RS232C input 6: Communication/12-bin. opt. 7: BIN input	—	2		
	Proportional gain	<i>GP</i>	*	0.01~2.55	0.01	0.30	
	Integral gain	<i>GI</i>	*	0.01~360.0	0.01s	5.00	
	Anti-hunting gain	<i>GA</i>	*	0.0~25.5	0.1s	0.0	
	Lag time constant	<i>GFS</i>	*	0~255	1	80	
	FM terminal function selection	<i>FMSL</i>		0~16 Refer to the standard parameter list for details.	—	0	Gr. AM
Frequency meter adjustment	<i>FN</i>		—	—	—	Gr. AM	
AM terminal function selection	<i>AMS L</i>		0~16 Refer to the standard parameter list for details.		3	Gr. AM	
Ammeter adjustment	<i>AN</i>		—	—	—	Gr. AM	

The pump application data initial settings that differ from standard settings are as follows.

Group	Function	Title	Default	Re- marks
Gr. F	Maximum frequency	<i>FM</i>	60.0	—
	Upper limit frequency	<i>UL</i>	60.0	—
	V/F pattern	<i>Pt</i>	2	—
Gr. St	Output terminal 0 (RCH) function selection	<i>St0</i>	46	Gr. 01
	Output terminal 1 (LOW) function selection	<i>St1</i>	48	Gr. 01
Gr. SF	RR input selection	<i>rrIn</i>	1	Gr. 01
	1 RR point #2 frequency	<i>F-P2</i>	60.0	
	IV input selection	<i>ivIn</i>	1	Gr. 01
	1 IV point #2 frequency	<i>F-P4</i>	60.0	
Gr. Pr	Regeneration power ride-through control	<i>UwC</i>	1	Gr. 01
	Auto restart (Motor speed search)	<i>ArSt</i>	3	Gr. 01
Gr. Ut	Blind function selection	<i>blnd</i>	1	—
	1 Industrial Application Parameters (Pump)	<i>blnd1</i>	1	

Industrial Application Parameters (Fan)

When *Gr.Ut RPL* is set to *2*, *Gr.U*, *Gr.F*, *Gr.O2* and *Gr.Ut* will be available in setting monitor mode, and the initial setting values will change to those for a fan application.

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks	
<i>Gr.O2</i> Fan	Panel feedback control • PID • Speed Feedback • Drooping	<i>PFbC</i>	0: ON 1: OFF	—	0		
	Input terminal selection	<i>It</i>	0: Standard terminal functions 1: Individual selection	—	0	Gr. St	
	1	Input terminal 0 (R) Input terminal 1 (S1) Input terminal 2 (S2) Input terminal 3 (S3) Input terminal 4 (S4) Input terminal 5 (F) Input terminal 6 (RES) Input terminal 7 (ST) Input terminal 8 (S5) Input terminal 9 (S6) Input terminal 10 (S7) Input terminal 11 (potential terminal)	<i>It0</i> * <i>It1</i> * <i>It2</i> * <i>It3</i> * <i>It4</i> * <i>It5</i> * <i>It6</i> * <i>It7</i> * <i>It8</i> * <i>It9</i> * <i>It10</i> * <i>It11</i> *	0~54 Terminal No. : terminal symbol	0: R 1: S1 2: S2 3: S3 4: S4 5: F 6: RES 7: ST 8: S5 9: S6 10: S7 11: Potential terminal	0 1 2 3 4 5 6 7 8 9 10 33	
	Output terminal 0 (RCH) function selection	<i>Ot0</i>	0~63	—	46	Gr. St	
	Output terminal 1 (LOW) function selection	<i>Ot1</i>			48		
	Output terminal 2 (FL) function selection	<i>Ot2</i>			10		
	Commercial power/inverter switching output	<i>CCMG</i>	0: OFF 1: Automatic switching upon trip 2: Switching at commercial power switching frequency setting 3: Switching at commercial power switching frequency setting, automatic switching upon trip	—	0	Gr. St	
	2•3	Commercial power/inverter switching frequency	<i>FCHC</i> *	0~maximum frequency	0.1/0.01Hz	60.0	
		Jump frequency selection	<i>FJ.n</i>	0: Function OFF 1: Function ON	—	0	Gr. SC
	1	Jump frequency #1 Jump frequency band #1 Jump frequency #2 Jump frequency band #2 Jump frequency #3 Jump frequency band #3	<i>FJ1</i> * <i>bFJ1</i> * <i>FJ2</i> * <i>bFJ2</i> * <i>FJ3</i> * <i>bFJ3</i> *	0~maximum frequency 0~30 0~maximum frequency 0~30 0~maximum frequency 0~30	0.1/0.01Hz 0.1/0.01Hz 0.1/0.01Hz 0.1/0.01Hz 0.1/0.01Hz 01/0.01Hz	0.0 0.0 0.0 0.0 0.0 0.0	
		Frequency priority selection #1	<i>FC1</i>	1: RR 2: IV 3: RX 4: PG (pulse input setting) 5: BIN (binary or up/down key setting)		1	Gr. SF
		Frequency priority selection #2	<i>FC2</i>	Same as above		2	Gr. SF

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks
Gr.02 Fan	RR input selection	<i>rr in</i>	0: Standard 1: Adjustable	—	1	Gr.SF
	1 RR reference point #1 RR point #1 frequency RR reference point #2 RR point #2 frequency	<i>P1</i> <i>F-P1</i> <i>P2</i> <i>F-P2</i>	0~100 0~maximum frequency 0~100 0~maximum frequency	1% 0.1/0.01Hz 1% 0.1/0.01Hz	0 0.0 100 60.0	
	IV input selection	<i>lv in</i>	0: Standard 1: Adjustable	—	1	Gr.SF
	1 IV reference point #1 IV point #1 frequency IV reference point #2 IV point #2 frequency	<i>P3</i> <i>F-P3</i> <i>P4</i> <i>F-P4</i>	0~100 0~maximum frequency 0~100 0~maximum frequency	1% 0.1/0.01Hz 1% 0.1/0.01Hz	20 0.0 100 60.0	
	Preset speed selection	<i>Sr.n</i>	0: disabled 1~15: speeds (1~15)	—	0	Gr.SF
	Other than 0 Mode selection	<i>Sr.n</i>	0: deactivated 1: activated	—	0	
	1st speed	<i>Sr.01</i>	Lower limit frequency~upper limit frequency	0.1/0.01Hz	0.0	
	1st speed run mode (Up to 15th speed omitted)	<i>Sr.n1</i>	0: Acc/dec #1, V/F #1, forward run +1: Reverse run +2: Acc/dec #2 +4: V/F #2		0	
	Emergency stop selection	<i>ES&P</i>	0: Coast-stop 1: Decelerated stop 2: DC injection stop	—	0	Gr.Pr
	2 ESTOP DC injection time	<i>Edbt</i>	0~10	0.1 sec.	0.1	
	Retry selection	<i>rt-y</i>	0: no retry function 1~10: 1~10 times	—	0	Gr.Pr
	Other than 0 Retry time setting	<i>rtt</i>	0.0~10	0.1 sec.	1.0	
	Regeneration power ride-through control	<i>Uu&C</i>	0: OFF 1: ON	—	1	Gr.Pr
	1 Ride-through time	<i>Uu&Ct</i>	0.0~25	0.1 sec.	2.0	
	Auto-restart (Motor speed search)	<i>Rr-St</i>	0: OFF 1: On momentary power failure 2: On ST make/break (commercial power switching) 3: Both 1 and 2		3	Gr.Pr
	Motor overload protection level	<i>EMr-1</i>	10~100%/A	1%/A	100	Gr.Pr
	OL reduction start-up frequency	<i>OLF</i>	0~30	0.1/0.01Hz	30.0	Gr.Pr
	OL selection	<i>OLn</i>	0: Standard +1: Soft-stall ON +2: OLMt trip OFF	—	0	Gr.Pr
	Stall protection	<i>St&C1</i>	0: ON 1: OFF	—	0	Gr.Pr
	0 Stall protection level (current limit level adjustment)	<i>St&L1</i>	10~215%/A	1%/A	150	

Group	Function	Title	Adjustment range	Resolution	Default	Remarks
Gr.02 Fan	Feedback control selection	<i>FbP1</i>	0: No feedback control 1: PID control 2: Speed feedback control	—	0	Gr. Fb
	1:2 Feedback input signal selection	<i>FbIn</i>	1: RR input 2: IV input 3: RX input 4: PG feedback (option board) 5: RS232C input 6: Communication/12-bin. opt. 7: BIN input	—	2	
	Proportional gain	<i>GP</i>	0.01~2.55	0.01	0.30	
	Integral gain	<i>GI</i>	0.01~360.0	0.01s	5.0	
	Anti-hunting gain	<i>GA</i>	0.0~25.5	0.1s	0.0	
	Lag time constant	<i>GFS</i>	0~255	1	80	
	FM terminal function selection	<i>FNSL</i>	0~16 Refer to the standard parameter list for details.	—	0	
Frequency meter adjustment	<i>FN</i>	—	—	—	Gr. AM	
AM terminal function selection	<i>ANSL</i>	0~16 Refer to the standard parameter list for details.	—	3	Gr. AM	
Ammeter adjustment	<i>AN</i>	—	—	—	Gr. AM	

The fan application data initial settings that differ from standard settings are as follows.

Group	Function	Title	Default	Remarks
Gr.F	Maximum frequency	<i>FH</i>	60.0	—
	Upper limit frequency	<i>UL</i>	60.0	—
	V/F pattern	<i>Pt</i>	2	—
Gr.St	Output terminal 0 (RCH) function selection	<i>Ot0</i>	46	Gr. 02
	Output terminal 1 (LOW) function selection	<i>Ot1</i>	48	Gr. 02
Gr.SF	RR input	<i>rrIn</i>	1	Gr. 02
	1 RR point #2 frequency	<i>F-P2</i>	60.0	
	IV input	<i>lvIn</i>	1	Gr. 02
	1 IV point #2 frequency	<i>F-P4</i>	60.0	
Gr.Pr	Regeneration power ride-through control	<i>UUC</i>	1	Gr. 02
	Auto-restart (Motor speed search)	<i>ArSt</i>	3	Gr. 02
Gr.Ut	Blind function selection	<i>blnd</i>	1	—
	1 Industrial Application Parameters (Fan)	<i>blO2</i>	1	

Industrial Application Parameters (Conveyor)

When *Gr.Ut RPL* is set to 3, *Gr.U*, *Gr.F*, *Gr.F2*, *Gr.Pt*, *Gr.O3* and *Gr.Ut* will be available in settings monitor mode, and the initial setting values will change to those for a conveyor application.

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks	
<i>Gr.O3</i> Conveyor	Input terminal selection	<i>It</i>	0: Standard terminal functions 1: Individual selection	—	0	Gr. St	
	1	Input terminal 0 (R) Input terminal 1 (S1) Input terminal 2 (S2) Input terminal 3 (S3) Input terminal 4 (S4) Input terminal 5 (F) Input terminal 6 (RES) Input terminal 7 (ST) Input terminal 8 (S5) Input terminal 9 (S6) Input terminal 10 (S7) Input terminal 11 (potential terminal)	<i>It0</i> * <i>It1</i> * <i>It2</i> * <i>It3</i> * <i>It4</i> * <i>It5</i> * <i>It6</i> * <i>It7</i> * <i>It8</i> * <i>It9</i> * <i>It10</i> * <i>It11</i> *	0~54 Terminal No. : terminal symbol	0: R 1: S1 2: S2 3: S3 4: S4 5: F 6: RES 7: ST 8: S5 9: S6 10: S7 11: Potential terminal	0 1 2 3 4 5 6 7 8 9 10 33	
	Output terminal 0 (RCH) function selection	<i>Ot0</i>	0~63	—	6	Gr. St	
	Output terminal 1 (LOW) function selection	<i>Ot1</i>			4		
	Output terminal 2 (FL) function selection	<i>Ot2</i>			10		
	Low speed signal output frequency	<i>LF</i>	0~maximum frequency	0.1/0.01Hz	0.5	Gr. St	
	Start-up frequency	<i>F-St</i>	0.0~10	0.1/0.01Hz	0.5	Gr. SC	
	End frequency	<i>F-En</i>	0.0~30	0.1/0.01Hz	0.5	Gr. SC	
	Frequency priority selection #1	<i>FC1</i>	1: RR 2: IV 3: RX 4: PG (pulse input setting) 5: BIN (binary or up/down key setting)		1	Gr. SF	
	Frequency priority selection #2	<i>FC2</i>	Same as above		3	Gr. SF	
	RR input selection	<i>rr in</i>	0: Standard 1: Adjustable	—	0	Gr. SF	
	1	RR reference point #1 RR point #1 frequency RR reference point #2 RR point #2 frequency	<i>P1</i> * <i>F-P1</i> * <i>P2</i> * <i>F-P2</i> *	0~100 0~maximum frequency 0~100 0~maximum frequency	1% 0.1/0.01Hz 1% 0.1/0.01Hz	0 0.0 100 80.0	
	RX input selection	<i>re in</i>	0: Standard 1: Adjustable	—	0	Gr. SF	
	1	RX reference point #1 RX point #1 frequency RX reference point #2 RX point #2 frequency	<i>PS</i> * <i>F-PS</i> * <i>PS</i> * <i>F-PS</i> *	-100~100 -Maximum frequency~ maximum frequency -100~100 -Maximum frequency~ maximum frequency	1% 01/0.02Hz 1% 0.1/0.02Hz	0 0.0 100 80.0	
	Preset speed selection	<i>sr.n</i>	0: disabled 1~15: speeds (1~15)	—	0	Gr. SF	
	Other than 0	Mode selection	<i>sr.n</i>	0: deactivated 1: activated	—	0	

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks	
Gr.03 Conveyor	Other than 0	1st speed	<i>Sr01</i>	Lower limit frequency~upper limit frequency	0.1/0.01Hz	0.0	
		1st speed run mode	<i>Sr01</i>	0: Acc/dec #1, V/F #1, forward run +1: Reverse run +2: Acc/dec #2 +4: V/F #2		0	
		(Up to 15th speed omitted)					
		Dynamic braking selection (DBR)	<i>Pb</i>	0: No DBR 1: With DBR, no OLr detection 2: With DBR and OLr detection	—	Depends on inverter rating	Gr.Pr
		Overvoltage stall protection	<i>OPSS</i>	0: ON 1: OFF	—	0	Gr.Pr
		DC injection starting frequency	<i>dbF</i>	0~120	0.1/0.01Hz	0.0	Gr.Pr
	Other than 0	DC injection current	<i>dbC</i>	0~100%/A	1%/A	0	
		DC injection time	<i>dbt</i>	0~10	0.1 sec.	0.0	
		Forward/reverse DC injection priority control	<i>dbSL</i>	0: OFF 1: ON	—	0	Gr.Pr
		Motor shaft stationary control	<i>db In</i>	0: OFF 1: ON	—	0	Gr.Pr
		Emergency stop selection	<i>EStP</i>	0: Coast-stop 1: Decelerated stop 2: DC injection stop	—	0	Gr.Pr
	2	ESTOP DC injection time	<i>Edbt</i>	0~10	0.1 sec.	0.1	
		Motor overload protection level	<i>OLr 1</i>	10~100%/A	1%/A	100	Gr.Pr
		OL reduction start-up frequency	<i>OLF</i>	0~30	0.1/0.01Hz	30.0	Gr.Pr
		OL selection	<i>OLN</i>	0: Standard +1: Soft-stall ON +2: OLMT trip OFF	—	0	Gr.Pr
		Stall protection	<i>StC 1</i>	0: ON 1: OFF	—	0	Gr.Pr
	0	Stall protection level (current limit level adjustment)	<i>StL 1</i>	10~215%/A	1%/A	150	
		Output short-circuit detection selection (OCL)	<i>OCLS</i>	0: Standard +1: High-speed motor use +2: Positioning use (during JOG)	—	0	Gr.Pr
		Overtorque trip selection	<i>OtSL</i>	0: Trip disabled 1: Trip enabled	—	0	Gr.Pr
		Overtorque trip level	<i>OtL</i>	0~200%/A	1%/A	150	Gr.Pr
	Fault trip saving	<i>trCL</i>	0: Cleared when powered OFF 1: Data retained when powered OFF	—	0	Gr.Pr	
	Feedback control selection	<i>FbP 1</i>	0: No feedback control 1: PID control 2: Speed feedback control	—	0	Gr.Fb	
1-2	Feedback input signal selection	<i>Fb In</i>	1: RR input 2: IV input 3: RX input 4: PG feedback (option board) 5: RS232C input 6: Communication/12-bit bin. opt. 7: BIN input	—	2		
	Proportional gain	<i>GP</i>	0.01~2.55	0.01	0.30		
	Integral gain	<i>GI</i>	0.01~360.0	0.01s	5.0		

Group	Function	Title	Adjustment range	Resolution	Default	Remarks	
Gr.03 Conveyor	1-2	Anti-hunting gain	GA	0.0~25.5	0.1s	0.0	
		Lag time constant	GFS	0~255	1	80	
		PG input-number of pulses	PG	1~9999	1	500	Gr. Fb
		PG input-number of phases	PGPH	1: Single-phase input 2: Two-phase input	—	2	Gr. Fb
		FM terminal function selection	FNSL	0~16 Refer to the standard parameter list for details.	—	0	Gr. AM
		Frequency meter adjustment	FN	—	—	—	Gr. AM
		AM terminal function selection	ANSL	0~16 Refer to the standard parameter list for details.	—	3	Gr. AM
		Ammeter adjustment	AN	—	—	—	Gr. AM
		Number of motor poles	NEP	2, 4, 6, 8, 10, 12, 14, 16	2	4	Gr. Mt
		Motor rated capacity	NEC	0.1~999.9	0.1kW	(Note1)	Gr. Mt
		Motor type	NET	0: Toshiba standard motor 1: Toshiba VF motor 2: Other	—	0	Gr. Mt
	2	Rated voltage	NEU	90~600	5V	200/400	
		Rated frequency	NEF	0~400	2Hz	60	
		Rated RPM	NER	0~9999	1RPM	1710	
		Auto-tuning	NETn	0: Auto-tuning disabled 1: Auto-tuning enabled	—	0	
		Load moment of inertia	NEIH	0: Small 1: Medium 2: Large 3: Very large	—	1	Gr. Mt

(Note 1) Same as inverter capacity

The conveyor application data initial settings that differ from standard settings are as follows.

Group	Function	Title	Default	Remarks
Gr.F	Acc/Dec #1 pattern	SCU1	2	—
Gr.St	Low-speed signal output frequency	LF	0.5	Gr. 03
Gr.SC	Start-up frequency	F-St	0.5	Gr. 03
	End frequency	F-En	0.5	Gr. 03
Gr.SF	Frequency priority selection #2	FC2	3	Gr. 03
Gr.Ut	Blind function selection	blnd	1	—
	1	Fundamental parameters #2	BLF2	1
		Pattern run parameters	BLPE	1
		Industrial Application Parameters (Conveyor)	BLD3	1

Industrial Application Parameters (Hoist)

When *Gr.Ut RPL* is set to 4, *Gr.U*, *Gr.F*, *Gr.F2*, *Gr.O4* and *Gr.Ut* will be available in settings monitor mode, and the initial setting values will change to those for a hoist application.

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks
<i>Gr.O4</i> Hoist	Input terminal selection	<i>It</i>	0: Standard terminal functions 1: Individual selection	—	0	Gr. St
	1 Input terminal 0 (R) Input terminal 1 (S1) Input terminal 2 (S2) Input terminal 3 (S3) Input terminal 4 (S4) Input terminal 5 (F) Input terminal 6 (RES) Input terminal 7 (ST) Input terminal 8 (S5) Input terminal 9 (S6) Input terminal 10 (S7) Input terminal 11 (potential terminal)	<i>It0</i> * <i>It1</i> * <i>It2</i> * <i>It3</i> * <i>It4</i> * <i>It5</i> * <i>It6</i> * <i>It7</i> * <i>It8</i> * <i>It9</i> * <i>It10</i> * <i>It11</i> *	0~54 Terminal No. : terminal symbol	0: R 1: S1 2: S2 3: S3 4: S4 5: F 6: RES 7: ST 8: S5 9: S6 10: S7 11: Potential terminal	0 1 2 3 4 5 6 7 8 9 10 33	
	Output terminal 0 (RCH) function selection	<i>Ot0</i>	0~63	—	6	Gr. St
	Output terminal 1 (LOW) function selection	<i>Ot1</i>			4	
	Output terminal 2 (FL) function selection	<i>Ot2</i>			10	
	Low-speed signal output frequency	<i>LF</i>	0~maximum frequency	0.1/0.01Hz	0.5	Gr. St
	Start-up frequency	<i>F-St</i>	0.0~10	0.1/0.01Hz	0.5	Gr. SC
	End frequency	<i>F-En</i>	0.0~30	0.1/0.01Hz	0.5	Gr. SC
	Frequency priority selection #1	<i>FC1</i>	1: RR 2: IV 3: RX 4: PG (pulse input setting) 5: BIN (binary or up/down key setting)		1	Gr. SF
	Frequency priority selection #2	<i>FC2</i>	Same as above		2	Gr. SF
	RR input selection	<i>rr In</i>	0: Standard 1: Adjustable	—	0	Gr. SF
	1 RR reference point #1 RR point #1 frequency RR reference point #2 RR point #2 frequency	<i>P1</i> * <i>F-P1</i> * <i>P2</i> * <i>F-P2</i> *	0~100 0~maximum frequency 0~100 0~maximum frequency	1% 0.1/0.01Hz 1% 0.1/0.01Hz	0 0.0 100 80.0	
	Preset speed selection	<i>Sr.n</i>	0: disabled 1~15: speed (1~15)	—	0	Gr. SF
Other than 0	Mode selection	<i>Sr.n</i> *	0: deactivated 1: activated	—	0	
	1st speed	<i>Sr01</i> *	Lower limit frequency~upper limit frequency	01/0.01Hz	0.0	
	1st speed run mode	<i>Sr.n1</i> *	0: Acc/dec #1, V/F #1, forward run +1: Reverse run +2: Acc/dec #2 +4: V/F #2		0	
	(Up to 15th speed omitted)					

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks
Gr. 04 Hoist	Dynamic braking selection (DBR)	Pb	0: No DBR 1: With DBR, no OLr detection 2: With DBR, and OLr detection	—	Depends on inverter rating	Gr. Pr
	Overvoltage stall protection	OPSS	0: ON 1: OFF	—	0	Gr. Pr
	DC injection starting frequency	dbF	0~120	0.1/0.01Hz	0.0	Gr. Pr
	Other than DC injection time	dbC dbt	0~100%/A 0~10	1%/A 0.1 sec.	0 0.0	
	Forward/reverse DC injection priority control	dbSL	0: OFF 1: ON	—	1	Gr. Pr
	Emergency stop selection	ESbP	0: Coast-stop 1: Decelerated stop 2: DC injection stop	—	0	Gr. Pr
	2 ESTOP DC injection time	Edbt	0~10 sec.	0.1 sec.	0.1	
	Motor overload protection level	bMr 1	10~100%/A	1%/A	100	Gr. Pr
	OL reduction start-up frequency	OLF	0~30	0.1/0.01Hz	30.0	Gr. Pr
	OL selection	OLN	0: Standard +1: Soft-stall ON +2: OLMt trip OFF	—	0	Gr. Pr
	Stall protection	StC 1	0: ON 1: OFF	—	0	Gr. Pr
	0 Stall protection level (current limit level adjustment)	StL 1	10~215%/A	1%/A	150	
	Output short-circuit detection selection (OCL)	OCLS	0: Standard +1: High-speed motor use +2: Positioning use (during JOG)	—	0	Gr. Pr
	Fault trip saving	b-rCL	0: Cleared when powerd OFF 1: Data retained when powered OFF	—	0	Gr. Pr
	FM terminal function selection	FMSL	0~16 Refer to the standard parameter list for details.	—	0	Gr. AM
	Frequency meter adjustment	FN	—	—	—	Gr. AM
	AM terminal function selection	AMS L	0~16 Refer to the standard parameter list for details.	—	3	Gr. AM
	Ammeter adjustment	AN	—	—	—	Gr. AM
	Number of motor poles	nE.P	2, 4, 6, 8, 10, 12, 14, 16	2	4	Gr. Mt
	Motor rated capacity	nE.C	0.1~999.9	0.1kW	(Note 1)	Gr. Mt
	Motor type	nE.t	0: Toshiba standard motor 1: Toshiba VF motor 2: Other	—	0	Gr. Mt
	2 Rated voltage	nE.v	90~600	5V	200/400	
	Rated frequency	nE.F	0~400	2Hz	60	
Rated RPM	nE.r	0~9999	1RPM	1710		
Auto-tuning	nE.tn	0: Aut-tuning disabled 1: Aut-tuning enabled	—	0		
Load moment of inertia	nE. IH	0~3	—	1	Gr. Mt	

(Note 1) Same as inverter capacity

The hoist application data initial settings that differ from standard settings are as follows.

Group	Function	Title	Default	Re- marks
Gr.St	Low-speed signal output frequency	LF	0.5	Gr.04
Gr.Sc	Start-up frequency	F-St	0.5	Gr.04
	End frequency	F-En	0.5	Gr.04
Gr.Pr	Forward/reverse DC injection priority control	dbSL	1	Gr.04
Gr.Ut	Blind function selection	bLnd	1	—
	1 Fundamental parameters #2	bLF2	1	
	Industrial Application Parameters (Hoist)	bL04	1	

Industrial Application Parameters (Textiles)

When *Gr.Ut RPL* is set to *S*, *Gr.U*, *Gr.F*, *Gr.OS* and *Gr.Ut* will be available in settings monitor mode, and the initial setting values will change to those for a textiles application.

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks
<i>Gr.OS</i> Textiles	Input terminal selection	<i>It</i>	0: Standard terminal functions 1: Individual selection	—	0	Gr. St
	1 Input terminal 0 (R) Input terminal 1 (S1) Input terminal 2 (S2) Input terminal 3 (S3) Input terminal 4 (S4) Input terminal 5 (F) Input terminal 6 (RES) Input terminal 7 (ST) Input terminal 8 (S5) Input terminal 9 (S6) Input terminal 10 (S7) Input terminal 11 (potential terminal)	<i>It 0</i> <i>It 1</i> <i>It 2</i> <i>It 3</i> <i>It 4</i> <i>It 5</i> <i>It 6</i> <i>It 7</i> <i>It 8</i> <i>It 9</i> <i>It 10</i> <i>It 11</i>	0~54 Terminal No. : terminal symbol	0: R 1: S1 2: S2 3: S3 4: S4 5: F 6: RES 7: ST 8: S5 9: S6 10: S7 11: Potential terminal	0 1 2 3 4 5 6 7 8 9 10 33	
	Output terminal 0 (RCH) function selection	<i>Ot 0</i>	0~63	—	6	Gr. St
	Output terminal 1 (LOW) function selection	<i>Ot 1</i>			4	
	Output terminal 2 (FL) function selection	<i>Ot 2</i>			10	
	Low speed signal output frequency	<i>LF</i>	0~maximum frequency	0.1/0.01Hz	0.0	Gr. St
	Frequency priority selection #1	<i>FC 1</i>	1: RR 2: IV 3: RX 4: PG (pulse input setting) 5: BIN (binary or up/down key setting)		1	Gr. SF
	Frequency priority selection #2	<i>FC 2</i>	Same as above		2	Gr. SF
	RR input selection	<i>rr in</i>	0: Standard 1: Adjustable	—	0	Gr. SF
	1 RR reference point #1 RR point #1 frequency RR reference point #2 RR point #2 frequency	<i>P 1</i> <i>F-P 1</i> <i>P 2</i> <i>F-P 2</i>	0~100 0~maximum frequency 0~100 0~maximum frequency	1% 0.1/0.01Hz 1% 0.1/0.01Hz	0 0.0 100 80.0	
	Preset speed selection	<i>Sr.n</i>	0: disabled 1~15: speeds (1~15)	—	0	Gr. SF
	Other than 0 Mode selection	<i>Sr.n</i>	0: deactivated 1: activated	—	0	
	1st speed	<i>Sr-0 1</i>	Lower limit frequency~upper limit frequency	01/0.01Hz	0.0	
	1st speed run mode	<i>Sr-n 1</i>	0: Acc/dec #1, V/F #1, forward run +1: Reverse run +2: Acc/dec #2 +4: V/F #2		0	
	(Up to 15th speed omitted)					

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks
Gr.05 Textiles	Emergency stop selection	<i>ESLP</i>	0: Coast-stop 1: Decelerated stop 2: DC injection stop	—	0	Gr. Pr
	2 ESTOP DC injection time	<i>Edbt</i>	0~10	0.1 sec.	0.1	
	Motor overload protection level	<i>EMr 1</i>	10~100%/A	1%/A	100	Gr. Pr
	OL reduction start-up frequency	<i>OLF</i>	0~30	0.1/0.01Hz	30.0	Gr. Pr
	OL selection	<i>OLN</i>	0: Standard +1: Sofr-stall ON +2: OLMt trip OFF	—	0	Gr. Pr
	Stall protection	<i>StC 1</i>	0: ON 1: OFF	—	1	Gr. Pr
	0 Stall protection level (current limit level adjustment)	<i>StL 1</i>	10~215%/A	1%/A	215	
	Fault trip saving	<i>ErCL</i>	0: Cleared when powered OFF 1: Data retained when powered OFF	—	0	Gr. Pr
	FM terminal function selection	<i>FNSL</i>	0~16 Refer to the standard parameter list for details.	—	0	Gr. AM
	Frequency meter adjustment	<i>FN</i>	—	—	—	Gr. AM
	AM terminal function selection	<i>ANSL</i>	0~16 Refer to the standard parameter list for details.	—	3	Gr. AM
Ammeter adjustment	<i>AN</i>	—	—	—	Gr. AM	

The textiles application data initial settings that differ from standard settings are as follows.

Group	Function	Title	Default	Re- marks
Gr.Pr	Stall protection	<i>StC 1</i>	1	Gr. 05
	0 Stall protection level	<i>StL 1</i>	215	
Gr. Ut	Blind function selection	<i>blnd</i>	1	—
	1 Industrial Application Parameters (Textiles)	<i>bl05</i>	1	

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks	
Gr.06 Machine tools	Dyanmic braking selection (DBR)	Pb	0: No DBR 1: With DBR, no OLR detection 2: With DBR, and OLR detection	—	Depends on inverter rating	Gr.Pr	
	Overvoltage stall protection	OPSS	0: ON 1: OFF	—	0	Gr.Pr	
	DC injection starting frequency	dbf	0~120	0.1/0.01 Hz	0.0	Gr.Pr	
	Other than 0	DC injection current DC injection time	dbc dbt	0~100%/A 0~10	1%/A 0.1 sec.	0 0.0	Gr.Pr
	Motor shaft stationary control	db in	0: OFF 1: ON	—	0	Gr.Pr	
	Emergency stop selection	ESbP	0: Coast-stop 1: Decelerated stop 2: DC injection stop	—	0	Gr.Pr	
	2	ESTOP DC injection time	Edbt	0~10	0.1 sec.	0.1	
	Motor overload protection level	OLr l	10~100%/A	1%/A	100	Gr.Pr	
	OL reduction start-up frequency	OLF	0~30	0.1/0.01 Hz	30.0	Gr.Pr	
	OL selection	OLn	0: Standard +1: Soft-stall ON +2: OLMt trip OFF	—	0	Gr.Pr	
	Stall protection	StC l	0: ON 1: OFF	—	0	Gr.Pr	
	0	Stall protection level (current limit level adjustment)	StL l	10~215%/A	1%/A	215	
	Low current detection selection (output fault detection)	LLP	0: Trip disabled 1: Trip on detection	—	0	Gr.Pr	
	Low current detection level	LLPC	0~100%/A	1%/A	0	Gr.Pr	
	Low current detection time	LLPt	0~255	1 sec.	0	Gr.Pr	
	Output short-circuit detection selection (OCL)	OCLS	0: Standard +1: High-speed motor use +2: Positioning use (during JOG)	—	0	Gr.Pr	
	Overtorque trip selection	OtSL	0: Trip disabled 1: Trip enabled	—	0	Gr.Pr	
	Overtorque trip level	OtL	0~200%/A	1%/A	150	Gr.Pr	
	Fault trip saving	trCL	0: Cleared with powered OFF 1: Data retained when powered OFF	—	0	Gr.Pr	
	Override control	Or-d 1	0: OFF 1: FCRR 2: FCIV 3: FCRX 4: FCPG 5: FCPNL 6: FCOPT 7: FCMLT	—	0	Gr.Fb	
7	Override change amount setting	Or-d 2	0: Reference 1: KRR 2: KIV 3: KRX 4: KBIN	—	0		
	Override change amount	Or-d 3	-100.0~100.0%	0.1%	0.0		

Group	Function	Title	Adjustment range	Resolution	Default	Re- marks
Gr.05 Machine tools	FM terminal function selection	<i>FNSL</i>	0~16 Refer to the standard parameter list for details.	—	0	Gr. AM
	Frequency meter adjustment	<i>FN</i>	—	—	—	Gr. AM
	AM terminal function selection	<i>ANSL</i>	0~16 Refer to the standard parameter list for details.	—	3	Gr. AM
	Ammeter adjustment	<i>AN</i>	—	—	—	Gr. AM

The machine tools application data initial settings that differ from standard settings are as follows.

Group	Function	Title	Default	Re- marks
Gr.F	Acc/Dec #1 pattern	<i>SCU1</i>	3	—
Gr.Pr	0 Stall protection level	<i>SEL1</i>	215	Gr. 05
Gr. Ut	Blind function selection	<i>BLnd</i>	1	—
	1 Industrial Application Parameters (Machine tools)	<i>BL05</i>	1	

TOSHIBA INDUSTRIAL PRODUCTS MANUFACTURING CORPORATION
